

BMW X5 4x4 2007-2018

7 seats – 3rd Row folded and not usable

OUR REF: H0446

- ☐ Cargo Liner packing instructions
2 x 430mm long cut lengths of 20mm wide self-adhesive loop fastener
16 x self-adhesive loop fastener pads
- ☐ Liftgate Cover
50 x self-adhesive loop fastener pads
(UPPER x 25 + LOWER x 25)



Photo A

IMPORTANT PREPARATION

To ensure a good bond: when using the self-adhesive hook & loop fasteners to attach the cargo liner to the plastic (NOT the carpet), it is most important to remove the silicone film from the vehicle trim. Silicone is applied during manufacture and can also be found in many detailing products. It is highly likely there will be a build-up of silicone.

Before applying any self-adhesive fastener pads, the surface **MUST** be thoroughly cleaned using a silicone remover. (The fasteners cannot be used once it has been in contact with silicone) We recommend Intensive Tar Remover made by AutoGlym. Wipe off thoroughly any residue with a separate clean dry cloth.

NOTE: The adhesive takes 24hrs to reach full adhesion – do not disturb during this time. In cold weather we advise you install the liner in a warm environment (i.e. run the car till the interior is warm)

PREPARATION

- Remove the retractable cargo cover. This can be replaced carefully once the cargo liner has been installed.
- Ensure the third-row seats are folded flat into the floor.
- Slide the 2nd row seats slightly forward to the front of the car.

INSTALLATION

BASE:

- **Photo A.** Starting at the liftgate end install the pocket over the drop-down liftgate.
- Position the base of the liner snugly into place.
- **Photo B.** Attach the two ties to the corresponding 3rd row headrest posts.
- Carefully slide the 2nd row seats as far back to the liftgate as possible.
- Ensure the upper parts of the rear seats are set to the middle rake.

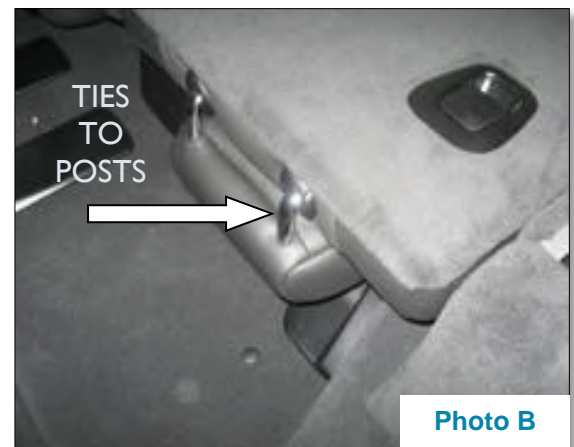


Photo B

FRONT PANEL:

- Pass the fastener straps around the headrest posts and fasten close to the liner.
- Use the self-adhesive loop fasteners to attach the hook fastener to the plastic moldings on the seats.

REAR PLUS

Please note on REAR PLUS version liners – you will need to unfasten the headrest straps before you attempt to fold your 2nd row seats flat!

SIDE PANELS:

- Position the side panels snugly into place.
- Use the self-adhesive loop fastener to attach the sides to the plastic panels.
- Photo C. Attach the two hook fastener tabs to the plastic moldings that take the load cover cassette, using the self-adhesive loop fastener pads – trim excess.

OPTIONAL EXTRAS

LIFTGATE COVER

Photo D+E Use the self-adhesive loop fastener to attach the cover to the plastic panels. (Applies to both upper and lower covers)

