

## SMART FOR TWO 2008-2016 (451 - Coupe + Cabriolet)

Standard cargo liner + Bumper Flap

### PACKING REQUIREMENTS

- ☐ 1.2 m of 30mm wide self-adhesive loop fastener.




### VERY IMPORTANT PREPARATION

To ensure a good bond, when using the self-adhesive loop fastener to attach the cargo liner to the plastic / metal trim (**Not** the carpet); it is most important to remove silicone film from the vehicle trim. Silicone is applied during manufacture and can also be found in many detailing products. It is **highly likely there will be a build-up of silicone**. Before applying any loop fastener pads, the surface **MUST be thoroughly** cleaned using a silicone remover. (The loop fastener cannot be used once it has been in contact with silicone). We recommend Intensive Tar Remover made by AutoGlym. Wipe off thoroughly **any residue with a separate clean dry cloth**.

Unfortunately, we are unable to supply this product, as it cannot be transported via our postal carrier.

**NOTE:** the adhesive takes 24hrs to reach full adhesion – do not disturb during.

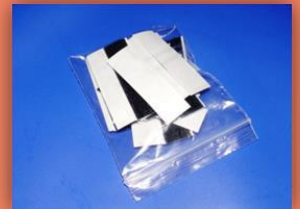

### PREPARATION

#### Luggage Compartment Cover

- Prior to installation you will need to remove the "Luggage Compartment Cover"
- It cannot be replaced once the Cargo liner is fitted.



#### Luggage Compartment Management System

Should you wish to use this accessory notify us at point of order.

We will manufacture your Cargo liner with additional loop fastener sewn to the base panel. This will allow you to re-attach the slot-in sections.



## INSTALLATION

(Please note: these photos are not specific to your vehicle)

### BASE

- Carefully position the base panel snugly into place. Start at the liftgate end.
- The hook fastener on the back side of the panel attach directly to the carpet.




### FRONT

- Pass each of the two elastic loops over the roof hooks.



### SIDES

- Use the self-adhesive loop fastener to attach the side to the plastic trim.
- We supply a minimum of 1.2m of "uncut" loop fastener that should be matched with the hook fastener on the liner at the load area sides.

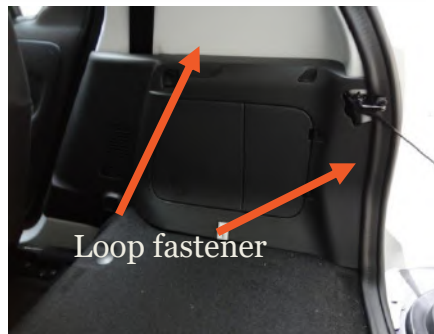

### BUMPER FLAP

- Install Cargo liner
- Attach the Bumper Flap to the loop fastener strip located at the base of the Cargo liner.
- The Bumper Flap either folds into the vehicle OR can be detached and stored elsewhere when you close the liftgate.

