

FORD FOCUS HATCH - 2012-2018

HIGH (FULL SPARE) / MID (SPACE SAVER) / LOW (NO SPARE)

Our ref: H0540 HIGH/MID /LOW

PACKAGING REQUIREMENTS.

CARGO LINER

- 7 x tabs self-adhesive loop fastener

LIFTGATE COVER


- 20x tabs self-adhesive loop fastener



VERY IMPORTANT PREPARATION

To ensure a good bond, when using the self-adhesive hook & loop fastener to attach the cover to the plastic trim it is most important to remove silicone film from the vehicle trim. Silicone is applied during manufacture and can also be found in many detailing products. It is **highly likely there will be a build-up of silicone**. Before applying any self-adhesive fastener pads, the surface **MUST be thoroughly** cleaned using a silicone remover. (The fasteners cannot be used once it has been in contact with silicone). We recommend Intensive Tar Remover made by AutoGlym. Wipe off thoroughly **any residue with a separate clean dry cloth**.

NOTE: the adhesive takes 24hrs to reach full adhesion – do not touch during.

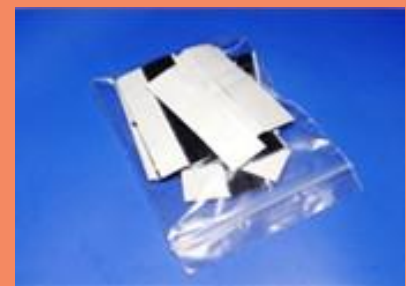


STEP I. PREPERATIONS

- Remove the cargo cover. It may be replaced later.
- Unfold the Hatchbag and place in the vehicle so that the base fits snugly in position. The panel with the Hatchbag label sits against the back of the rear seat.

Please note: not all of the photographs are specific to your vehicle

STEP 2. INSTALLING THE BASE

- Position the base snugly into place. Start behind the back of the rear seats
- The hook fasteners welded to the reverse face of the liner will attach directly to the carpet panels.
- Attach 7 tabs of self adhesive fastener tabs onto the plastic surface next to cargo area lock in line with the hook fastener welds on the cargo liner underside
(Image A) clean surface thoroughly before applying the tabs

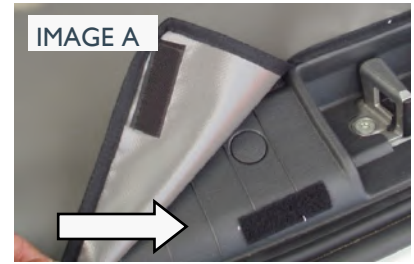

STEP 3. INSTALLING THE FRONT

- Hook & loop fastener straps align to headrests.
- Pass around each post and fasten back onto themselves. *(Image B)*
- The hook fasteners on the back side of the liner attach directly to the carpeted panels.



REAR PLUS VERSIONS

You **MUST** unfasten the hook & loop fastener and the headrest straps before you recline the upper parts of the rear seats. *(Please refer to REAR PLUS options on website to see detailed photo)*

STEP 4. INSTALLING THE SIDES -

- Carefully position the side panels snugly into place.
- The hook fasteners on at the back side of the liner attach directly to the carpet panels. *(Image C)*



OPTIONAL EXTRAS

Please note: the following photos are not specific to your vehicle

STEP 5A. LIFTGATE COVER

- Line up the liftgate cover with the liftgate and clean the areas where the self-adhesive fastener tabs will be stuck. **(Image 1)**
- Use the self-adhesive loop fastener tabs to attach the cover to the plastic trim.



STEP 5B. BUMPER FLAP

- Install Cargo liner
- Attach the Bumper Flap to the fastener strip located at the base of the cargo liner.
- The Bumper Flap is one standard length for all models. Trim the length to suit your requirements. Ensure you do not cut through the stitching.
- The Bumper Flap either folds into the vehicle OR can be detached and stored elsewhere when you close the liftgate.



OPTIONAL EXTRAS page 2

Please note the following photos are not specific to your vehicle

STEP 5C. CARGO LINER EXTENSION

The Cargo Liner Extension provides superior protection to the rear seats when purchased with a REAR PLUS option.

- The Cargo Liner Extension is designed to attach to a Rear Plus version liner.
- It provides additional protection to the back of the front seats and the extended floor area when the rear seats are folded flat.
- It does not offer full protection to the rear doors



STEP 5D. FREQUENT USE INSTALLATION KIT

- If you frequently remove/install your Cargo Liner from/to your vehicle please note that the carpet will “fluff” up. We offer an alternative Frequent Use Installation Kit

The Frequent Use Installation Kit is available to buy from our online store. Simply add it to your order from the store.

