

## BMW 3-SERIES WAGON

2014-2019

Our Ref: H0545

Packing requirements



### CARGO LINER

- 8 x self-adhesive loop fastener pads
- 4 x ref: 124 (hook + loop fastener @160mm long)
- 1300mm length of 30mm wide self-adhesive loop fastener



### LIFTGATE COVER

- 16 x self-adhesive loop fastener pads



REF: 124



Photo shows "Rear Plus with Seat Split, prepared for a Bumper Flap"

## VERY IMPORTANT PREPARATION

To ensure a good bond, when using the self-adhesive hook & loop fasteners to attach the cargo liner to the plastic / metal trim (**Not** the carpet); it is most important to remove silicone film from the vehicle trim. Silicone is applied during manufacture and can also be found in many detailing products. It is **highly likely there will be a build-up of silicone**. Before applying any self-adhesive fastener pads, the surface **MUST be thoroughly** cleaned using a silicone remover. (The fasteners cannot be used once it has been in contact with silicone). We recommend Intensive Tar Remover made by AutoGlym. Wipe off thoroughly **any residue with a separate clean dry cloth**.

Unfortunately, we are unable to supply this product, as it cannot be transported via our postal carrier.

**NOTE:** the adhesive takes 24hrs to reach full adhesion – do not touch during.



## PREPARATION

- Remove the Net Cassette and retractable Cargo Cover. They may be replaced later.
- Recline rear seats.
- Unfold the Hatchbag and place in the vehicle so that the base fits snugly in position. The panel with the Hatchbag label sits against the back of the rear seat.

## INSTALLATION



### BASE

Position the base of the liner snugly into place.

### Photo A+ B

Familiarize yourself with the position of the 8 hook fastener welds on the back side of the liner at the liftgate end.

- Photo A:  
Lift up the false floor. Attach the 4 ref: 124 hook / loop fastener tabs to the plastic ledge using the 8 self-adhesive loop fastener tabs – see photo to identify the ledge.
- Photo B:  
The tabs will protrude out of the floor panel when its replaced allowing the liner to be fastened to them.

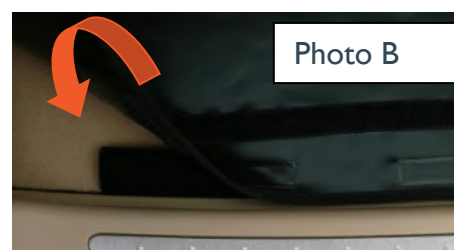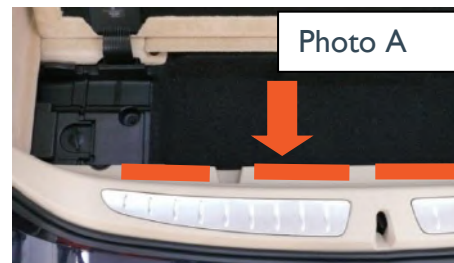

*(Please note: this photo is not specific to your car)*

## BASE cont....

- Push the two foam tabs down into the void between the rear seat and the floor of the cargo area.
- Re-lock the upper parts of the rear seats, trapping the foam securely.



## FRONT

- Pass each of the corresponding hook & loop fastener straps around each headrest post, and firmly fasten back upon themselves.



## REAR PLUS VERSIONS

- **YOU MUST UNFASTEN THE HEADREST STRAPS BEFORE YOU RECLINE THE UPPER PARTS OF THE REAR SEATS**  
*(Please refer to REAR PLUS options on website to see detailed photo's)*



## SIDES

- Use the long length of self-adhesive loop fastener to attach the side panels to the plastic trim above and to the side of the carpet.
- You will need to snip the fastener strip around the curved section.
- Both the Net Cassette and Retractable Cargo Cover can be carefully replaced / removed.



Side attached to the loop fastener



Net Cassette +  
Retractable Cargo  
Cover replaced



# Optional extras

## BUMPER FLAP

- Install Cargo Liner
- Attach the Bumper Flap to the loop fastener strip that located at the base of the cargo liner.
- The Bumper Flap either folds into the vehicle OR can be detached and stored elsewhere when you close the liftgate.
- Please note that the edges of the fabric are not bound so that any mud, dirt or water can run off.



## LIFTGATE COVER

- Use the self-adhesive loop fastener tabs to attach the cover to the plastic trim.

