

## Audi A7 \ S7 \ RS7 2012-2018

Our ref: H0546

Packing requirements

- CARGO LINER
  - 800mm cut length of 30mm wide self-adhesive loop fasteners
- LIFTGATE COVER
  - Minimum of 18 Self-adhesive loop fastener tabs



### VERY IMPORTANT PREPARATION

To ensure a good bond, when using the self-adhesive fasteners to attach the cargo liner to the plastic / metal trim (**Not** the carpet); it is most important to remove silicone film from the vehicle trim. Silicone is applied during manufacture and can also be found in many detailing products. It is **highly likely there will be a build-up of silicone**. Before applying any self-adhesive fastener pads, the surface **MUST be thoroughly** cleaned using a silicone remover. (The fasteners cannot be used once they have been in contact with silicone). We recommend Intensive Tar Remover made by AutoGlym. Wipe off thoroughly **any residue with a separate clean dry cloth**.

**NOTE:** the adhesive takes 24hrs to reach full adhesion – do not disturb during.



### PREPARATION

- Unfold the Hatchbag and place in the vehicle so that the base fits snugly in position. The panel with the Hatchbag label sits against the back of the rear seat.

*Please note: not all the photographs are specific to your vehicle*

#### BASE

- Position the base snugly into place. Start at the liftgate end.
- The hook fastener welded to the back side of the liner attaches directly to the carpet panels in the floor.



#### BACK

- Cut the long length of self-adhesive loop fastener to fit and apply to the chrome liftgate plate.  
Tip: lift the rubber seal, part of the fastener can sit under it.



## INSTALLING THE FRONT

- Hook & loop fastener straps align to headrests.
- Pass around each post and fasten back onto themselves.
- The hook fastener on the back side of the liner attaches directly to the carpet panels.



## REAR PLUS VERSIONS

- **YOU MUST UNFASTEN THE HOOK & LOOP FASTENER AND THE HEADREST STRAPS BEFORE YOU RECLINE THE UPPER PARTS OF THE REAR SEATS** (Please refer to REAR PLUS options on website to see detailed photo)

## SIDES

- Carefully position the side panels snugly into place.
- The hook fastener welded to the back side of the liner attaches directly to the carpet panels.



## Optional extras

### FREQUENT USE INSTALLATION KIT

If you frequently remove/install your Cargo Liner from/to your vehicle, please note that the carpet will “fluff” up – we offer an alternative Frequent Use Installation Kit.



The Frequent Use Installation Kit is available from our online store. Simply add it to your order from the store.



*Please note: not all the photographs are specific to your vehicle*

### LIFTGATE COVER

- Use the self-adhesive loop fastener tabs to attach the cover to the plastic trim.
- If you wish to replace the Audi Cargo Cover, you will need to cut two appropriate holes in the Liftgate Cover. The PVC fabric does not fray – BUT ensure you do NOT cut through the “tape/stitching”

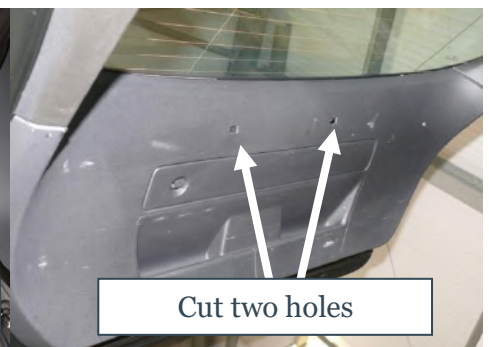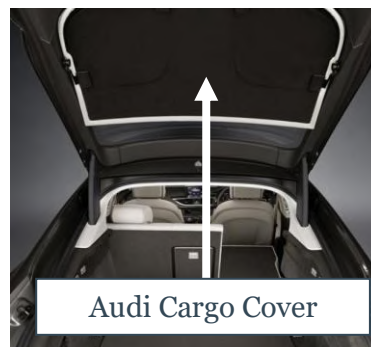



## BUMPER FLAP

- Install the Cargo Liner
- Attach the Bumper Flap to the loop fastener strip that has been manufactured into the base of the cargo liner.
- The Bumper Flap either folds into the vehicle OR can be detached and stored elsewhere when you close the liftgate.



## CARGO LINER EXTENSION

The Cargo Liner Extension provides superior protection to the rear seats when purchased with a REAR PLUS liner.

- The Cargo Liner Extension is designed to attach to a Rear Plus version liner.
- It provides additional protection for the back of the front seats and the extended floor area when the rear seats are folded flat.
- It does not offer full protection to the rear doors

**(These items cannot be added at a late date)**