

## Mitsubishi Outlander Sport 2011-2013

Our ref: H0556

Packing requirements


- CARGO LINER  
Minimum of 6x self-adhesive loop fastener tabs
- LIFTGATE COVER  
Minimum of 20x self-adhesive loop fastener tabs



### VERY IMPORTANT PREPARATION

To ensure a good bond, when using the self-adhesive hook & loop fastener to attach the cargo liner to the plastic / metal trim (Not the carpet); it is most important to remove silicone film from the vehicle trim. Silicone is applied during manufacture and can also be found in many detailing products. It is highly likely there will be a build-up of silicone. Before applying any self-adhesive fastener pads, the surface **MUST** be thoroughly cleaned using a silicone remover. (The fasteners cannot be used once it has been in contact with silicone). We recommend Intensive Tar Remover made by AutoGlym. Wipe off thoroughly any residue with a separate clean dry cloth. Unfortunately we are unable to supply this product, as it cannot be transported via our postal carrier.

NOTE: the adhesive takes 24hrs to reach full adhesion – do not disturb during.

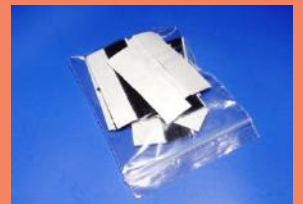

### PREPARATION

- Ensure you lock the upper parts of the rear seats in the “most reclined” position.
- Unfold the Hatchbag and place in the vehicle so that the base fits snugly in position. The panel with the Hatchbag label sits against the back of the rear seat.

*Please note: not all of the photographs are specific to your vehicle*

### INSTALLING THE BASE

- Position the base snugly into place. Start at the liftgate end.
- The hook fastener on the back side of the liner attach directly to the carpeted panels.



## INSTALLING THE FRONT

- Hook & loop fastener straps align to headrests.
- Pass around each post and fasten back onto themselves.
- The hook fasteners on the back side of the liner attach directly to the carpet panels.




## REAR PLUS VERSIONS

- **YOU MUST UNFASTEN THE HOOK & LOOP FASTENERS AND THE HEADREST STRAPS BEFORE YOU RECLINE THE UPPER PARTS OF THE REAR SEATS (Please refer to REAR PLUS options on website to see detailed photo)**

## INSTALLING THE SIDES

- Carefully position the side panels snugly into place.
- The hook fasteners on the back side of the liner attach directly to the carpet panels.

Cargo Liner is tailored around the pockets!

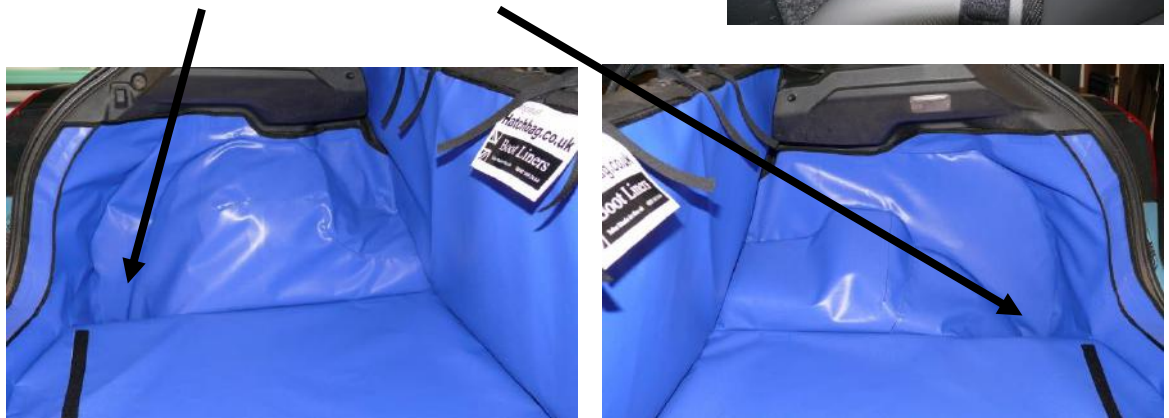

## INSTALLING THE BACK

- Use the self-adhesive loop fastener tabs to attach the 6 fasteners to the plastic part of the liftgate plate.



## Optional extras

### FREQUENT USE INSTALLATION KIT

If you frequently remove/install your Cargo Liner from/to your vehicle, please note that the carpet will "fluff" up. We offer an alternative Frequent Use Installation Kit.

The Frequent Use Installation Kit is available to buy from our online store. Simply add it to your order from the store.



*Please note: not all of the photographs are specific to your vehicle*

## BUMPER FLAP

- Install Cargo liner
- Attach the Bumper Flap to the loop fastener strip located at the base of the Cargo liner.
- The Bumper Flap either folds into the vehicle OR can be detached and stored elsewhere when you close the liftgate.



## LIFTGATE COVER

- Use the self-adhesive loop fasteners to attach the back panel to the liftgate plate.

