

JEEP Grand Cherokee 2011- 2022

inc 2013 facelift - Our ref: H0566

Packing requirements

CARGO LINER

- 1 x 1650mm cut length of 30mm wide loop fastener
Minimum of 6 self-adhesive loop fastener tabs

LIFTGATE COVER (non-facelift version only)

- Minimum of 17 self-adhesive loop fastener tabs



VERY IMPORTANT PREPARATION

To ensure a good bond, when using the self-adhesive loop fastener to attach the cargo liner to the plastic / metal trim (**Not** the carpet); it is most important to remove silicone film from the vehicle trim. Silicone is applied during manufacture and can also be found in many detailing products. It is **highly likely there will be a build-up of silicone**. Before applying any hook & loop fastener pads, the surface **MUST be thoroughly** cleaned using a silicone remover. (The hook & loop fastener cannot be used once it has been in contact with silicone). We recommend Intensive Tar Remover made by AutoGlym. Wipe off thoroughly **any residue with a separate clean dry cloth**.

NOTE: the adhesive takes 72hrs to reach full adhesion, do not disturb during.




PREPARATION

- Remove the cargo cover cassette; it may be replaced later.

INSTALLATION

BASE

- Unfold the Hatchbag and place in the vehicle so that the base fits snugly in position. The panel with the Hatchbag label sits against the back of the rear seat.
- Hook fasteners attach directly to the carpet.

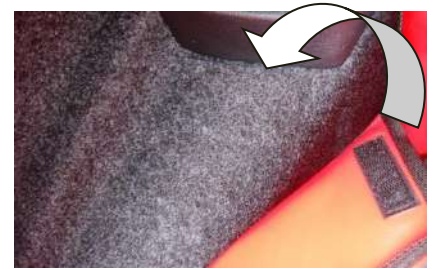

Photos are non-specific to this vehicle

FRONT

OUTER HEADRESTS

- Hook & loop fastener straps align to headrests.
- Pass around each post and fasten close back onto themselves.



FOLDING HEADRESTS

- YOU MUST UNFASTEN THE HOOK & LOOP FASTENER AND THE HEADREST STRAPS BEFORE YOU FOLD THE UPPER PARTS OF THE REAR SEATS or DROP THE HEADRESTS.**

FRONT cont.

MIDDLE HEADREST

- Lift the central headrest, and *loosely* wrap the large loop fastener strap behind both posts and fasten to the hook fastener weld. Loosely fasten and then lower the headrest.
- You may need to tighten the hook & loop fastener strap now.



REAR PLUS VERSIONS

- **YOU MUST UNFASTEN THE HOOK & LOOP FASTENER AND THE HEADREST STRAPS BEFORE YOU FOLD THE UPPER PARTS OF THE REAR SEATS.** Please refer to REAR PLUS options on website to see detailed photo's



Photos is not specific to this vehicle

SIDES

- Carefully position the side panels snugly into place. Use the self-adhesive loop fastener to attach the side to the plastic trim. Cut the long length of loop fastener to match the hook fastener on the back side of the liner. *The left photo indicates the loop fastener placement.*
P.S. don't forget to remove any Silicone.

OPTIONAL EXTRAS

Photos are not specific to this vehicle

LIFTGATE COVER (Non-facelift version only)

- Use the self-adhesive loop fastener tabs to attach the cover to the plastic trim.



BUMPER FLAP

- Attach the Bumper Flap to the loop fastener strip that has been manufactured into the base of the cargo liner.
- The Bumper Flap either folds into the vehicle OR can be detached and stored elsewhere when you close the liftgate.
- Please note that the edges of the fabric are not bound so that any mud, dirt or water can run off.



CARGO LINER EXTENSION

The Cargo Liner Extension provides superior protection to the rear seats when purchased in with a REAR PLUS option.

- The Cargo Liner Extension is designed to attach to a Rear Plus version liner.
- It provides additional protection to the back of the front seats and the extended floor area when the rear seats are folded flat.

