

RAISED AND LOWERED CARGO LINERS AUDI A3 E-TRON 2016-2018

H0569-ET

PACKING REQUIREMENTS

- ☐ CARGO LINER
Minimum of 8 self-adhesive loop fastener tabs
- ☐ LIFTGATE COVER
Minimum of 16 self-adhesive loop fastener tabs




Photo shows Raised version

VERY IMPORTANT PREPARATION

To ensure a good bond, when using the self-adhesive hook & loop fasteners to attach the cargo liner to the plastic / metal trim (**Not** the carpet); it is most important to remove silicone film from the vehicle trim. Silicone is applied during manufacture and can also be found in many detailing products. It is **highly likely there will be a build-up of silicone**. Before applying any fastener tabs, the surface **MUST be thoroughly** cleaned using a silicone remover. (The self-adhesive fasteners cannot be used once they have been in contact with silicone). We recommend "Intensive Tar Remover" made by AutoGlym. Wipe off thoroughly **any residue with a separate clean dry cloth**.

Unfortunately, we are unable to supply this product, as it cannot be transported via our postal carrier.

NOTE: the adhesive takes 72hrs to reach full adhesion – do not touch during.

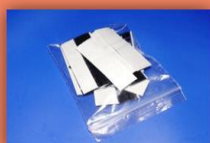

PREPARATION

- Remove the cargo cover. It may be replaced later.
- Ensure the false floor is positioned to suit your order.
- Unfold the Hatchbag and place in the vehicle. The panel with the Hatchbag label will sit against the back of the rear seat.

Please note not all of the photographs are specific to your vehicle

BASE

- Position the base snugly into place. Start behind the back of the rear seats.
- The hook fasteners on the back side attach directly to the carpet panels.



FITTING FRONT

- Hook & loop fastener straps align to headrests.
- Pass around each post and fasten back onto themselves.
- The hook fastener welded to the back side of the liner attaches directly to the carpet panels.



REAR PLUS VERSIONS

- **YOU MUST UNFASTEN THE HOOK AND LOOP FASTENERS AND THE HEADREST STRAPS BEFORE YOU RECLINE THE UPPER PARTS OF THE REAR SEATS** (*Please refer to REAR PLUS options on website to see detailed photo.*)

SIDES

- Carefully position the side panels snugly into place.
- The hook fastener on the back side of the liner attach directly to the carpet panels.



BACK

- Use the self-adhesive loop fastener tabs to attach the back panel to the liftgate plate.



Optional extras

FREQUENT USE INSTALLATION KIT

If you frequently remove/fit your Cargo Liner from/to your vehicle, please note that the carpet will “fluff” up – we offer an alternative Frequent Use Installation Kit.

The Frequent Use Installation Kit is available from our online store– simply add it to your order from store. The kit can also be ordered at a later date.



BUMPER FLAP

- Install the Cargo Liner
- Attach the Bumper Flap to the loop fastener strip located at the base of the boot liner.
- The Bumper Flap either folds into the vehicle OR can be detached and stored elsewhere when you close the liftgate.



LIFTGATE COVER

- Line up the Liftgate Cover with the liftgate and clean the areas where the self-adhesive loop fastener tabs will be stuck.
- Use the self-adhesive loop fastener tabs to attach the cover to the plastic trim.

