

## Toyota Yaris 2012-2018 (incl. 2014 facelift + excluding Hybrid versions)

Our ref: H0578



The Cargo Liner does **NOT** accommodate a False Floor

*If you have a false floor please remove it before attempting to fit the Cargo Liner*




### PACKING REQUIREMENTS

- CARGO LINER  
Minimum of 22 self-adhesive loop fastener tabs
- LIFTGATE COVER  
Minimum of 14 self-adhesive loop fastener tabs

### VERY IMPORTANT PREPARATION

To ensure a good bond, when using the self-adhesive hook & loop fastener to attach the Boot liner to the plastic / metal trim (**Not** the carpet); it is most important to remove silicone film from the vehicle trim. Silicone is applied during manufacture and can also be found in many valeting products. It is **highly likely there will be a build-up of silicone**. Before applying any hook & loop fastener pads, the surface **MUST be thoroughly** cleaned using a silicone remover. (The hook & loop fastener cannot be used once it has been in contact with silicone). We recommend Intensive Tar Remover made by AutoGlym. Wipe off thoroughly **any residue with a separate clean dry cloth**.

**NOTE:** the adhesive takes 24hrs to reach full adhesion – do not disturb during.

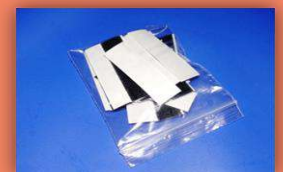

### PREPARATION

- Remove the cargo cover. It may be replaced later.
- Unfold the Hatchbag and place in the vehicle. The panel with the Hatchbag label will sit against the back of the rear seat.

*Please note not all of the photographs are specific to your vehicle*

### BASE

- Position the base snugly into place. Start behind the back of the rear seats.
- The hook fastener on the back side of the liner attach directly to the carpeted panels.



## FITTING FRONT

- Hook & loop fastener straps align to headrests.
- Pass around each post and fasten back onto themselves.

## REAR PLUS VERSIONS

- **YOU MUST UNFASTEN THE HOOK & LOOP FASTENER / THE HEADREST STRAPS BEFORE YOU RECLINE THE UPPER PARTS OF THE REAR SEATS** (Please refer to REAR PLUS options on website to see detailed photo)



## SIDES

- Carefully position the side panels snugly into place.
- You will find there will still be a void behind these two areas highlighted in red – see photos above
- Use the self-adhesive loop fastener pads to attach the side panels to the plastic.



## BACK

Use the self-adhesive loop fastener pads to attach the back panel to the plastic.



Please note: these photos are not specific to your car.

## LIFTGATE COVER

- Use the self-adhesive loop fastener tabs to attach the cover to the plastic trim.
- If the Seat Flap sits over large headrests and obstructs your rear view: carefully create openings in the flap to accommodate the headrest posts



## BUMPER FLAP

- Install Cargo liner
- Attach the Bumper Flap to the Loop fastener strip located at the base of the Cargo liner.
- The Bumper Flap either folds into the vehicle OR can be detached and stored elsewhere when you close the liftgate.





BEFORE APPLYING THE  
SELF-ADHESIVE FASTENER

YOU MUST FOLLOW  
OUR CLEANING PROCEDURE

SEE PAGE 1  
VERY IMPORTANT PREPARATION

