

Toyota Yaris 2012-2018 (incl. 2014 facelift + Hybrid versions)

Our ref: H0578



The Cargo Liner does **NOT** accommodate a False Floor

If you have a false floor please remove it before attempting to install the Cargo Liner




PACKING REQUIREMENTS

- CARGO LINER
Minimum of 22 self-adhesive loop fastener tabs
- LIFTGATE COVER
Minimum of 14 self-adhesive loop fastener tabs

VERY IMPORTANT PREPARATION

To ensure a good bond, when using the self-adhesive hook & loop fastener to attach the cargo liner to the plastic / metal trim (**Not** the carpet); it is most important to remove silicone film from the vehicle trim. Silicone is applied during manufacture and can also be found in many valeting products. It is **highly likely there will be a build-up of silicone**. Before applying any hook & loop fastener pads, the surface **MUST be thoroughly** cleaned using a silicone remover. (The hook & loop fastener cannot be used once it has been in contact with silicone). We recommend Intensive Tar Remover made by AutoGlym. Wipe off thoroughly **any residue with a separate clean dry cloth**.

NOTE: the adhesive takes 24hrs to reach full adhesion – do not disturb during.

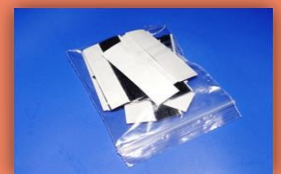

PREPARATION

- Remove the cargo cover. It may be replaced later.
- Unfold the Hatchbag and place in the vehicle. The panel with the Hatchbag label will sit against the back of the rear seat.

Please note not all of the photographs are specific to your vehicle

BASE

- Position the base snugly into place. Start behind the back of the rear seats.
- The hook fastener on the back side of the liner attach directly to the carpeted panels.



INSTALLING THE FRONT

- Hook & loop fastener straps align to headrests.
- Pass around each post and fasten back onto themselves.

REAR PLUS VERSIONS

- **YOU MUST UNFASTEN THE HOOK & LOOP FASTENER / THE HEADREST STRAPS BEFORE YOU RECLINE THE UPPER PARTS OF THE REAR SEATS** (Please refer to REAR PLUS options on website to see detailed photo)



SIDES

- Carefully position the side panels snugly into place.
- You will find there will still be a void behind these two areas highlighted in red – see photos above.
- Use the self-adhesive loop fastener pads to attach the side panels to the plastic.



BACK

Use the self-adhesive loop fastener pads to attach the back panel to the plastic.



Please note: these photos are not specific to your car.

LIFTGATE COVER

- Use the self-adhesive loop fastener tabs to attach the cover to the plastic trim.



BUMPER FLAP

- Install Cargo liner
- Attach the Bumper Flap to the Loop fastener strip located at the base of the Cargo liner.
- The Bumper Flap either folds into the vehicle OR can be detached and stored elsewhere when you close the liftgate.





BEFORE APPLYING THE
SELF-ADHESIVE FASTENER

YOU MUST FOLLOW
OUR CLEANING PROCEDURE

SEE PAGE 1
VERY IMPORTANT PREPARATION

