

## Range Rover 2013 to 2018

(not 2018 Facelift, not SV Coupe)

Our ref: H0579

- Packing requirements  
CARGO LINER
  - 4 x ref 121 plastic/loop fastener tabs
  - 4 x self-adhesive loop fastener tabs
  - 1 x 750 mm (30mm ) SA loop fastener
  - 1 x 290 mm (30mm ) SA loop fastener
  - 1 x 400 mm (30mm ) SA loop fastener
- LOWER LIFTGATE COVER
  - 6 x self-adhesive loop fastener tabs
  - 1 x 1160 mm (30mm) SA loop fastener
- UPPER LIFTGATE COVER
  - 16 x self-adhesive loop fastener tabs
- WINDOW SILL COVERS
  - 14 x self-adhesive loop fastener tabs




Standard Cargo liner prepared for additional Window Sill Covers



REF: 121



SELF-ADHESIVE VELCRO TABS

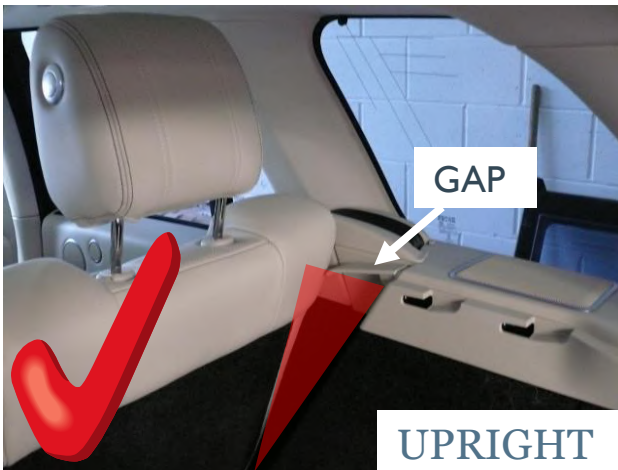

*Rear Seats must be positioned in their most upright position*

### VERY IMPORTANT PREPARATION

To ensure a good bond, when using the self-adhesive loop fastener to attach the cargo liner to the plastic / metal trim (**Not** the carpet); it is most important to remove silicone film from the vehicle trim. Silicone is applied during manufacture and can also be found in many detailing products. It is **highly likely there will be a build-up of silicone**. Before applying any loop fastener pads, the surface **MUST be thoroughly** cleaned using a silicone remover. (The hook & loop fastener cannot be used once it has been in contact with silicone). We recommend Intensive Tar Remover made by AutoGlym. Wipe off thoroughly **any residue with a separate clean dry cloth**.

**NOTE:** the adhesive takes 24hrs to reach full adhesion – do not disturb during.



## PREPARATION


- Remove the cargo cover shelf; it can be replaced later, if you do not have the window sill covers.
- You will need a pair of scissors and a spoon



## INSTALLATION

### LOWER LIFTGATE COVER

- Use the 30mm wide self-adhesive loop fastener to attach the top edge of the liftgate cover to the plastic trim: Cut length to fit
- Lift up the hinge cover and use the small self-adhesive loop fastener tabs to attach to the metal trim.

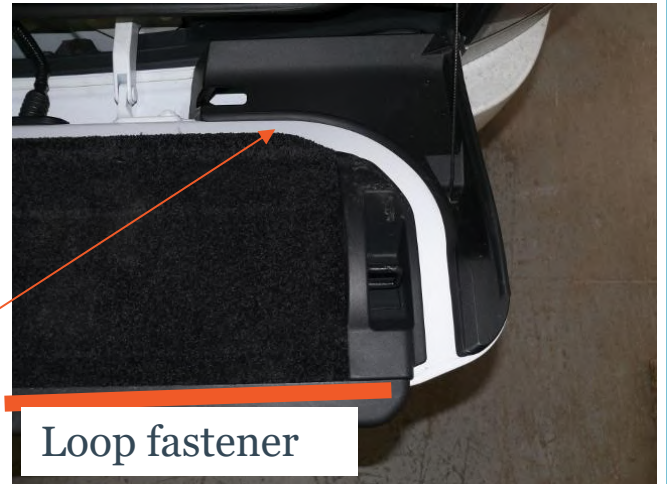


## INSTALLING CARGO LINER

### BASE

- Pass the pocket sewn into the under face of the base over the hinge flap.



- Attach the two ties to the small outer two metal "D" rings located at the back of the rear seats at floor level.

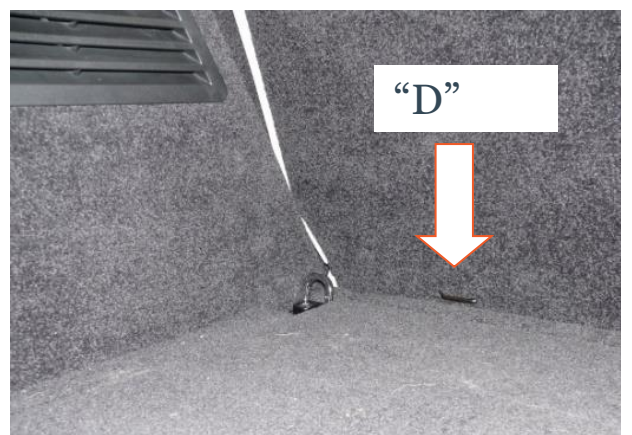




## FRONT

- The four hook & loop fastener straps fasten to the outer headrests.
- Pass around each post and fasten back onto themselves.
- Wrap the large elastic strap around the central fixed headrest. Fasten hook fastener to the front panel.



## NOTE: REAR PLUS / SPLIT VERSIONS

- **YOU MUST UNFASTEN ALL HEADREST STRAPS BEFORE YOU RECLINE THE UPPER PARTS OF THE REAR SEATS** (Please refer to REAR PLUS options on website to see detailed photo)

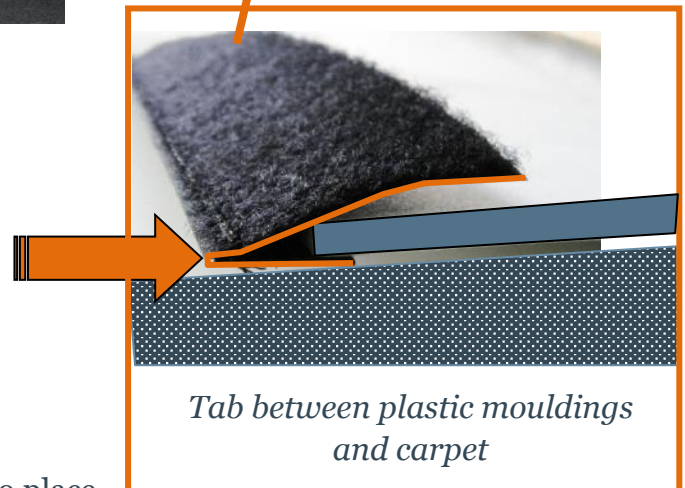

## SIDES

- Carefully position the side panels snugly into place.
- The bound cut-out corresponds with the interior light.
- Use the 30mm wide self-adhesive loop fastener to attach the sides to the plastic trim.
- Locate where the two sets of hook fasteners are on the ends of the side panels. The ref: 121 plastic/loop fastener tabs once installed will fasten to these.

### Installing the ref: 121 tabs

- Hold back the rubber seal on the door aperture to expose the edge of the carpeted panel.
- Carefully feed the spoon handle into the narrow void behind the carpeted panel. This will help to open up this void.
- Push the plastic section of the ref; 121 tab into this void.
- Reposition to align with the hook fastener welds on the Liner.
- Fasten close the hook & loop fastener.

## Window Sill Flaps

- Install Cargo Liner
- Flaps attach to the long strip of hook fastener sewn at the top edge of the cargo liner's side panels.
- Use the small self-adhesive loop fastener tabs to attach to rest to the plastic trim.



## DOG BARRIERS / LUGGAGE DIVIDERS / ACCESSORIES (LAND ROVER)

### WE STRONGLY ADVISE

#### 1

You read the manufacturers installation instructions before you decide if your accessory will work in conjunction with our cargo liner

*We are not affiliated with Land Rover, but we have found an informative website*

<http://topix.landrover.jlrext.com/topix/vehicle/lookupForm>

*OR speak in depth with your dealership about the installation of the accessory. You will find some of the designs are extensively complex.*

#### 2

*You purchase a REAR PLUS Version cargo liner should you need to load the accessory into the cargo area via the rear passenger seat area when installing.*

#### Cutting Hatchbag cargo liner Fabric


We try to keep the openings in our liners to a "minimum".

If you wish to access a "D" Ring then you can "carefully" modify the liner yourself.

NEVER cut the bindings or ANY sewn seam. – contact us for a guidance sheet.



**Cargo Barrier — Full Height**  
Keep cargo and animals in the rear of the vehicle separate from the passenger compartment with this barrier that also incorporates an integral ski hatch.  
**VPLGS0162**

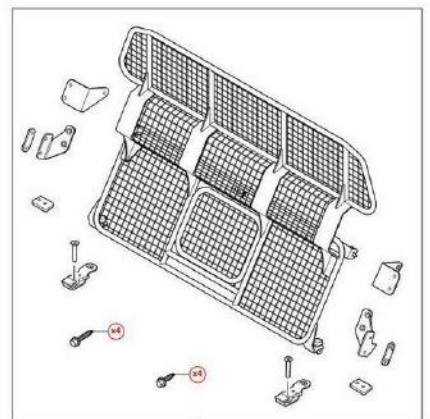

**Please note these photos are not specific to your vehicle.**

## Optional extras

### BUMPER FLAP

- Install cargo liner
- Attach the Bumper Flap to the loop fastener strip located at the base of the cargo liner.
- The Bumper Flap either folds into the vehicle OR can be detached and stored elsewhere when you close the liftgate.



### LIFTGATE COVER

- Use the self-adhesive loop fastener to attach the cover to the plastic trim.

