

Range Rover 2018-present

Our ref: H0579-FACE

- Packing requirements
CARGO LINER
4 x ref 121 plastic/loop fastener tabs
4 x self-adhesive loop fastener tabs
1 x 750 mm (30mm) SA loop fastener
1 x 290 mm (30mm) SA loop fastener
1 x 400 mm (30mm) SA loop fastener
- LOWER LIFTGATE COVER
6 x self-adhesive loop fastener tabs
1 x 1160 mm (30mm) SA loop fastener
- UPPER LIFTGATE COVER
16 x self-adhesive loop fastener tabs
- WINDOW SILL COVERS
14 x self-adhesive loop fastener tabs




Standard Cargo liner prepared for additional Window Sill Covers



REF: 121



SELF-ADHESIVE VELCRO TABS

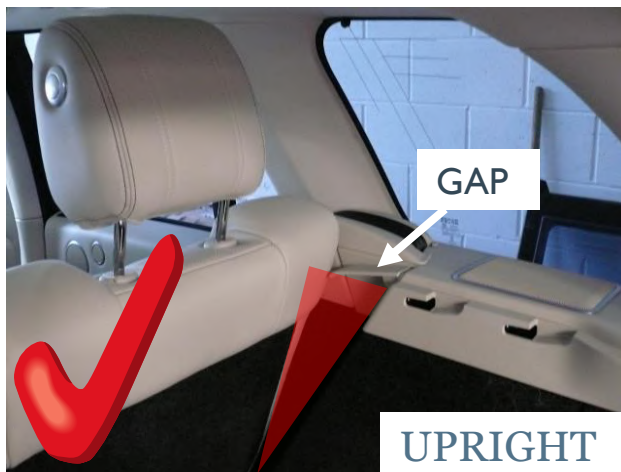

Rear Seats must be positioned in their most upright position

VERY IMPORTANT PREPARATION

To ensure a good bond, when using the self-adhesive loop fastener to attach the cargo liner to the plastic / metal trim (**Not** the carpet); it is most important to remove silicone film from the vehicle trim. Silicone is applied during manufacture and can also be found in many detailing products. It is **highly likely there will be a build-up of silicone**. Before applying any loop fastener pads, the surface **MUST be thoroughly** cleaned using a silicone remover. (The hook & loop fastener cannot be used once it has been in contact with silicone). We recommend Intensive Tar Remover made by AutoGlym. Wipe off thoroughly **any residue with a separate clean dry cloth**.

NOTE: the adhesive takes 24hrs to reach full adhesion – do not disturb during.



PREPARATION

- Remove the cargo cover; it can be replaced later, if you do not have the window sill covers.
- You will need a pair of scissors and a spoon




INSTALLATION



LOWER LIFTGATE COVER

- Use the 30mm wide self-adhesive loop fastener to attach the top edge of the liftgate cover to the plastic trim: Cut length to fit
- Lift the hinge cover and using the small self-adhesive loop fastener tabs, attach to the metal trim.

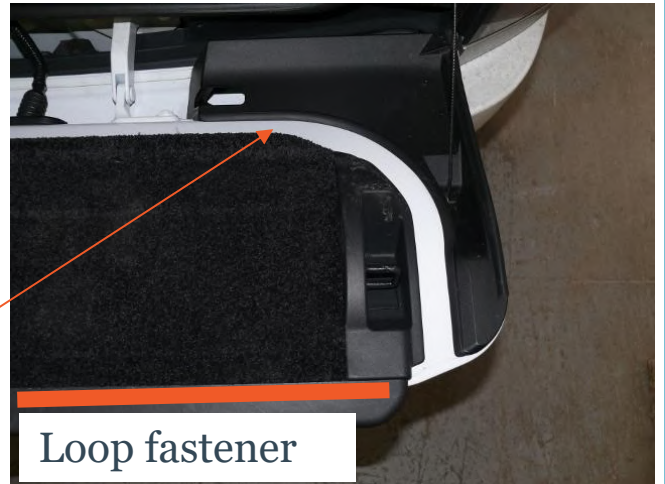


INSTALLING CARGO LINER

BASE

- Pass the pocket sewn into the under face of the base over the hinge flap.



- Attach the two ties to the small outer two metal D-rings located on the back of the rear seats at floor level.

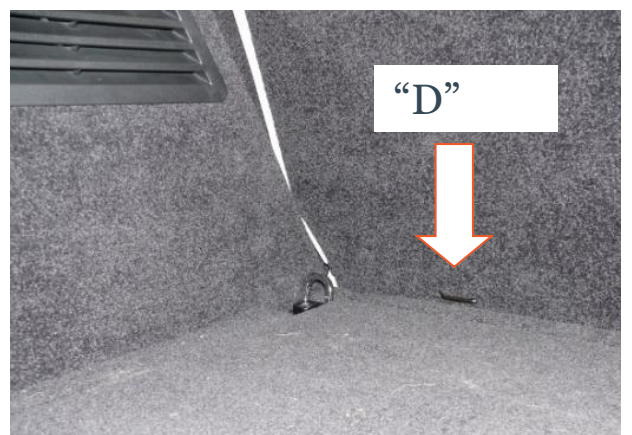

FRONT


- The four hook & loop fastener straps attach to the outer headrests.
- Pass around each post and fasten back onto themselves.
- Wrap the large elastic strap around the central fixed headrest. Fasten hook fastener to the front panel.



NOTE: REAR PLUS / SPLIT VERSIONS

- **YOU MUST UNFASTEN ALL HEADREST STRAPS BEFORE YOU RECLINE THE UPPER PARTS OF THE REAR SEATS.** (Please refer to REAR PLUS options on website to see detailed photo')

The side panels cover the rear seat folding mechanism to prevent seats being reclined by accident.

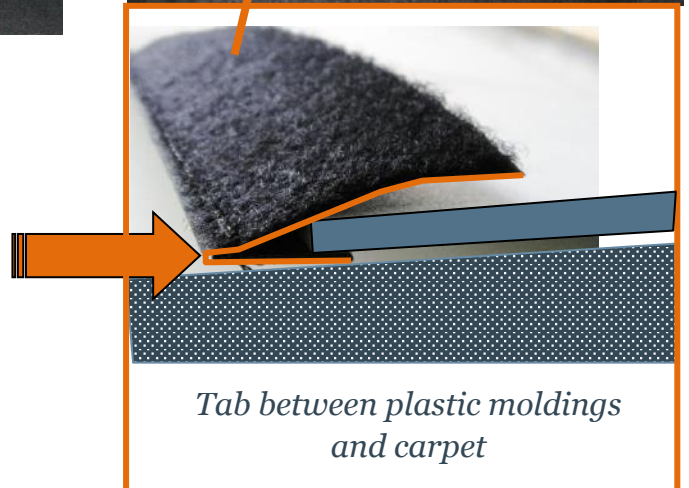

SIDES

- Carefully position the side panels snugly into place.
- The bound cut-out corresponds with the interior light.
- ⚠️ Use the 30mm wide self-adhesive loop fastener to attach the sides to the plastic trim.
- Locate where the two sets of hook fasteners are on the ends of the side panels. The ref: 121 plastic/loop fastener tabs attach to these.

Installing the ref: 121 tabs

- Hold back the rubber seal on the door aperture to expose the edge of the carpeted panel.
- Carefully feed the spoon handle into the narrow void behind the carpeted panel. This will help to open up this void.
- Push the plastic section of the ref; 121 tab into this void.
- Reposition to align with the hook fasteners on the liner.
- Fasten close the hook & loop fastener.

Optional Extras

Window Sill Flaps



- Install the cargo liner
- Flaps attach to the long strip of hook fastener on the top edge of the side panels of the liner.
- Use the small self-adhesive loop fastener tabs, attach to rest to the plastic trim.



DOG BARRIERS / LUGGAGE DIVIDERS / ACCESSORIES (LAND ROVER)

WE STRONGLY ADVISE

1

You read the manufacturers installation instructions before you decide if your accessory will work in conjunction with our cargo liner

We are not affiliated with Land Rover, but we have found an informative website

<http://topix.landrover.jlrext.com/topix/vehicle/lookupForm>

OR speak in depth with your dealership about the installation of the accessory. You will find some of the designs are extensively complex.

2

You purchase a REAR PLUS Version cargo liner should you need to load the accessory into the cargo area via the rear passenger seat area when installing.

Cutting Hatchbag Cargo Liner Fabric


We try to keep the openings in our liners to a "minimum".

If you wish to access a "D" Ring then you can "carefully" modify the liner yourself.

However NEVER cut the bindings or ANY sewn seam. – contact us for a guidance sheet.



Cargo Barrier — Full Height
Keep cargo and animals in the rear of the vehicle separate from the passenger compartment with this barrier that also incorporates an integral ski hatch.
VPLGS0162

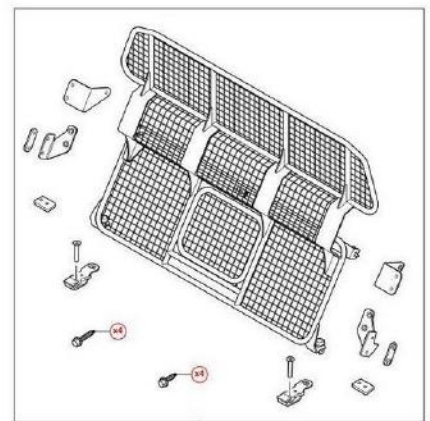

Please note: these photos are not specific to your vehicle.

Optional extras

BUMPER FLAP

- Install cargo liner
- Attach the Bumper Flap to the loop fastener strip located at the base of the cargo liner.
- The Bumper Flap either folds into the vehicle OR can be detached and stored elsewhere when you close the liftgate.



LIFTGATE COVER

- Use the self-adhesive loop fastener to attach the cover to the plastic trim.

