

Volkswagen Golf Estate Mk 7 2015-present

Our ref: H0583

PACKING REQUIREMENTS



CARGO LINER

Min x 15 ref: 113



REF: 113



LIFTGATE COVER

Minimum of 18 Self-adhesive loop fastener tabs



Photo: Rear Plus with Seat Split, prepared for additional Bumper Flap

PREPARATION

- Remove the cargo cover. It may be replaced later.
- Unfold the Hatchbag and place in the vehicle. The panel with the Hatchbag label sits against the back of the rear seat.

Please note: not all of the photographs are specific to your vehicle

BASE

- Position the central base panel snugly into place. Start at the liftgate end.
- The hook fastener on the back side of the liner attaches directly to the carpet.



INSTALLING THE FRONT

- Hook & loop fastener straps align to headrests.
- Pass around each post and fasten back onto themselves.



REAR PLUS VERSIONS

- **YOU MUST UNFASTEN THE HEADREST STRAPS BEFORE YOU RECLINE THE REAR SEATS** (Please refer to REAR PLUS options on website to see detailed photo)

Please note the following photos are not specific to your vehicle.

SIDES

- The hook fasteners on to the back side of the liner attach directly to the carpet panels

*HOWEVER, we feel the attachment of the tabs ref: 113 in the area highlighted in **photo A** will dramatically improve the installation of the Cargo liner.*



REF: 113



REF: 113 TABS

- Align the side to the vehicle and locate each position of the hook fastener tabs on the liner. In each of these locations fasten one of the REF: 113 tabs to the carpet.

You can trim these tabs to suit the available carpet at each location, or feed part of the tab up behind the plastic.

- Once these REF: 131 tabs are attached, you will not need to remove them. The Cargo liner attaches to them.
- When removing the Cargo liner, just carefully peel away from the tab leaving the tabs attached to the carpet.

OPTIONAL EXTRAS

BUMPER FLAP

- Install Cargo liner
- Attach the Bumper Flap to the loop fastener strip located at the base of the cargo liner.
- The Bumper Flap either folds into the vehicle OR can be detached and stored elsewhere when you close the liftgate.




VERY IMPORTANT PREPARATION

Liftgate Cover ONLY

To ensure a good bond, when using the self-adhesive hook & loop fasteners to attach the cargo liner to the plastic / metal trim (**Not** the carpet); it is most important to remove silicone film from the vehicle trim. Silicone is applied during manufacture and can also be found in many detailing products. It is **highly likely there will be a build-up of silicone**. Before applying any fastener pads, the surface **MUST be thoroughly** cleaned using a silicone remover. (The hook & loop fasteners cannot be used once it has been in contact with silicone). We recommend Intensive Tar Remover made by AutoGlym. Wipe off thoroughly **any residue with a separate clean dry cloth**.

Unfortunately, we are unable to supply this product, as it cannot be transported via our postal carrier.

NOTE: the adhesive takes 24hrs to reach full adhesion – do not disturb during.

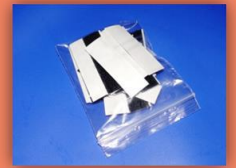

LIFTGATE COVER

Please ensure that you clean the plastics as instructed before using self-adhesive loop fasteners.

- Use the self-adhesive loop fastener tabs to attach the cover to the plastic trim.
- Place two loop fastener tabs on the recessed lip to pull the body of the liftgate cover in tight to the profile.

