

LAND ROVER DISCOVERY SPORT 2015-present

Our ref: H0597



REF: 117



Packing Requirements

- CARGO LINER
 - 2 x Ref: 117's (loop+hook fastener tabs)
 - 750mm cut length of self-adhesive loop fastener
- 5 self-adhesive loop fastener tabs
- LIFTGATE COVER
 - Minimum of 27 self-adhesive loop fastener tabs



PREPARATION

- Remove the cargo cover. It may be replaced later.
- Fold the 3rd-row seats Flat – they cannot be used.
- Slide the rears seats (Row 2) as far back to the liftgate as possible and set the upper parts of the rear seats to your specified order: Upright or Reclined




VERY IMPORTANT PREPARATION

To ensure a good bond, when using the self-adhesive hook & loop fastener to attach the cargo liner to the plastic / metal trim (**Not** the carpet); it is most important to remove silicone film from the vehicle trim. Silicone is applied during manufacture and can also be found in many valeting products. It is **highly likely there will be a build-up of silicone**. Before applying any self-adhesive fastener pads, the surface **MUST be thoroughly** cleaned using a silicone remover. (The fasteners cannot be used once they have been in contact with silicone). We recommend "Intensive Tar Remover" made by AutoGlym. Wipe off thoroughly **any residue with a separate clean dry cloth**.


Unfortunately we are unable to supply this product, as it cannot be transported via our postal carrier.

NOTE: the adhesive takes 24hrs to reach full adhesion – do not touch during.

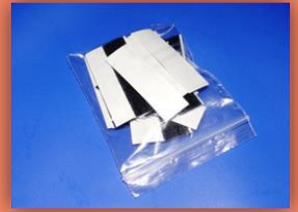

INSTALLING THE BASE

- Unfold the Hatchbag and place in the vehicle. The panel with the Hatchbag label sits against the back of the rear seat.
- Position the base of the Cargo liner snugly into place.
- The hook fasteners welded to the reverse face of the base attach directly to the carpet.

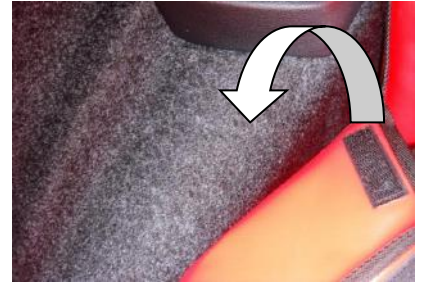

INSTALLING THE FRONT

- Hook & loop fastener straps align to headrests.
- Pass around each post and fasten back onto themselves.



REAR PLUS VERSIONS

- **YOU MUST UNFASTEN THE HOOK & LOOP FASTENERS / THE HEADREST STRAPS BEFORE YOU RECLINE THE UPPER PARTS OF THE REAR SEATS EITHER MANUALLY OR ELECTRICALLY**

INSTALLING THE SIDES

- Fix the 3rd-row seat belts:
Pin back the seat belt webbing using the two Ref: 117 tabs

Position them as shown in this image, to prevent the hook fastener on the side panels attaching to the carpet.

- The majority of the side panel attaches directly to the carpet.
- Use the self-adhesive loop fastener tabs to fix the front section to the plastic trim.



REF: 117



INSTALLING THE BACK

- Cut to length from the strip of self-adhesive loop fastener supplied and attach the back panel to the plastic trim.



Please note these photos are not specific to your car.

OPTIONAL EXTRAS

BUMPER FLAP

- Install Cargo liner
- Attach the Bumper Flap to the loop fastener strip located at the base of the Cargo liner.
- The Bumper Flap either folds into the vehicle OR can be detached and stored elsewhere when you close the liftgate.



LIFTGATE COVER

- Use the self-adhesive loop fastener tabs to attach the cover to the plastic trim.
- Pass the fastener strap under the grab handle and then attach on the front of the cover.

