

AUDI Q7 - 7 seater (3rd row folded) - 2015 - present

our ref: H0611-HYNO

INSTALLATION KIT CONTENTS :

CARGO LINER

- 4 x Ref:124 (cut at 200mm long)
- 28 x Ref:113 frequent use fastener tabs
- 1200mm x 20mm wide self-adhesive loop fastener
- 4 x 200mm x 20mm wide self-adhesive loop fastener



Rear Plus with Seat Split cargo liner

WINDOW SILL FLAP

- 900mm x 20mm wide self-adhesive loop fastener
- 6 x tabs self-adhesive loop fastener

LIFTGATE COVER

- 19 x tabs self-adhesive loop fastener



REF:113

REF:124

STEP I. PREPARATIONS

Please ensure that the 3rd row seats are folded down flat. These seats will not be usable with the Cargo liner installed.

Please ensure that the rear seat (2nd row) backs are positioned correctly to suit the liner. The seats should be at a incline parallel to the seam on the car wall (shown below)



SET THE REAR SEAT RECLINE TO BE PARALLEL WITH SHOWN LINE



TOO FAR BACK WILL CREASE THE CARGO LINER.



TOO FAR FORWARD WILL PULL HATCHBAG OF THE SEAT.

STEP I. PREPARATIONS CONTINUED



3RD ROW SEATBELTS

- Unfasten the 3rd row seat belts from the cargo area floor fixing point A and relocate into the second fixing point B in the window pillar (**Image A**)

Should these seat belts not release from the floor follow the following steps.

Use the 4 x Ref:117 to fix the seats belts to lie flat against the cargo area floor and sides.

- **Image B & D** shows the fixing locations
- **Image C** is a non-specific photo showing how ref:117 are designed to be used. The seat belt sits under the smooth section of the fixing, whilst the hook attaches directly to the carpet.
- We have supplied additional Ref: 113 should you wish to sandwich between the carpet and the fixing. When you wish to release the seat blest, just peel the ref:117 off the 113 tab to prevent the carpet from fluffing up.

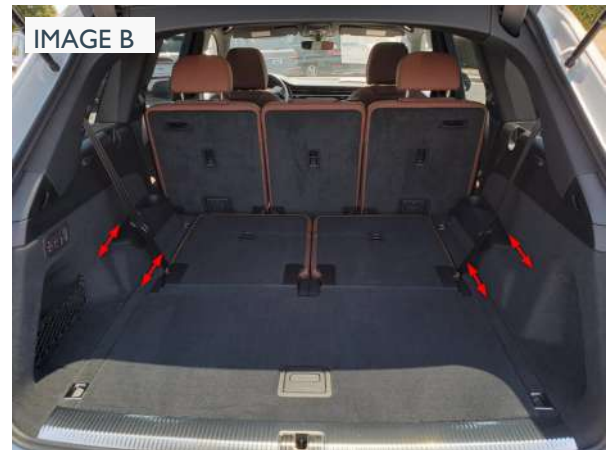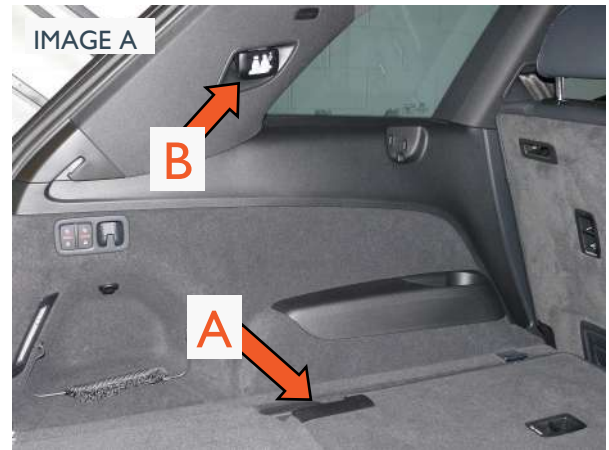

VERY IMPORTANT PREPARATION

To ensure the self-adhesive hook & loop fastener stick to the plastic trim, you **MUST CLEAN** all grime from the plastic and **REMOVE** all **SILICONE** applied during manufacture and detailing.

To do this please:



1. Use a silicone remover, such as AutoGlym Intensive Tar Remover, and apply generously to the surface you want to adhere to.
2. Using a separate clean, dry cloth, thoroughly dry the surface until the cloth starts to drag. Attach one self-adhesive fastener tab to see if it sticks. (Repeat steps 1 and 2 if necessary.) Extra tabs have been provided.
3. Attach the self-adhesive fasteners and let them fully adhere over the next 24 hours for the best bond.




**The self-adhesive fasteners cannot be used once they have been in contact with silicone. Replacement kits are available on our website.*

STEP 3. INSTALLING THE BASE

- Unlock the rear seats (Row 2) and recline enough to expose the 3rd row headrest posts.
- Unfold the cargo liner and place in the vehicle so that the base fits snugly in position. The panel with the Hatchbag label sits against the back of the rear seat.
- Attach the two ties sewn onto the under face of the base panel to the outer headrest posts on the 3rd row seats (Image E) (avoid pulling the base into the void by tying too tightly)
- Raise the 2nd row seats to the angle shown in step 1 on the previous page.

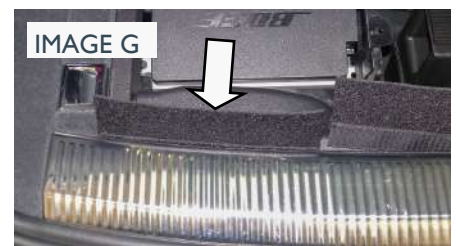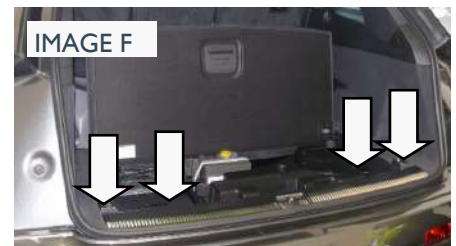

 The rear end of the base panel will be fastened to the inner vertical face of the chrome plate at the rear of the cargo area . Raise the cargo area false floor lifting the base panel with it (Image F) .

Fasten the **4 x 200mm x 20mm wide** self-adhesive loop fastener strips to the hook section of the **4 x Ref:124**

Placing 2 either side of the central lock as shown in **image F** Fasten the adhesive section to the inner vertical face of the chrome plate as illustrated in **image G**

Close the false floor making sure the loop fastener section of the tabs extend above the floor .(**Image H**) Attach the hook fastener on the underside of the base panel to them. (**Image I**)

STEP 4. INSTALLING THE FRONT

- Starting with the middle headrest loop the hook & loop fastener straps around both headrest posts. **(Image J)**. Makes sure to hold the front part of the base in position to avoid pulling the Cargo liner too far up. Repeat the procedure with the left and right headrests.



STEP 5A. INSTALLING THE SIDES - WITHOUT OPTIONAL SILL FLAPS

- Attach some of the Ref:113 frequent use fastener tabs to the carpet surface around the storage area (the back left side of the cargo area) in line with the hook fastener tabs on the cargo liner as shown in **image K**. (These tabs will enable you to regularly access the storage net on the left side of the cargo area without “Fluffing up” the carpet.) *(Note: should you plan to remove and replace your Cargo liner regularly we suggest you use the entire pack of Ref:113 tabs on both the nearside and offside where the hook fastener attaches to the carpet!)*
- Attach the hook fastener on the top edge of the cargo liner sides directly onto the carpet/ref:113 **(Image L)**.
- Attach the side panel between the carpeted area and the rear seats using **1200mm x 20mm wide** self-adhesive loop fastener on the plastic panel. Cut the loop fastener strip to size. **(Image M)**.



STEP 5B. INSTALLING THE SIDES - WITH OPTIONAL SILL FLAPS



Attach the self-adhesive loop fastener strip along the entire length inside of the grill, cutting the **900mm wide** strip to length. **(Image N - orange highlights)**



- Attach the top edge of the sill flaps onto this fastener strip and attach the bottom edge of the flap directly onto the top edge of the carpet that lines the side of the cargo area **(Image O - white arrow)**. Repeat on opposite side



Use the **6 x tabs** self-adhesive loop fastener to fasten the remaining hook fasteners to the plastic **(Image O - orange highlights)**



- Next follow the instructions in step in 4A to complete the attachment of the side panels.

OPTIONAL EXTRAS

Please note: the following photos are not specific to your vehicle.

STEP 6A. LIFTGATE COVER

- Line up the liftgate cover with the liftgate and clean the areas where the self-adhesive fastener tabs will be stuck. **(Image P)**



Use the self-adhesive loop fastener tabs to attach the cover to the plastic trim.



STEP 6B. BUMPER FLAP

- Install the cargo liner
- Attach the Bumper Flap to the loop fastener strip located at the base of the cargo liner. **(Image Q)**
- The Bumper Flap either folds into the vehicle OR can be detached and stored elsewhere when you close the liftgate.



STEP 6C CARGO LINER EXTENSION

- The Cargo Liner Extension provides superior protection for the rear seats when purchased with a REAR PLUS option. **(Image R)**
- The Cargo Liner Extension is designed to attach to a Rear Plus / Split version liner.
- It provides additional protection for the back of the front seats and the extended floor area when the rear seats are folded flat.
- It offers no protection to the rear doors.
- Attach the Cargo Liner Extension to the main Cargo liner. **(Image R)**

