

BMW XI — 2016 - 2022

SEBK + SEFIX

Our ref: H0615

PACKAGING REQUIREMENTS.

CARGO LINER

- No additional fixings

LIFTGATE COVER

- **20 x tabs** self-adhesive loop fastener



IMPORTANT - LIFTGATE COVER ONLY

To ensure a good bond, when using the self-adhesive hook & loop fasteners to attach the cover to the plastic trim it is most important to remove silicone film from the vehicle trim. Silicone is applied during manufacture and can also be found in many valeting products. It is **highly likely there will be a build-up of silicone**. Before applying any self-adhesive fastener pads, the surface **MUST be thoroughly** cleaned using a silicone remover. (The fasteners cannot be used once it has been in contact with silicone). We recommend Intensive Tar Remover made by AutoGlym. Wipe off thoroughly **any residue with a separate clean dry cloth**.

NOTE: the adhesive takes 24hrs to reach full adhesion – do not touch during.



STEP I. PREPARATIONS


- Remove the cargo cover. It may be replaced later.



Please note: not all of the photographs are specific to your vehicle

STEP 1. PREPARATIONS

- Remove the cargo cover. It may be replaced later.
- Please recline your seats fully backwards (**Image A**)
- If your vehicle has nets in the side recesses please push them down before installing the cargo liner. (**Image B**)

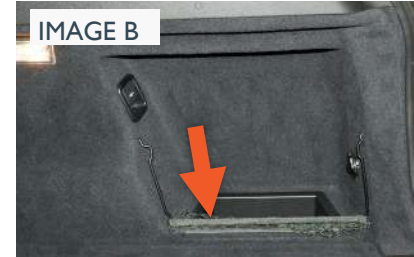

STEP 2. INSTALLING THE BASE

- Place the cargo liner into the cargo area with the Hatchbag logo at the seat end. Flatten the base so it fits snugly against the edges. (**Image C**)
- Push the cargo liner pockets into the wells on both sides of the cargo area (**Image C**)



STEP 3. INSTALLING THE FRONT

- **- PLUS / SPLIT VERSION ONLY** - Fasten the hook & loop fasteners between the side and the front panel. (**Image D**)
- Starting with the middle headrest loop the hook and loop fastener straps around both headrest posts. (**image E**). Make sure to hold the front part of the base in position as not to pull the Hatchbag too far up. Repeat the procedure with the left and right seat.

REAR PLUS VERSIONS

You **MUST** unfasten the hook & loop fasteners and the headrest straps before you recline the upper parts of the rear seats. (*Please refer to REAR PLUS options on website to see detailed photo*)



STEP 4. INSTALLING THE SIDES

- Attach the hook fasteners on the top edge of the cargo liner sides to the top edge of the carpet on both sides of the cargo area. (**Image F**)
- Attach the rear sides of the cargo liner by fastening the 3 fastener patches on the cargo liner to the carpeted area



OPTIONAL EXTRAS

Please note: the following photos are not specific to your vehicle

STEP 5A. LIFTGATE COVER

- Line up the liftgate cover with the liftgate and clean the areas where the self-adhesive fastener tabs will be stuck. (Image 4)
- Use the self-adhesive loop fastener tabs to attach the cover to the plastic trim.



STEP 5B. BUMPER FLAP

- Install Cargo Liner
- Attach the Bumper Flap to the loop fastener strip located at the base of the cargo liner.
- The Bumper Flap either folds into the vehicle OR can be detached and stored elsewhere when you close the liftgate.



OPTIONAL EXTRAS page 2

Please note: the following photos are not specific to your vehicle

STEP 5C. FLOOR EXTENSION

The Cargo Liner Extension provides superior protection to the rear seats when purchased with a REAR PLUS option.

- The Cargo Liner Extension is designed to attach to a Rear Plus version liner.
- It provides additional protection to the back of the front seats and the extended floor area when the rear seats are folded flat.
- It does not offer full protection to the rear doors

The Bumper Flap and the Cargo Liner Extension cannot be added at a late date)



STEP 5D. FREQUENT USE INSTALLATION KIT

- If you frequently remove/install your Cargo Liner from/to your vehicle please note that the carpet will “fluff” up. We offer an alternative Frequent Use Installation Kit.

The Frequent Use Installation Kit is available to buy from our online store. Simply add it to your order from store. The kit can also be ordered at a later date.

