

## VOLVO XC90 - 2015-present

### 3RD ROW FOLDED DOWN

Our ref: H0618-RW3FLD

### PACKAGING REQUIREMENTS.

#### CARGO LINER

- **10x tabs** self-adhesive loop fastener
- **2x ref. 121** tabs (plastic / loop fastener)
- **4x ref 124** at 160mm length
- **2x 680mm + 2x 150mm** 20mm self-adhesive loop fastener
- **2x 200mm** 30mm self-adhesive loop fastener



#### LIFTGATE COVER

- **27x tabs** self-adhesive loop fastener



REF:121



REF:124



### VERY IMPORTANT PREPARATION

To ensure a good bond, when using the self-adhesive hook & loop fasteners to attach the cover to the plastic trim it is most important to remove silicone film from the vehicle trim. Silicone is applied during manufacture and can also be found in many detailing products. It is **highly likely there will be a build-up of silicone**. Before applying any Hook & loop fastener pads, the surface **MUST be thoroughly** cleaned using a silicone remover. (The Hook & loop fasteners cannot be used once it has been in contact with silicone). We recommend Intensive Tar Remover made by AutoGlym. Wipe off thoroughly **any residue with a separate clean dry cloth**.

**NOTE:** the adhesive takes 24hrs to reach full adhesion – do not touch during.



## STEP 1. PREPARATIONS


- Remove the cargo cover. It may be replaced later.
- Please tilt the 2nd-row seats to the most upright position. (Image A)

*Please note: not all of the photographs are specific to your vehicle*



## STEP 2. INSTALLING THE BASE

- Line up 2x ref:124 to the chrome strip on either side of the cargo area (total 4). (Image B)
- Lift up the false floor and attach the ref:124 to the inside plastic surface next to the chrome strip using 2 self adhesive loop fastener tabs for each ref:124 (total 8). (Image C+D)
- Attach the hook fastener portion of the ref:124 to the loop fastener tabs fixed in place previously. Then lower the false floor with the loop portion protruding out. (Image E)
- Place the cargo liner into the cargo area with the Hatchbag logo at the seat end. Flatten the base so it fits snugly against the edges.
- Fasten the two ties on the front of the base to the folded 3rd-row seats' headrest posts to secure the liner. (Image F)
- Pull the base taut from the rear and secure it to the ref:124 sticking out from the false floor. (Image G)
- Attach the ref:121 clips to both sides of the liftgate opening. To do this pull back the rubber edge and push the plastic section of the clip behind the panel (Image H). Slide the clip down to the same level as the hook fastener on the liner. (Image I)

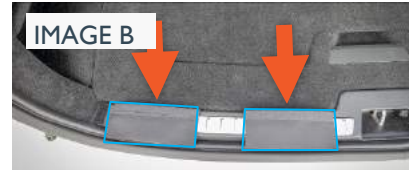

### STEP 3. INSTALLING THE FRONT

- **PLUS / SPLIT VERSION ONLY** - Fasten the hook & loop fastener between the side panel and the front panel. (Image J)
- For the left and right headrest: Pass the elastic loop fastener straps through the middle of the headrest and around to fasten them to the hook fastener patch on the front panel of the liner. (Image K)
- For the middle headrest: Loop the hook & loop fastener straps around both headrest posts. (Image L). Makes sure to hold the front part of the base in position to avoid pulling the Hatchbag too far up.

#### REAR PLUS VERSIONS

You MUST unfasten the hook & loop fasteners and the headrest straps before you recline the upper parts of the rear seats. (Please refer to REAR PLUS options on website to see detailed photo)



### STEP 4 INSTALLING THE SIDES

- Stick the long lengths of self adhesive loop fastener strips on the plastic above the top edge of the carpet (Image M) to which the side of the liner will attach.
- As shown in Image N, use the 20mm self adhesive loop fastener on the green highlighted areas with the longer 680mm strip on the liftgate end and the 150mm strip at the seat end. Use the 30mm loop fastener strip on the area indicated by the yellow line on Image N.



# OPTIONAL EXTRAS

*Please note the following photos are not specific to your vehicle*

## STEP 5A. LIFTGATE COVER

- Line up the liftgate cover with the liftgate and clean the areas where the self-adhesive loop fastener tabs will be stuck. (Image 1)
- Use the self-adhesive loop fastener tabs to attach the cover to the plastic trim.



## STEP 5B. BUMPER FLAP

- Install Cargo liner
- Attach the Bumper Flap to the loop fastener strip located at the base of the Cargo liner.
- The Bumper Flap is one standard length for all models. Trim the length to suit your requirements. Ensure you do not cut through the stitching.
- The Bumper Flap either folds into the vehicle OR can be detached and stored elsewhere when you close the liftgate.
- Please note that the edges of the fabric are not bound so that any mud, dirt or water can run off.



## OPTIONAL EXTRAS page 2

*Please note the following photos are not specific to your vehicle*

### **STEP 5D. CARGO LINER EXTENSION**

The Cargo Liner Extension provides superior protection to the rear seats when purchased with a REAR PLUS option.

- The Cargo Liner Extension is designed to attach to a Rear Plus version liner.
- It provides additional protection to the back of the front seats and the extended floor area when the rear seats are folded flat.
- It does not offer full protection to the rear doors.



*The Bumper Flap and the Cargo Liner Extension cannot be added at a later date.*