

## KIA SPORTAGE 2016-present

### LOW + RAISED

Our ref: H0622-LOW/RAISED

### PACKAGING REQUIREMENTS.

#### ☐ CARGO LINER

- **10 x tabs** self-adhesive loop fastener
- **1850 mm x 30mm wide** self-adhesive loop fastener

#### ☐ LIFTGATE COVER

- **21 x tabs** self-adhesive loop fastener



*Photo shows a Low Version Rear Split option*



### VERY IMPORTANT PREPARATION

To ensure a good bond, when using the self-adhesive hook & loop fastener to attach the cover to the plastic trim it is most important to remove silicone film from the vehicle trim. Silicone is applied during manufacture and can also be found in many valeting products. It is **highly likely there will be a build-up of silicone**. Before applying any self-adhesive fastener pads, the surface **MUST be thoroughly** cleaned using a silicone remover. (The fasteners cannot be used once they have been in contact with silicone). We recommend Intensive Tar Remover made by AutoGlym. Wipe off thoroughly **any residue with a separate clean dry cloth**.

**NOTE:** the adhesive takes 24hrs to reach full adhesion – do not touch during.



### -LOW VERSION ONLY-


Ensure the floor is positioned at its lowest level

Exposed moldings



## STEP 1. PREPARATION

- Remove the cargo cover. It may be replaced later.
- The upper parts of the rear seats must be set to this middle rake position. To set: recline the upper parts of the rear seats until they are aligned with the cargo cover locating recesses. (Image A)

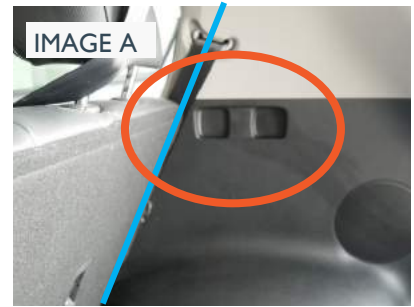

## STEP 2. INSTALLING THE BASE

- Place the cargo liner in the cargo area with the Hatchbag logo at the seat end. Flatten the base so it fits snugly against the edges. Work from the liftgate end forwards. (Image B) The hook fasteners on the back side of the base panel attach directly to the carpet.



## STEP 3. INSTALLING THE FRONT

- - **PLUS / SPLIT VERSION ONLY** - fasten the hook & loop fasteners between the side panel and the seat panel. (Image C)
- Loop the hook & loop fastener straps around the corresponding headrest posts. (Image D). Make sure to hold the front part of the base in position to avoid pulling the cargo liner too far up.



### REAR PLUS VERSIONS


You **MUST** unfasten the hook & loop fastener and the headrest straps before you recline the upper parts of the rear seats. (Please refer to **REAR PLUS** options on website to see detailed photo)

## STEP 4. INSTALLING THE SIDES

- Align the front end of the sides of the cargo liner to the sides of the cargo area. Attach the 30mm wide self adhesive fastener strips to the nearside in line with the hook fastener on the liner as shown in **Image E**.

*You will need to make one cut in the top strip so that it follows the curved profile; see **Image F**.*

- Use the self-adhesive loop fastener tabs to attach the remainder of the sides see **Image E + G**.
- Repeat for the opposite side see **Image H**.

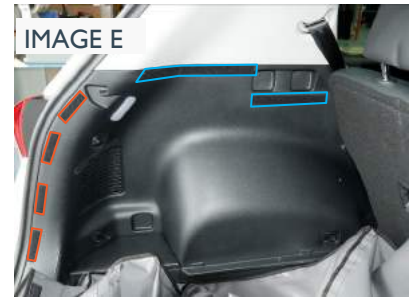

**LOW  
VERSION**



**RAISED  
VERSION**



## STEP 5. INSTALLING THE BACK

- Attach the rear end of the cargo liner to the cargo area using the 30mm wide self adhesive loop fastener. Place the leading edge of the fastener just under the rubber seal, and ensure you press the fastener into each ridge to ensure maximum adhesion. (**Image I+ J**)



# OPTIONAL EXTRAS

*Please note the following photos are non-specific to your vehicle*

## STEP 5A. LIFTGATE COVER

- Line up the liftgate cover with the liftgate and clean the areas where the self-adhesive fastener tabs will be stuck. **(Image 1)**
- Use the self-adhesive loop fastener tabs to attach the cover to the plastic trim.



## STEP 5C. BUMPER FLAP

- Install Cargo liner
- Attach the Bumper Flap to the loop fastener strip located at the base of the cargo liner.
- The Bumper Flap is one standard length for all models. Trim the length to suit your requirements. Ensure you do not cut through the stitching.
- The Bumper Flap either folds into the vehicle OR can be detached and stored elsewhere when you close the liftgate.

