

Land Rover Discovery - 2017 - present (inc 2021 facelift)

Our ref: H0640-SE7

PACKAGING REQUIREMENTS.

- CARGO LINER
 - **2 x 550 mm** 50mm wide self-adhesive loop fastener
 - **2 x 2450mm** 30mm wide self-adhesive loop fastener
 - **2 x tabs** self-adhesive loop fastener tabs
 - **6 x ref: 121**

- SILL FLAPS
 - **10 x tabs** self-adhesive loop fastener

- LIFTGATE COVER REF:121
 - **20 x tabs** self-adhesive loop fastener



Rear Split Cargo liner with additional Sill flaps & 3rd row seat belt covers; prepared for Bumper Flap



VERY IMPORTANT PREPARATION



To ensure the self-adhesive hook & loop fastener sticks to the plastic trim, you **MUST CLEAN** all grime from the plastic and **REMOVE** all **SILICONE** applied during manufacture and detailing.

To do this please:

1. Use a silicone remover, such as AutoGlym Intensive Tar Remover and apply generously to the surface you want to adhere to.
2. Using a separate clean & dry cloth, thoroughly dry the surface until the cloth starts to drag. Attach one self-adhesive fastener tab to see if it sticks. (Repeat steps 1 to 2 if necessary)
3. Attach the fasteners and let them fully adhere over the next 24 hours for the best bond.

**The fasteners cannot be used once they have been in contact with silicone. Replacement kits are available on our website.*





Take care when installing the Cargo liner that you do not accidentally move or recline the rear seats by pressing the electric seat controls. If you can switch off the controls in the cargo area, we would advise to do so.

VEHICLES WITHOUT LAND ROVER DOG BARRIER

(please note not all the photographs are specific to your vehicle)



LAND ROVER DOG BARRIER INSTALLED - SKIP TO NEXT PAGE

STEP 1. PREPARATIONS

- Remove the cargo cover. It may be replaced later.
- Ensure the 3rd-row seats are flat
- Slide the 2nd-row seats forward to access the 3rd-row seat headrests.



STEP 2. INSTALLING THE BASE

- Place the Cargo liner in the cargo area with the Hatchbag logo at the seat end. **(Image A)**
- Wrap the two elastic loops over the 2nd-row headrests. **(Image B)**



STEP 3. INSTALLING THE BACK

- Raise the liftgate plate to an upright position and slide the cargo liner pocket over the top edge. **(Image C)**
- Lower the liftgate plate.



STEP 3. INSTALLING THE FRONT

- - PLUS / SPLIT VERSION ONLY - Fasten the hook & loop fastener between the side panels and the seat panel. (Image D)
- Starting with the middle headrest, loop the hook & loop fastener straps around both headrest posts (Image E). Make sure to hold the front part of the base in position to avoid pulling the cargo liner too far up. Repeat the procedure with the left and right headrests.

VERY IMPORTANT

You **MUST** unfasten the hook & loop fastener and the headrest straps before you recline the upper parts of the rear seats. (Please refer to *REAR PLUS / SPLIT* options on website to see detailed photo)



CONTINUE TO PAGE 6 “ALL VERSIONS”



VEHICLES WITH LAND ROVER DOG BARRIER

Please note not all of the photographs are specific to your vehicle

STEP 1A. PREPARATIONS

- Remove the cargo cover. It may be replaced later.
- Ensure the 3rd-row seats are flat
- Slide the 2nd-row seats forward to access the 3rd-row seat headrests.



STEP 2A. INSTALLING THE BASE

- Place the Cargo liner in the cargo area with the Hatchbag logo at the seat end. (Image F)
- Wrap the two elastic loops over the 2nd-row headrests. (Image G)
- Feed the front panel under the dog barrier, and around the floor brackets. If you have a Rear Split option you will have to pull hard to feed the split seams through. (Image H & I)



STEP 3A. INSTALLING THE BACK

- Raise the liftgate plate to an upright position and slide the Cargo liner pocket over the top edge. (Image J)
- Lower the power liftgate plate.



STEP 4A. INSTALLING THE FRONT

- Feed the hook fastener section of the sides panels past the dog barrier down strut. **(Image K)**
- Attach the hook fastener to the loop fasteners on the front panel. **(Image L- this is not specific to your model)**
- Starting with the middle headrest, fasten the hook & loop fastener straps around both headrest posts. **(Image M)**. Do not over tighten to avoid pulling the base of the cargo liner off the floor. Repeat the procedure with the left and right headrests.

PLEASE NOTE

You **MUST** unfasten the hook & loop fasteners and the headrest straps before you recline the upper parts of the rear seats. *(Please refer to REAR PLUS / SPLIT options on website to see detailed photo)*



ALL VERSIONS

STEP 5. INSTALLING THE SIDES

- Pull the nearside 3rd-row seat belt down and into the middle of the car whilst fastening the corresponding hook & loop fastener closure behind it. (Image N)






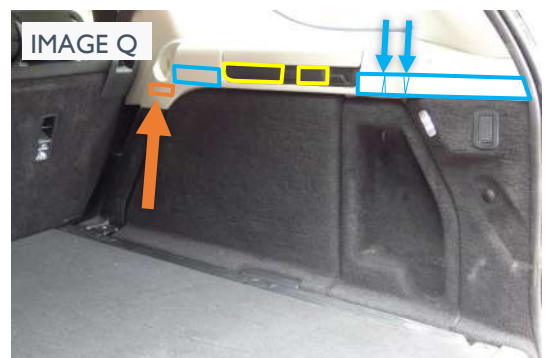
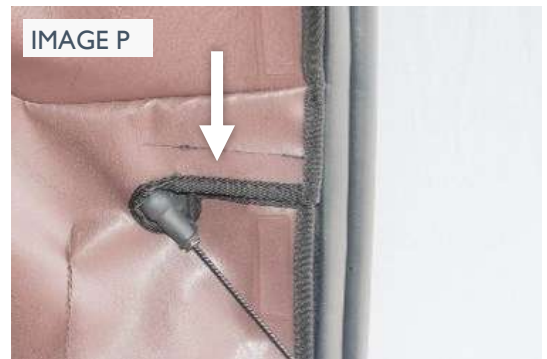
PTG - POWER LIFTGATE VERSION ONLY

- At the liftgate end: feed the loop fastener section of the fastener closure behind the “liftgate plate support cable” (Image O)
- Attach the hook & loop fastener closure above the cable. (Image P)



ALL VERSIONS

-  Attach the 50mm wide self-adhesive loop fastener to the bottom edge of the side plastic panels just above the carpeted area. You will need cut to length and also snip the fastener strip to allow it to sit flat on the plastic : (See blue arrows & highlights in Image Q)
-  Attach the 30mm wide self-adhesive loop fastener to the plastic below the storage pocket. Trim to leave the hook and push button exposed. (See yellow highlights in Image Q)
-  Attach a single loop fastener tab to just under the cargo cover mounting recess (see Orange arrow in Image Q)
- Attach the hook fastener on the top edge of the cargo liner to the fastener previously fixed in place.



STEP 5 CONT. INSTALLING THE SIDES

- Insert 3 x ref:121 fastener tabs on each side of the liftgate end of the cargo area. To do this, peel back the rubber and slot the plastic end of the fastener tabs into the void behind the carpeted panel of the cargo area. (Image R)
- Slide these fastener tabs up or down so that they align with the hook fasteners on the back of the cargo liner. (Image S)
- Repeat on opposite side.



STEP 5. CONTINUED

ADDITIONAL WINDOW SILL FLAP OPTION

- Undo the top edge of the side of the cargo liner and attach the narrow section of the sill flap to the fastener previously attached. Align the slots to the slots in the side of the cargo liner. (See blue arrows Image T)
- Locate where the hook fastener is located on the back of the sill flap : align and attach 5 small loop fastener tabs on the plastic window sill. Now fasten the flap to this fastener. (Highlighted in green - Image U)
- Re-attach the cargo liner side-panel to the sill flap and exposed fastener. (highlighted in orange - Image V)
- Repeat on opposite side.



OPTIONAL EXTRAS

Please note the following photos are not specific to your vehicle

STEP 5A. LIFTGATE COVER

- Remove the mini cargo cover.
- Line up the liftgate cover with the liftgate and clean the areas where the self-adhesive fastener tabs will be stuck. (image 4)
- Use the self-adhesive loop fastener tabs to attach the cover to the plastic trim.
- The three slots allow the replacement of the mini cargo cover.



STEP 5B. BUMPER FLAP

- Install Cargo liner
- Attach the Bumper Flap to the loop fastener strip located at the base of the cargo liner. (image 5)
- The Bumper Flap either folds into the vehicle OR can be detached and stored elsewhere when you close the liftgate.



OPTIONAL EXTRAS page 2

Please note the following photos are not specific to your vehicle

STEP 5C. CARGO LINER EXTENSION

The Cargo Liner Extension provides superior protection to the rear seats when purchased with a REAR PLUS / SPLIT. (Image 6)

- The Cargo Liner Extension is designed to attach to a Rear Plus version liner.
- It provides additional protection to the back of the front seats and the extended floor area when the rear seats are folded flat.
- It does not offer full protection to the rear doors



The Bumper Flap and the Cargo Liner Extension cannot be added at a later date

