

## PACKAGING REQUIREMENTS.

### CARGO LINER

- **2x 700 mm** 30mm wide self-adhesive loop fastener
- **2x 430 mm** 30mm wide self-adhesive loop fastener
- **2x 270 mm** 30mm wide self-adhesive loop fastener
- **1x tabs** self-adhesive loop fastener

### LIFTGATE COVER

- **24 x tabs** self-adhesive loop fastener

## FIAT 500L - 2014-present

**RAISED AND LOWERED FLOOR**  
OUR REF: H0646-FRSD/FLOW



Split cargo liner prepped for cargo liner extension



## VERY IMPORTANT PREPARATION



To ensure the self-adhesive hook & loop fastener stick to the plastic trim, you **MUST CLEAN** all grime from the plastic and **REMOVE** all **SILICONE** applied during manufacture and detailing.

### To do this please:

1. Use a silicone remover, such as Auto-Glym Intensive Tar Remover and apply generously to the surface you want to adhere to.
2. Using a separate clean & dry cloth, thoroughly dry the surface until the cloth starts to drag. Attach one self-adhesive fastener tab to see if it sticks. (Repeat step 1 to 2 if necessary) Extra tabs have been provided.
3. Attach the self-adhesive fasteners and let them fully adhere over the next 24 hours for the best bond.

*\*The self-adhesive fasteners cannot be used once they have been in contact with silicone. Replacement kits are available on our website.*




## STEP 1. PREPARATIONS

- Remove the cargo cover. It may be replaced later.
- Set your seats to be most upright and slid as far back to the liftgate as possible.
- Set the false floor to the level that matches your order.

### FLOW - LOW FLOOR ONLY

- Remove the divider under the rear seats, this may not be replaced (Image A).

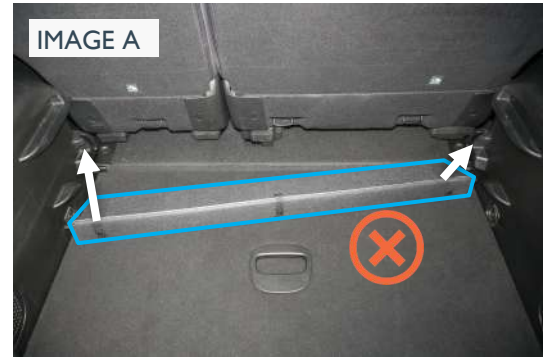

## STEP 2. FITTING THE BASE

- Place the boot liner into the car boot with the Hatchbag logo at the seat end. Flatten the base so it fits snugly against the edges. The loop fasteners on the rear side of the liner attach directly to the carpet. (Image B)




## STEP 3. FITTING THE FRONT

- - PLUS / SPLIT VERSION ONLY - fasten the hook & loop fasteners between the side panels and the seat panel. (Image C)
- Starting with the middle headrest, loop the hook & loop fastener straps around both headrest posts. (Image D). Make sure to hold the front part of the base in position to avoid pulling the cargo liner too far up. Repeat the procedure with the left and right headrests.

### REAR PLUS VERSIONS

You MUST unfasten the hook & loop fasteners and the headrest straps before you recline the upper parts of the rear seats. (Please refer to REAR PLUS / SPLIT options on website to see detailed photo)

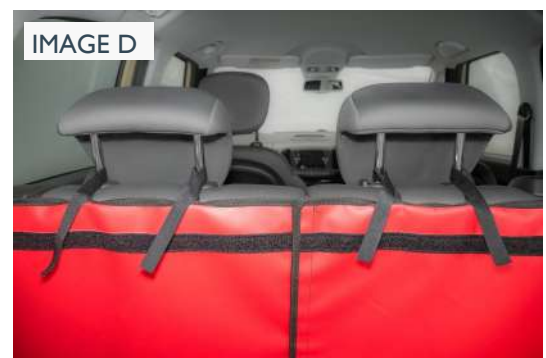

## STEP 4. FITTING THE SIDES

- Attach the 270mm long self-adhesive loop fastener (green) onto plastic side panel running below the net. (Image E&F)
- Attach the 430mm long self-adhesive loop fastener (blue) onto plastic sides stepped up from the previous fastener, running between the liftgate opening and the net, just below the hook and the pocket edge. (Image E&F)
- Attach the 700mm long self-adhesive loop fastener (yellow) onto plastic running along the tailgate opening from the tailgate lock, up the sides to the previously attached fastener. (Image E,F,G&H)
- Snip the self-adhesive fastener strips in the corners to ease around the bend.
- Stick one self-adhesive fastener tab on the centre inside of the back panel in line with the hook fastener located at the back panel of the cargo liner. (arrow - Image G&H)
- Starting at the step in the side panel (arrow - Image F) fasten the hook fastener on the back side of the cargo liner to the previously attached loop fasteners. (Image F,I & J)



LOW FLOOR VERSION - LEFT SIDE



LOW FLOOR VERSION - RIGHT SIDE

## OPTIONAL EXTRAS

*Please note: the following photos are not specific to your vehicle*

### STEP 5A. TAILGATE COVER

- Line up the liftgate cover with the liftgate and clean the areas where the self-adhesive loop fastener tabs will be stuck. (Image 1)
- Use the self-adhesive loop fastener tabs to attach the cover to the plastic trim.

### STEP 5B. BUMPER FLAP

- Install Cargo Liner
- Attach the Bumper Flap to the loop fastener strip located at the base of the boot liner. (Image 2)
- The Bumper Flap either folds into the vehicle OR can be detached and stored elsewhere when you close the liftgate.



## OPTIONAL EXTRAS page 2

*Please note: the following photos are not specific to your vehicle*

### STEP 5C. CARGO LINER EXTENSION

The Cargo Liner Extension provides superior protection to the rear seats when purchased with a REAR PLUS option. (Image 3)

- The Cargo Liner Extension is designed to attach to a Rear Plus version liner.
- It provides additional protection to the back of the front seats and the extended cargo area when the rear seats are folded flat.
- The max width is 148cm (see photo on left).
- It does not offer full protection to the rear doors.

