

Jeep Renegade – 2014–present

Shape 2 – False Floor Removed & False Floor Raised

our ref: H0668-SH2-FOUT / SH2-FRSD

Packaging requirements:

- CARGO LINER
 - 1x 1530mm 30mm wide self-adhesive loop fastener
 - 8x tabs self-adhesive loop fastener
- LIFTGATE COVER
 - 22 x tabs self-adhesive loop fastener



FOUT VERSION – Split cargo liner prepared for a bumper flap and Extension



VERY IMPORTANT PREPARATION



To ensure the self-adhesive hook & loop fastener stick to the plastic trim, you **MUST CLEAN** all grime from the plastic and **REMOVE** all **SILICONE** applied during manufacture and valeting.

To do this please:

1. Use a silicone remover, such as AutoGlym Intensive Tar Remover and apply generously to the surface you want to adhere to.
2. Using a separate clean & dry cloth, thoroughly dry the surface until the cloth starts to drag. Attach one self-adhesive fastener tab to see if it sticks. (Repeat steps 1 to 2 if necessary) Extra tabs have been provided.
3. Attach the self-adhesive fasteners and let them fully adhere over the next 24 hours for the best bond.

**The self-adhesive fasteners cannot be used once they have been in contact with silicone. Replacement kits are available on our website.*



STEP 1. PREPARATIONS

- Remove the cargo cover. It may be replaced later.



FOUT VERSION (False Floor Removed)
Remove the variable false floor, and store it, it cannot be used with this cargo liner.

FRSD VERSION (False Floor Raised)
Raise the variable false floor to the highest level.



STEP 2. INSTALLING THE BASE

- Place the cargo liner into the cargo area with the Hatchbag logo at the seat end. Flatten the base so it fits snugly against the edges. The hook fasteners on the back side of the liner directly to the carpet. (Image A)



STEP 3. INSTALLING THE FRONT

- - **PLUS / SPLIT VERSION ONLY** - Fasten the hook & loop fasteners between the side panels and the seat panel. (Image B)
- Starting with the middle headrest, fasten the hook & loop fastener straps around both headrest posts. (Image C). Make sure to hold the front part of the base in position to avoid pulling the cargo liner too far up. Repeat the procedure with the left and right headrests.





REAR PLUS VERSIONS

You **MUST** unfasten the hook & loop fasteners and the headrest straps before you recline the upper parts of the rear seats. (Please refer to **REAR PLUS / SPLIT options on website to see detailed photo**)

STEP 4A. INSTALLING THE SIDES CONTINUED

- Raise the sides up to see where the hook fastener on the cargo liner aligns to the sides of the cargo area.
- Using the long 30mm wide loop fastener strip, cut off 3 appropriate lengths to stick onto the cargo area in the areas highlighted in blue in [Image D and E](#).
- Attach 5 loop fastener tabs to the areas highlighted in yellow in [Image D and E](#).

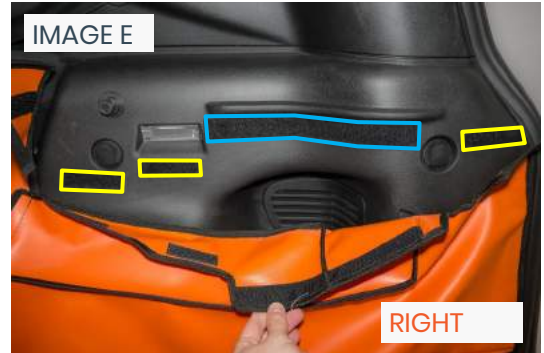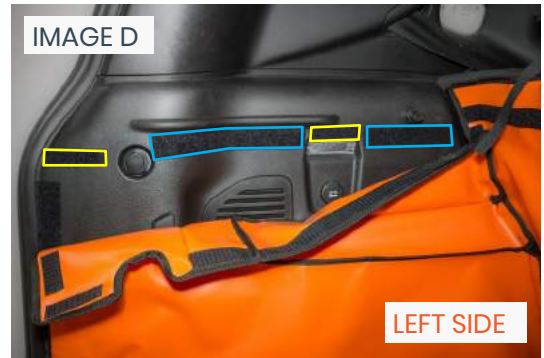

STEP 4B. INSTALLING THE BACK

- Cut a further 2 lengths from the 30mm wide loop fastener strip, and attach them on the rear sides running along the rubber seal. (highlighted in green, [Image F and G](#)). The cut length should be long enough to attach the top 3 vertical fastener tabs welded onto each side of the cargo liner.
- Cut 2 more lengths from the 30mm wide loop fastener strip, and stick them on the rear ridged panel going on either side from the central lock to the d-ring slot. (highlighted in pink, [Image I](#))
- Attach one self adhesive tab, on each side of the cargo area, in the corner between the 2 previously attached loop fastener strips and aligned with the hook fastener tab on the cargo liner. (yellow circle, [Image F, G and H](#))



FOOT VERSION (False Floor Removed)

Attach the final self adhesive tab in the center of the back panel as shown with the white arrow in [Image H](#).

- Attach hook fastener on the cargo liner to the tabs fixed in place previously.

OPTIONAL EXTRAS

Please note: the following photos are not specific to your vehicle

STEP 5A. LIFTGATE COVER

- Line up the liftgate cover with the liftgate and clean the areas where the self-adhesive loop fastener tabs will be stuck. (Image 1)
- Use the self-adhesive loop fastener tabs to attach the cover to the plastic trim.



STEP 5C. BUMPER FLAP

- Install Cargo liner
- Attach the Bumper Flap to the loop fastener strip that has been manufactured into the base of the cargo liner. (Image 2)
- The Bumper Flap either folds into the vehicle OR can be detached and stored elsewhere when you close the liftgate.



OPTIONAL EXTRAS page 2

Please note: the following photos are not specific to your vehicle

STEP 5C. CARGO LINER EXTENSION

The Cargo Liner Extension provides superior protection to the rear seats when purchased with a REAR PLUS option. (image 3)

- The Cargo Liner Extension is designed to attach to a Rear Plus version liner.
- It provides additional protection to the back of the front seats and the extended floor area when the rear seats are folded flat.
- It does not offer full protection to the rear doors



The Bumper Flap and the Cargo Liner Extension cannot be added at a later date.

STEP 5E. FREQUENT USE INSTALLATION KIT

- If you frequently remove/install your Cargo liner from/to your vehicle, please note that the carpet will “fluff” up. We offer an alternative Frequent Use Installation Kit (Image 4+5)

The Frequent Use Kit is available to buy from our online store. Simply add it to your order from the store. The kit can also be ordered at a later date.

