

Jeep Renegade - 2014-present

Shape 3 - False Floor Removed & False Floor Raised

PACKAGING REQUIREMENTS.

☐ CARGO LINER

- **2x 170 mm** 30mm wide self-adhesive loop fastener
- **2x 210 mm** 30mm wide self-adhesive loop fastener
- **2x 270 mm** 30mm wide self-adhesive loop fastener
- **2x 440 mm** 30mm wide self-adhesive loop fastener
- **8x tabs** self-adhesive loop fastener

☐ LIFTGATE COVER

- **22 x tabs** self-adhesive loop fastener



FOOT VERSION - Rear Plus with seat split & ski flap



VERY IMPORTANT PREPARATION



To ensure the self-adhesive hook & loop fastener stick to the plastic trim, you **MUST CLEAN** all grime from the plastic and **REMOVE** all **SILICONE** applied during manufacture and detailing.

To do this please:

1. Use a silicone remover, such as AutoGlym Intensive Tar Remover and apply generously to the surface you want to adhere to.
2. Using a separate clean & dry cloth, thoroughly dry the surface until the cloth starts to drag. Attach one self-adhesive fastener tab to see if it sticks. (Repeat steps 1 to 2 if necessary) Extra tabs spares have been provided.
3. Attach the self-adhesive fasteners and let them fully adhere over the next 24 hours for the best bond.



**The self-adhesive fasteners cannot be used once they have been in contact with silicone. Replacement kits are available on our website.*



STEP 1. PREPARATIONS

- Remove the cargo cover. It may be replaced later.



FOUT VERSION (False Floor Removed)

Remove the variable false floor, and store it, it cannot be used with this cargo liner.


FRSD VERSION (False Floor Raised)

Raise the variable false floor to the highest level.



STEP 2. INSTALLING THE BASE

- Place the cargo liner into the cargo area with the Hatchbag logo at the seat end. Flatten the base so it fits snugly against the edges. The loop fasteners on the back side of the liner attach directly to the carpet. (Image A)

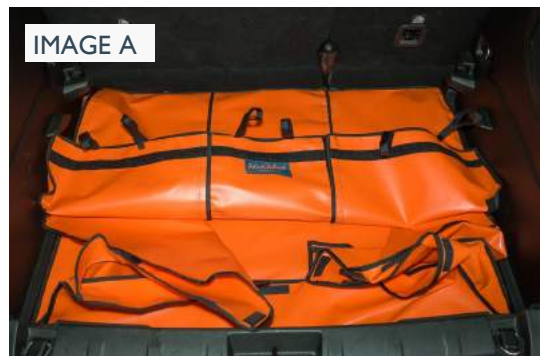

STEP 3. INSTALLING THE FRONT

- **PLUS / SPLIT VERSION ONLY** - Fasten the hook & loop fasteners between the side panels and the seat panel. (Image B)
- Starting with the middle headrest, loop the hook & loop fastener straps around both headrest posts. (Image C). Make sure to hold the front part of the base in position to avoid pulling the cargo liner too far up. Repeat the procedure with the left and right headrests.



REAR PLUS VERSIONS

You **MUST** unfasten the hook & loop fasteners and the headrest straps before you recline the rear seat uppers. (Please refer to **REAR PLUS / SPLIT** options on website to see detailed photo)

STEP 4A: INSTALLING THE BACK



Stick the 270mm long self-adhesive loop fastener strip (blue) to the plastic panel between the liftgate lock and the D-Ring slot (Image D)



Attach the 440mm long self-adhesive loop fastener strip (pink) along the liftgate edge of the cargo area starting from the D-Ring slot running along the sides until aligned with the top of the speaker (Image E). Snip the self-adhesive fastener strips in the corners to ease around the bend. Repeat on opposite side.



FOOT VERSION (False Floor Removed)



Attach one self-adhesive loop fastener tab to the center behind the liftgate lock and aligned with the hook fastener on the liner. Green arrow. (Image D).

- Attach the hook fasteners on the liner to the fasteners fixed in place previously.




STEP 4B: INSTALLING THE SIDES



- On the right attach self adhesive loop fastener tabs (highlighted in yellow - image F) to the plastic side panels aligned with the hook fasteners on the sides of the cargo liner. Some fasteners will be on the top rim of the speaker.



- For the left side you need to attach the 210 mm long self adhesive loop fastener (highlighted in blue - Image G), the 170 mm long self adhesive loop fastener (highlighted in red - Image G) and two self adhesive loop fastener tabs (highlighted in yellow - Image G)
- Attach the hook fasteners on the liner to the fasteners fixed in place previously.

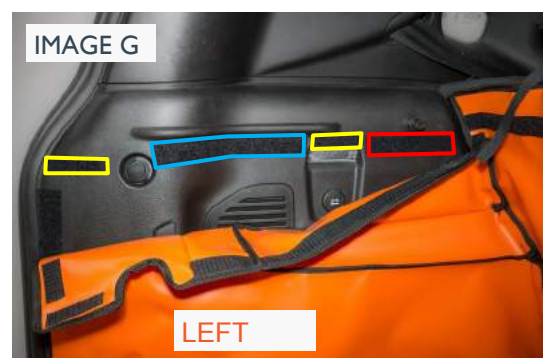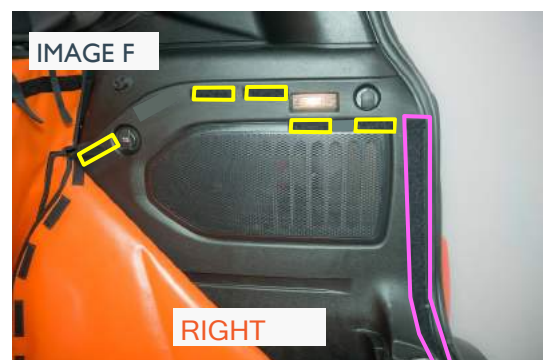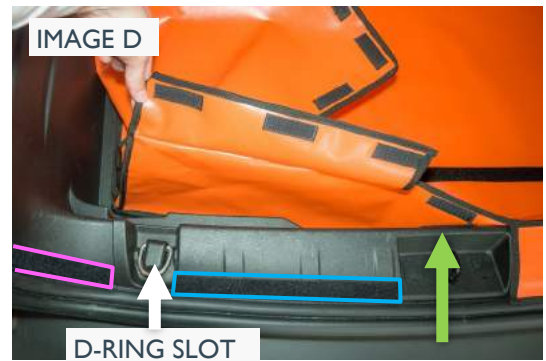

OPTIONAL EXTRAS

Please note the following photos are not specific to your vehicle

STEP 5A. LIFTGATE COVER

- Line up the liftgate cover with the liftgate and clean the areas where the self-adhesive loop fastener tabs will be stuck. (Image 1)
- Use the self-adhesive loop fastener tabs to attach the cover to the plastic trim.



STEP 5B. BUMPER FLAP

- Install Cargo liner
- Attach the Bumper Flap to the loop fastener strip located at the base of the cargo liner. (Image 2)
- The Bumper Flap either folds into the vehicle OR can be detached and stored elsewhere when you close the liftgate.



OPTIONAL EXTRAS page 2

Please note: the following photos are not specific to your vehicle

STEP 5C. CARGO LINER EXTENSION

The Cargo Liner Extension provides superior protection to the rear seats when purchased with a REAR PLUS option. (Image 3)

- The Cargo Liner Extension is designed to attach to a Rear Plus version liner.
- It provides additional protection to the back of the front seats and the extended floor area when the rear seats are folded flat.
- It does not offer full protection to the rear doors



The Bumper Flap and the Cargo Liner Extension cannot be added at a later date.