

RANGE ROVER VELAR - 2018-present

OUR REF: H0692

PACKAGING REQUIREMENTS.

CARGO LINER

- **2x 380 mm** 30mm wide self-adhesive loop fastener

LIFTGATE COVER

- **20x tabs** self-adhesive loop fastener



No Net & Dog Barrier version - Rear Split option



VERY IMPORTANT PREPARATION



To ensure the self-adhesive hook & loop fastener stick to the plastic trim, you **MUST CLEAN** all grime from the plastic and **REMOVE** all **SILICONE** applied during manufacture and detailing.

To do this please:

1. Use a silicone remover, such as AutoGlym Intensive Tar Remover and apply generously to the surface you want to adhere to.
2. Using a separate clean & dry cloth, thoroughly dry the surface until the cloth starts to drag. Attach 1 self-adhesive fastener tab to see if it sticks. (Repeat steps 1 to 2 if necessary) Extra tabs have been provided.
3. Attach the self-adhesive fasteners and let them fully adhere over the next 24 hours for the best bond.

**The self-adhesive fasteners cannot be used once they have been in contact with silicone. Replacement kits are available on our website.*



VEHICLES NOT INSTALLED WITH RANGE ROVER DOG BARRIER

Please note not all of the photographs are specific to your vehicle

STEP 1. PREPARATIONS

- Remove the cargo cover. It may be replaced later.

STEP 2. INSTALLING THE BASE

- Place the Cargo liner into the cargo area with the Hatchbag logo at the seat end. Flatten the base so it fits snugly against the edges. The hook fasteners on the back side attach directly to the carpet. **(Image A)**
- Stick the 380mm long self-adhesive loop fastener strip onto the plastic panel located on either side of the lock at the liftgate end of the cargo area. Attach the Cargo liner to it using the hook fastener on the liner. **(Image B)**



STEP 3. INSTALLING THE FRONT

- **- PLUS / SPLIT VERSION ONLY** - Fasten the hook & loop fasteners between the side panels and the seat panel. **(Image C)**
- Starting with the middle headrest, fasten the hook & loop fastener straps around both headrest posts. **(Image D)**. Make sure to hold the front part of the base in position to avoid pulling the Cargo liner too far up. Repeat the procedure with the left and right headrests.




REAR PLUS VERSIONS

You **MUST** unfasten the hook & loop fasteners and the headrest straps before you recline the upper parts of the rear seats. **(Please refer to REAR PLUS / SPLIT options on website to see detailed photo)**

STEP 4. INSTALLING THE SIDES

- Attach the hook fastener on the top edge of the sides of the liner directly on the top edge of the carpeted sides of the cargo area. (Image E & F)
- Its best to start at the back end (orange arrow, Image E & F) and work your way forward.

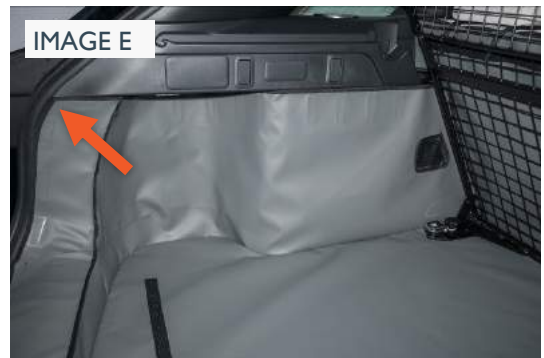

VEHICLES INSTALLED WITH RANGE ROVER DOG BARRIER

Please note not all of the photographs are specific to your vehicle

STEP 1A . INSTALLING THE BASE

- Place the Cargo liner in the cargo area with the Hatchbag logo at the seat end. (Image G)
- Fold the rear seats and feed the front panel under the dog barrier, and around the floor brackets. If you have a Rear Split option you will have to pull hard to feed the split seams through. (Image H & I)




STEP 1A. INSTALLING THE BASE continued

- Flatten the base so it fits snugly against the edges. The hook fasteners on the back side attach directly to the carpet.
- Stick the 380mm long self-adhesive loop fastener strip on the plastic panel on either side of the lock at the liftgate end of the cargo area. Attach the Cargo liner to it using the hook fastener on the liner. (Image J)




STEP 2A. INSTALLING THE FRONT

- Feed the hook fastener section of the sides past the dog barrier down strut (Image K)
- Attach the hook fastener to the loop fasteners on the front panel. (Image L)
- Starting with the middle headrest, fasten the hook & loop fastener straps around both headrest posts. (Image M). Do not over tighten to avoid pulling the base of the Cargo liner off the floor. Repeat the procedure with the left and right headrests.

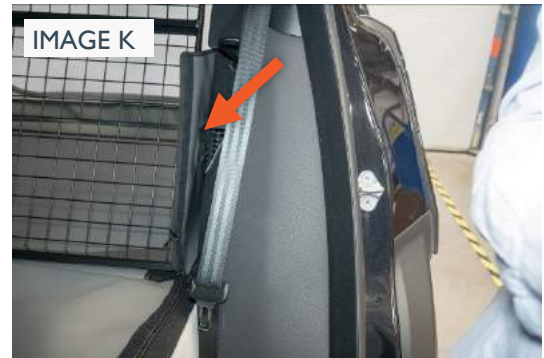

PLEASE NOTE

You **MUST** unfasten the hook & loop fasteners and the headrest straps before you recline the upper parts of the rear seats. (Please refer to **REAR PLUS / SPLIT** options on website to see detailed photo)

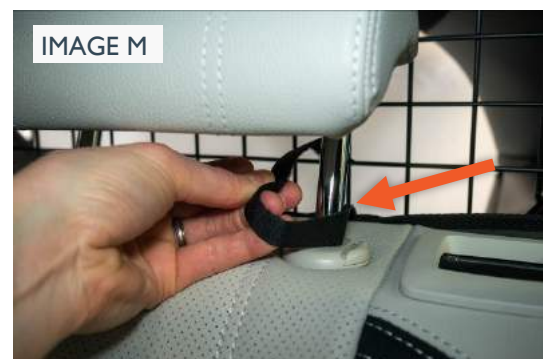

FINAL STEP - refer to previous **STEP 4. INSTALLING THE SIDES** to complete your cargo liner installation

OPTIONAL EXTRAS

Please note: the following photos are not specific to your vehicle

STEP 5A. LIFTGATE COVER

- Line up the liftgate cover with the liftgate and clean the areas where the self-adhesive loop fastener tabs will be stuck. (Image 1)
- Use the self-adhesive loop fastener tabs to attach the cover to the plastic trim.

STEP 5B. BUMPER FLAP

- Install Cargo liner
- Attach the Bumper Flap to the loop fastener strip located at the base of the cargo liner. (Image 2)
- The Bumper Flap either folds into the vehicle OR can be detached and stored elsewhere when you close the liftgate.




OPTIONAL EXTRAS page 2

Please note the following photos are not specific to your vehicle

STEP 5C. CARGO LINER EXTENSION

The Cargo Liner Extension provides superior protection to the rear seats when purchased with a REAR PLUS option. (Image 3)

- The Cargo Liner Extension is designed to attach to a Rear Plus version liner.
- It provides additional protection to the back of the front seats and the extended floor area when the rear seats are folded flat.
- It does not offer full protection to the rear doors.

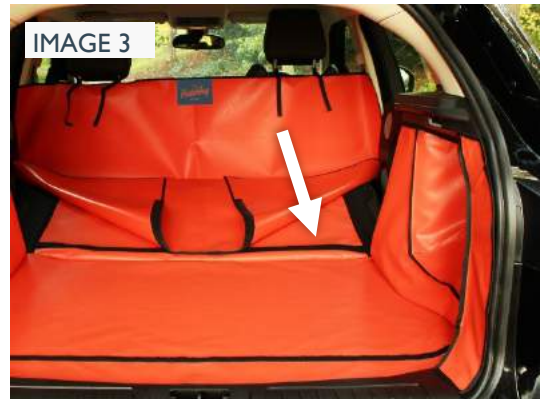

The Bumper Flap and the Cargo Liner Extension cannot be added at a later date.

STEP 5D. FREQUENT USE INSTALLATION KIT

- If you frequently remove/install your cargo liner from/to your vehicle please note that the carpet will “fluff” up. We have an alternative Frequent Use Installation Kit. (Image 4+5)

The Frequent Use Installation Kit is available to buy from our online store. Simply add it to your order from the store. The kits can also be ordered at a later date.

