

VW Tiguan 7-seater (3rd-row seats folded) – 2017 - present  
OUR REF: H0708-V

**PACKAGING REQUIREMENTS.**

**CARGO LINER**

- 2 x 320mm
  - 2 x 480mm
  - 2 x 770mm
- } 30mm wide self-adhesive loop fastener
- 9 x tabs self-adhesive loop fastener
  - 2 x tabs ref. 117



**LIFTGATE COVER**

- 20 x tabs self-adhesive loop fastener

Rear split Cargo liner, prepared for bumper flap and cargo liner extension



**VERY IMPORTANT PREPARATION**



To ensure the self-adhesive hook & loop fastener stick to the plastic trim, you **MUST CLEAN** all grim from the plastic and **REMOVE** all **SILICONE** applied during manufacture and detailing.

**To do this please:**


1. Use a silicone remover, such as AutoGlym Intensive Tar Remover and apply generously to the surface you want to adhere to.
2. Using a separate clean & dry cloth, thoroughly dry the surface until the cloth starts to drag. Attach one self-adhesive fastener tab to see if it sticks. (Repeat steps 1 to 2 if necessary) Extra tabs have been provided.
3. Attach the self-adhesive fasteners and let them fully adhere over the next 24 hours for the best bond.



*\*The self-adhesive fasteners cannot be used once they have been in contact with silicone. Replacement kits are available on our website.*

## STEP 1. PREPARATIONS

- Slide seats as far back to the liftgate as possible and recline the seats to suit your preference. The cargo liner will not fit if the seats are slid forwards (**right seat on Image A**)
- Remove the load cover. It may be replaced later. (**blue arrow - Image A**)
- Put the headrests in their highest position. (**orange arrows - Image A**)

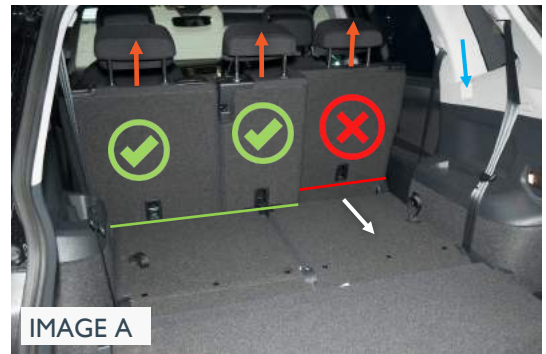

## STEP 2. INSTALLING THE BASE

- Place the cargo liner into the cargo area with the Hatchbag logo at the seat end. Flatten the base so it fits snugly against the edges. The hook fasteners on the back side attach directly to the carpet. (**Image B**)



## STEP 3. INSTALLING THE FRONT

- **- PLUS / SPLIT VERSION ONLY** - Fasten the hook & loop fasteners between the side panels and the seat panel. (**Image C**)
- Starting with the middle headrest, fasten the hook & loop fastener straps around both headrest posts. (**orange arrows - Image D**). Make sure to hold the front part of the base in position to avoid pulling the Cargo liner too far up. Repeat the procedure with the left and right headrests.






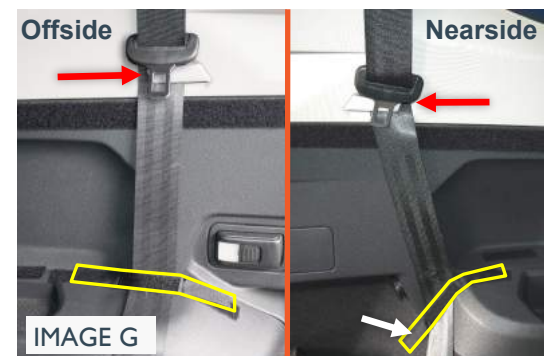
### REAR PLUS VERSIONS

You **MUST** unfasten the hook & loop fasteners and the headrest straps before you recline the upper parts of the rear seats. (*Please refer to REAR PLUS / SPLIT options on website to see detailed photo*)




## STEP 4. INSTALLING THE SIDES

- Put the hanger (white arrow - Image E) on flattened position.
- Stick the 770mm self-adhesive loop fastener strips (highlighted in blue - Images E & F) on the plastic sides in line with the hook fastener sewn on the back of the liner sides .  

- Then stick 3 self adhesive loop fastener tabs on the sides of the seatbelt on top of the plastic protrusion as shown (highlighted in pink - Images E & F)  

- Also stick 2 self adhesive loop fastener tabs (highlighted in green - Images E & F) in line with the ones welded on the reverse of the cargo liner sides.  

- Place the seatbelts into their holders (red arrows - Image G), attach the two ref.117 tabs (highlighted in yellow - Image G) to the loop fastener tabs previously fixed in place (starting from the carpet on left side (white arrow - Image G)) trapping the seatbelts flush to the plastic sides.
- Finally push the Cargo liner into the pocket on each side of the cargo area (orange arrow - Image H) and attach the hook fastener on the liner to the loop fastener strips (highlighted in blue - Images E & F) and self adhesive tabs previously fixed in place. (highlighted in green - Images E & F)

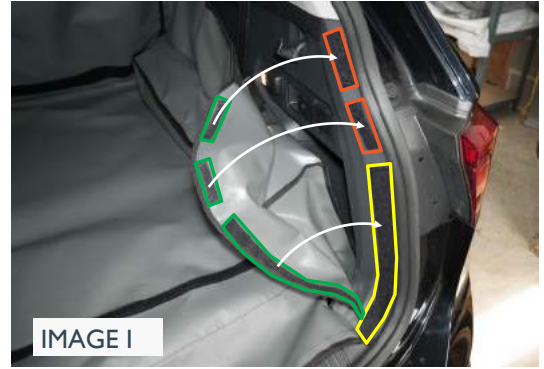

## STEP 5. INSTALLING THE BACK

- Stick two *self-adhesive loop fastener tabs* (highlighted in orange - image I) and one of the 320mm *self-adhesive loop fastener strip* (highlighted in yellow - image I) on the plastic panel located at the liftgate end of the left side of the Cargo area, aligned with the hook fastener on the back side of the Cargo liner (highlighted in green - Image I)
- Repeat on left side.
- Attach one 480mm self adhesive loop fastener strip (highlighted in blue - Image J) on either side of the liftgate lock, aligned with the hook fastener on the edge of the Cargo liner.
- Attach the Cargo liner starting with the four hook fasteners on the back side of the base of the Cargo liner (highlighted in red - Image K) directly to the carpeted floor, finish attaching to the loop fasteners previously fixed in place using the hook fastener on the back side of the Cargo liner.



# OPTIONAL EXTRAS

*Please note: the following photos are not specific to your vehicle*

## STEP 5A. LIFTGATE COVER

- Line up the liftgate cover with the liftgate and clean the areas where the self-adhesive loop fastener tabs will be stuck. (Image 1)
- Use the self-adhesive loop fastener tabs to attach the cover to the plastic trim.



## STEP 5B. BUMPER FLAP

- Install Cargo liner
- Attach the Bumper Flap to the loop fastener strip located at the base of the cargo liner. (Image 2)
- The Bumper Flap either folds into the vehicle OR can be detached and stored elsewhere when you close the liftgate.



## OPTIONAL EXTRAS page 2

*Please note the following photos are not specific to your vehicle*

### STEP 5C. CARGO LINER EXTENSION

The Cargo Liner Extension provides superior protection to the rear seats when purchased with a REAR PLUS option. (Image 3)

- The Cargo Liner Extension is designed to attach to a Rear Plus version liner.
- It provides additional protection to the back of the front seats and the extended floor area when the rear seats are folded flat.
- It does not offer full protection to the rear doors



*The Bumper Flap & Cargo Liner Extension cannot be added at a later date.*

