

Ford Ecosport – 2018 – present

2 Versions available

our ref: H0755-SH1 - FMID / FOUT

INSTALLATION KIT CONTENTS

- FMID**
 - 4x tabs self-adhesive loop fastener
- FOUT**
 - 1x 965 mm 30mm wide self-adhesive loop fastener
 - 4x tabs self-adhesive loop fastener
- LIFTGATE COVER**
 - 22 x tabs self-adhesive loop fastener



Left photo: FOUT Cargo liner – Rear Plus version prepped for Bumper Flap and Cargo liner extension

Right photo: FMID Cargo liner – Rear Plus with Seat Split version prepped for Bumper Flap



VERY IMPORTANT PREPARATION



To ensure the self-adhesive hook & loop fastener stick to the plastic trim, you **MUST CLEAN** all grime from the plastic and **REMOVE** all **SILICONE** applied during manufacture and detailing.

To do this please:

1. Use a silicone remover, such as 'AutoGlym Intensive Tar Remover' and apply generously to the surface you want to adhere to.
2. Using a separate clean, dry cloth, thoroughly dry the surface until the cloth starts to drag. Attach one self-adhesive fastener tab to see if it sticks. (Repeat step 1 to 2 if necessary) Extra tabs have been provided.
3. Attach the self-adhesive fasteners and let them fully adhere over the next 24 hours for the best bond.

**The self-adhesive fasteners cannot be used once they have been in contact with silicone. Replacement kits are available on our website.*



STEP 1. PREPARATIONS

- Remove the cargo cover. It may be replaced later.
- Set the floor level to fit the specifications of your order.

FOUT version only

- Remove the two recess inserts. (Image A)
- Wrap the two covers around the inserts and fasten the hook and loop fastener closure at the back face of the inserts. (Image B)



STEP 2. INSTALLING THE BASE

- Place the cargo liner into the cargo area with the Hatchbag logo at the seat end. Flatten the base so it fits snugly against the edges. The hook fasteners on the back side of the liner attach directly to the carpet. (Image C)




STEP 3. INSTALLING THE FRONT

- - PLUS / SPLIT VERSION ONLY - Fasten the hook & loop fasteners between the side panels and the seat panel. (Image D)
- Starting with the middle headrest, fasten the hook & loop fastener straps around both headrest posts. (Image E). Make sure to hold the front part of the base in position to avoid pulling the cargo liner too far up. Repeat the procedure with the left and right headrests.

REAR PLUS VERSIONS

- You MUST unfasten the hook & loop fasteners + the headrest straps before you recline upper part of the rear seat seats. (Please refer to REAR PLUS / SPLIT options on website to see detailed photo)

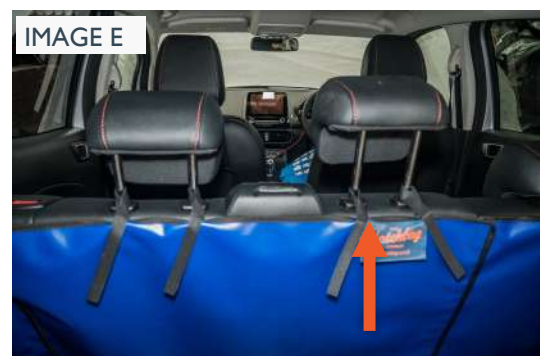

STEP 4. INSTALLING THE SIDES

- Attach 2x tabs self-adhesive loop fastener to the plastic panels just behind the rears seats (Image F) Repeat on opposite side.
- Attach the 2 hook fastener strips on the back side of the Cargo liner to these loop fastener tab. (Image F) Repeat on opposite side.
- Unlock the seats, and fold forwards just enough to push the cover into the corner above the wheel arch. (Image G) Repeat on opposite side.
- Attach the the hook fastener welded along the top edge of the side of the Cargo liner sides directly onto the carpeted sides of the cargo area. (Image H)

FOOT version only

- Put the recess inserts back into the appropriate slots in the side panels. (Image I & J)



STEP 5. INSTALLING THE BACK

FMID version only

- The hook fasteners on the back side of the Cargo liner floor panel attach directly to the carpet. (Image K)

FOUT version only

- Stick the 965 mm 30mm wide self-adhesive loop fastener on the vertical face of the plastic trim at the liftgate end of the cargo area. Attach the cargo liner to it using the hook fastener on the liner. (Image L & M)



FOUT - LEFT



FOUT - RIGHT



FMID - LEFT



FMID - RIGHT

OPTIONAL EXTRAS

Please note : the following photos are not specific to your vehicle.

STEP 5A. LIFTGATE COVER

- Line up the liftgate cover with the liftgate and clean the areas where the self-adhesive loop fastener tabs will be stuck. (Image 1)
- Use the self-adhesive loop fastener tabs to attach the cover to the plastic trim.



STEP 5B. BUMPER FLAP

- Install the Cargo liner
- Attach the Bumper Flap to the loop fastener strip located at the base of the Cargo liner. (Image 2)
- The Bumper Flap either folds into the vehicle OR can be detached and stored elsewhere when you close the liftgate.



OPTIONAL EXTRAS page 2

Please note: the following photos are not specific to your vehicle

STEP 5C. CARGO LINER EXTENSION

The Cargo Liner extension provides superior protection for the rear seats when purchased in conjunction with a REAR PLUS option. (image 3 & 4)

- The Cargo Liner Extension is designed to attach to a Rear Plus/Split version liner.
- It provides additional protection to the back of the front seats and the extended floor area when the rear seats are folded flat.
- It does not offer full protection for the rear doors.
- Attach the Cargo Liner Extension to the main cargo liner (Image 3)
- Fasten the two ties in the corner together (Orange arrows - Image 4)
- Fasten the hook & loop fastener straps around both headrest posts. (Blue arrows - Image 4)

The Bumper Flap and the Cargo Liner Extension cannot be added at a late date.

STEP 5D. FREQUENT USE INSTALLATION KIT

- If you frequently remove/install your Cargo liner from/to your vehicle, please note that the carpet will “fluff” up. We offer an alternative Frequent Use Installation Kit (image 5+6)

The Frequent Use Installation Kit is available from our online store. Simply add it to your order from the Store. The kit can also be ordered at a later date.

