

Installation Instructions

hatchbag.us

BMW 6 Series Gran Turismo — 2018 - present

our ref: H0777

PACKAGING REQUIREMENTS:

CARGO LINER

- 2 x 280 mm 30mm wide self-adhesive loop fastener
- 2 x 400 mm 30mm wide self-adhesive loop fastener
- 2 x 450 mm 30mm wide self-adhesive loop fastener
- 2 x 40 mm 30mm wide self-adhesive loop fastener
- 6 x tabs self-adhesive loop fastener
- Elastic Loop A





Split Cargo liner prepped for a cargo liner extension and bumper flap

- LIFTGATE COVER
- 18 x tabs self-adhesive loop fastener





To ensure the self-adhesive hook & loop fastener stick to the plastic trim, you MUST CLEAN all grime from the plastic and REMOVE all SILICONE applied during manufacture and detailing.

To do this please:

- 1. Use a silicone remover, such as 'AutoGlym Intensive Tar Remover' and apply generously to the surface you want to adhere to.
- 2. Using a separate clean, dry cloth, thoroughly dry the surface until the cloth starts to drag. Attach one self-adhesive fastener tab to see if it sticks. (Repeat steps 1 to 2 if necessary) Extra tabs have been provided.
- 3. Attach the self-adhesive fasteners and let them fully adhere over the next 24 hours for the best bond.

*The self-adhesive fasteners cannot be used once they have been in contact with silicone. Replacement kits are available on our website.





STEP 1. PREPARATIONS

- Remove the cargo cover. It may be replaced later.
- Open the access panel on the right, place the *Elastic Loop A* around the panel as shown in Image A (highlighted in orange)
- Open the access panel in the base, place the *Elastic Loop B* around the panel as shown on Image B (highlighted in blue) with the fastener closest to the side of the cargo area.



STEP 2. INSTALLING BASE

- Fold the rear seats flat prior to placing the Cargo liner in the cargo area.
- Place the Cargo liner into the cargo area with the Hatchbag logo at the seat end. Flatten the base so it fits snugly against the edges. (Image C)
- Push the two foam-filled tabs sewn onto the front end of the base into the slot between the floor and the rear seats. Lifting the seats a little may open up the gap. Be sure to keep the base straight. Fold the seats back up trapping the foam tabs. (Image D)





STEP 3. INSTALLING THE FRONT

- PLUS / SPLIT VERSION ONLY Fasten the hook & loop fasteners between the side panels and the seat panel. (image E)
- Starting with the middle headrest, fasten the hook & loop fastener straps around both headrest posts. (image F). Make sure to hold the front part of the base in position to avoid pulling the cargo liner too far up. Repeat the procedure with the left and right headrests.

REAR PLUS VERSIONS

You MUST unfasten the hook & loop fasteners + the headrest straps before you recline the upper parts of the rear seats. (*Please refer to REAR PLUS / SPLIT options on website to see detailed photo*)



STEP 4. INSTALLING THE SIDES



Attach one of the 280mm loop fastener (highlighted in green - Image G) and one of the 40mm loop fastener (highlighted in red - Image G) to the side plastic panels in line with the hook fastener sewn on the reverse side of the Cargo liner as sown in Image G.




On the under side off the plastic panel, attach *one loop fastener tab* between the light and the vent grill (highlighted in yellow - Image H)



Stick another *two loop fastener tabs* as shown on Image I on the liftgate end of the side of the cargo area.

- Attach one of the *450mm loop fastener* at the liftgate end of the side of the cargo area (highlighted in pink Image J)
- Fasten the hook fastener strip on the back side of the Cargo liner to the previously attached fasteners and elastic loop A.
- Fasten the two straps sewn on the top of the sides of the cargo liner through the plastic vent grill. (image L)
- The side of the cargo liner should look like Image K.
- Repeat on the other side.



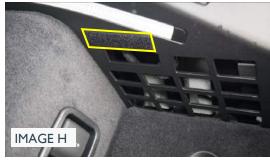









STEP 5. INSTALLING THE BACK

• Stick the 400mm loop fastener to the panel located on both sides of the lock at the liftgate end of the cargo area. Attach the cargo liner to it using the hook fastener on the liner. (highlighted in blue -Image M)

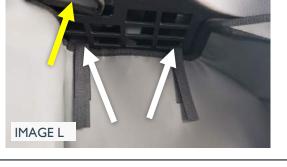

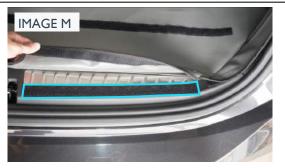

OPTIONAL EXTRAS

Please note: the following photos are not specific to your vehicle.

STEP 5A. LIFTGATE COVER

- Line up the liftgate cover with the liftgate and clean the areas where the self-adhesive loop fastener tabs will be stuck. (Image 1)
- Use the self-adhesive loop fastener tabs to attach the cover to the plastic trim.

STEP 5B. BUMPER FLAP



Install the Cargo liner

Attach the Bumper Flap to the loop fastener strip located at the base of the cargo liner. (Image 2)

• The Bumper Flap either folds into the vehicle OR can be detached and stored elsewhere when you close the liftgate.

STEP 5C. CARGO LINER EXTENSION

The Cargo Liner Extension provides superior protection to the rear seats when purchased in conjunction with a REAR PLUS option. (image 3 & 4)

- The Cargo Liner Extension is designed to attach to a Rear Plus/Split version liner.
- It provides additional protection to the back of the front seats and the extended floor area when the rear seats are folded flat.
- It does not offer full protection for the rear doors.
- Attach the Cargo Liner extension to the main Cargo liner (Image 3)
- Fasten the two ties in the corner together (Orange arrows Image 4)
- Fasten the hook & loop fastener straps around both headrest posts. (Blue arrows Image 4)

The Bumper Flap and the Cargo Liner Extension cannot be added at a late date







