

Jaguar I-Pace – 2019 – present

our ref: H0778

Packaging requirements:

CARGO LINER

- **2 x 290mm** 30mm wide self-adhesive loop fastener
- **1 x tab** self-adhesive loop fastener

LIFTGATE COVER

- **20 x tabs** self-adhesive loop fastener



Jaguar I-Pace Cargo liner: Rear split, prepped for Bumper Flap & Cargo Liner Extension



VERY IMPORTANT PREPARATION



To ensure the self-adhesive hook & loop fastener stick to the plastic trim, you **MUST CLEAN** all grime from the plastic and **REMOVE** all **SILICONE** applied during manufacture and detailing.

To do this please:

1. Use a silicone remover, such as AutoGlym Intensive Tar Remover and apply generously to the surface you want to adhere to.
2. Using a separate clean, dry cloth, thoroughly dry the surface until the cloth starts to drag. Attach one self-adhesive fastener tab to see if it sticks. (Repeat steps 1 to 2 if necessary.) Extra tabs have been provided.
3. Attach the self-adhesive fasteners and let them fully adhere over the next 24 hours for the best bond.

**The self-adhesive fasteners cannot be used once they have been in contact with silicone. Replacement kits are available on our website.*



STEP 1. PREPARATIONS

- Remove the cargo cover. It may be replaced later.
- Put the headrests in their highest position. (Image A)



STEP 2. INSTALLING THE BASE

- Place the cargo liner into the cargo area with the Hatchbag logo at the seat end. Flatten the base so it fits snugly against the edges. The hook fasteners on the back side attach directly to the carpet. (Image B)



STEP 3. INSTALLING THE FRONT

- - PLUS / SPLIT VERSION ONLY - Fasten the hook & loop fasteners between the side panels and the seat panel. (Image C)
- Starting with the middle headrest, fasten the hook & loop fastener straps around both headrest posts. (image D). Make sure to hold the front part of the base in position to avoid pulling the cargo liner too far up. Repeat the procedure with the left and right headrests.




REAR PLUS VERSIONS

You MUST unfasten the hook & loop fasteners + the headrest straps before you recline the upper parts of the rear seats. (Please refer to REAR PLUS / SPLIT options on website to see detailed photo)



STEP 4. INSTALLING THE SIDES

- Attach the hook fastener on the top edge of the Cargo liner sides directly to the carpet along the top edge of the carpeted sides of the cargo area). (Image E)
- On the left side, push the liner into the recess (green arrow - image F) and fasten like on the other side.

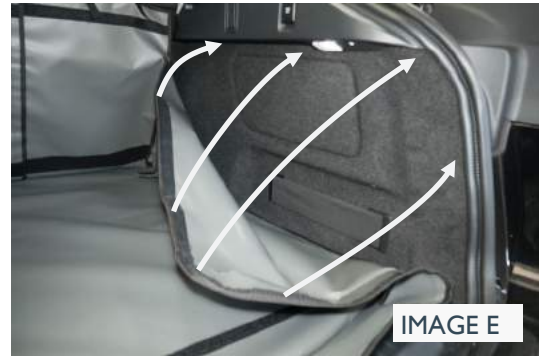

STEP 5. INSTALLING THE BACK

- Stick the 290mm self-adhesive loop fasteners onto the plastic panel located on either side of the lock at the liftgate end of the cargo area (highlighted in green - Image G).
- Place the self-adhesive loop fastener tab on the center of the back plastic panel, aligned with the hook fastener on the back side of the cargo liner (highlighted in yellow - Image H).
- Attach the cargo liner to it using the hook fastener on the liner.



OPTIONAL EXTRAS

Please note the following photos are non-specific to your vehicle

STEP 5A. LIFTGATE COVER

- Line up the liftgate cover with the liftgate and clean the areas where the self-adhesive loop fastener tabs will be stuck. (Image 1)
- Use the self-adhesive loop fastener tabs to attach the cover to the plastic trim.

STEP 5B. BUMPER FLAP

- Install Cargo Liner
- Attach the Bumper Flap to the loop fastener strip located at the base of the Cargo Liner. (Image 2)
- The Bumper Flap either folds into the vehicle OR can be detached and stored elsewhere when you close the liftgate.



OPTIONAL EXTRAS page 2

Please note the following photos are non-specific to your vehicle

STEP 5C. CARGO LINER EXTENSION

The Cargo Liner Extension provides superior protection to the rear seats when purchased with a REAR PLUS option. (Image 3 & 4)

- The Cargo Liner Extension is designed to attach to a Rear Plus/Split version liner.
- It offers additional protection to the back of the front seats and the extended floor area when the rear seats are folded flat.
- It does not offer full protection to the rear doors
- Attach the floor extension to the main Cargo liner (Image 3)
- Tie the two laces in the corner together (Orange arrows - Image 4)
- Fasten the hook & loop fastener straps around both headrest posts. (Blue arrows—Image 4)

The Bumper Flap and the Cargo Liner Extension cannot be added at a late date.

STEP 5E. FREQUENT USE INSTALLATION KIT

- If you frequently remove/install your cargo liner from/to your vehicle please note that the carpet will “fluff” up. We offer an alternative Frequent Use Installation Kit (image 5+6)

The Frequent Use Installation Kit is available to buy from our online store. Simply add it to your order from the store. The kits can also be ordered at a later date.

