

Installation Instructions

hatchbag.us

Mitsubishi Outlander Sport - 2013 Present

our ref: H0793-SPKNO

INSTALLATION KIT CONTENTS

- 4 x 380 mm 30mm wide self-adhesive loop fastener
- 1 x 230 mm 30mm wide self-adhesive loop fastener
- 1 x 170 mm 30mm wide self-adhesive loop fastener
- 2 x 150 mm 30mm wide self-adhesive loop fastener
- 5 x tabs self-adhesive loop fastener
 - LIFTGATE COVER
- 20 x tabs self-adhesive loop fastener



Split cargo liner prepped for a cargo liner extension and bumper flap



To ensure the self-adhesive hook & loop fastener stick to the plastic trim, you MUST CLEAN all grime from the plastic and REMOVE all SILICONE applied during manufacture and detailing.

To do this please:

- 1. Use a silicone remover, such as AutoGlym Intensive Tar Remover, and apply generously to the surface you want to adhere to.
- 2. Using a separate clean, dry cloth, thoroughly dry the surface until the cloth starts to drag. Attach one self-adhesive fastener tab to see if it sticks. (Repeat steps 1 and 2 if necessary.) Extra tabs have been provided.
- 3. Attach the self-adhesive fasteners and let them fully adhere over the next 24 hours for the best bond.


*The self-adhesive fasteners cannot be used once they have been in contact with silicone. Replacement kits are available on our website.





STEP 1. PREPARATIONS

- Remove the cargo cover. It may be replaced later.
- Put the headrests in their highest position.

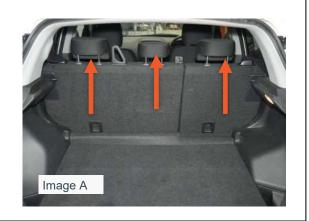

STEP 2. INSTALLING THE BASE

• Place the cargo liner into the car cargo area with the Hatchbag logo at the seat end. Flatten the base so it Installs snugly against the edges. The hook fasteners on the underside attach directly to the carpet. (Image B)



STEP 3. INSTALLING THE FRONT

- PLUS / SPLIT VERSION ONLY Fasten the hook & loop fasteners between the side panels and the seat panel. (Image C)
- Starting with the middle headrest, fasten the hook & loop fastener straps around both headrest posts. (Image D). Make sure to hold the front part of the base in position to avoid pulling the cargo liner too far up. Repeat the procedure with the left and right headrests.

REAR PLUS VERSIONS


You MUST unfasten the hook & loop fasteners and the headrest straps before you recline the upper part of the rear seats. (*Please refer to REAR PLUS / SPLIT options on website to see detailed photo.*)




STEP 4. INSTALLING THE SIDES

- Push the liner inside the wells (white arrows image G & H)
- On both sides of the cargo stick the following loop fasteners in line with the hook fasteners sewn & welded on the reverse side of the cargo liner as shown highlighted on image E & F.
 - Green 380 mm loop fastener
 - Orange 230 mm loop fastener
 - Pink 170 mm loop fastener
 - Yellow 150 mm loop fastener
 - Blue loop fastener tabs
- If necessary snip the self-adhesive fastener strips at the corners to ease around the curves.
- Fasten the hook fastener sewn onto the top and back edge on both sides of the cargo liner directly onto the previously attached loop fasteners. (image E & F)



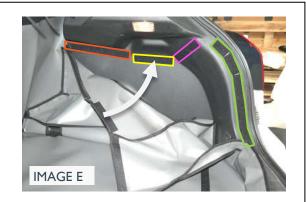

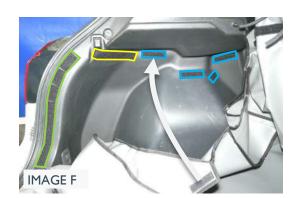



STEP 5. INSTALLING THE BACK

Stick 2 x 380mm self-adhesive loop fasteners onto the plastic panel located on both sides at the Liftgate end of the cargo area (highlighted in green - image I). Fasten the cargo liner to them using the hook fastener sewn on the reverse side of the cargo liner.



OPTIONAL EXTRAS

Please note: the following photos are not specific to your vehicle.

STEP 5A. LIFTGATE COVER

- Line up the Liftgate cover with the Liftgate and clean the areas where the self-adhesive loop fastener tabs will be stuck. (Image 1)
- Use the self-adhesive loop fastener tabs to attach the cover to the plastic trim.

STEP 5B. BUMPER FLAP

Install the cargo liner

- Attach the Bumper Flap to the loop fastener strip located at the base of the cargo liner. (Image 2)
- The Bumper Flap either folds into the vehicle OR can be detached and stored elsewhere when you close the Liftgate.



OPTIONAL EXTRAS PAGE 2

Please note: the following photos are not specific to your vehicle.

STEP 5C. CARGO LINER EXTENSION

The Cargo liner extension provides superior protection for the rear seats when purchased with a REAR PLUS option. (image 3 & 7)

- The cargo liner extension is designed to attach to a Rear Plus/Split version liner.
- It provides additional protection for the back of the front seats and the extended floor area when the rear seats are folded flat.
- It does not offer full protection to the rear doors
- Attach the cargo liner extension to the main cargo liner (Image 3)
- Fasten the two ties in the corner together (Orange arrows Image 4)
- Fasten the hook & loop fastener straps around the headrest posts. (Blue arrows Image 4)
- Attach the hook fastener tab welded on the back corner of the cargo liner extension to the cargo liner on the cargo side (Green arrow image 5)
- Repeat on opposite side

Please Note: The Bumper Flap 5B & the Cargo liner Extension 5C cannot be added at a later date.



