

Jeep Wrangler 4 Door - 2018 - present

our ref: H0815

INSTALLATION KIT CONTENTS :

CARGO LINER

- **2 x 400 mm** 30mm wide self-adhesive loop fastener
- **2 x 270 mm** 20mm wide self-adhesive loop fastener
- **17 x tabs** self-adhesive loop fastener

LIFTGATE COVER

- **16 x tabs** self-adhesive loop fastener



HYNO-SPK: Cargo liner prepped for a bumper flap and cargo liner extension.



VERY IMPORTANT PREPARATION



To ensure the self-adhesive hook & loop fastener stick to the plastic trim, you **MUST CLEAN** all grime from the plastic and **REMOVE** all **SILICONE** applied during manufacture and valeting.

To do this please:

1. Use a silicone remover, such as AutoGlym Intensive Tar Remover, and apply generously to the surface you want to adhere to.
2. Using a separate clean, dry cloth, thoroughly dry the surface until the cloth starts to drag. Attach one self-adhesive fastener tab to see if it sticks. (Repeat steps 1 and 2 if necessary.) Extra tabs have been provided.
3. Attach the self-adhesive fasteners and let them fully adhere over the next 24 hours for the best bond.

**The self-adhesive fasteners cannot be used once they have been in contact with silicone. Replacement kits are available on our website.*



Please note: not all of the photographs are specific to your vehicle.


STEP 1. PREPARATIONS

- Put the headrests in their highest position



STEP 2. INSTALLING THE BASE

- Place the cargo liner into the cargo area with the Hatchbag logo at the seat end. Flatten the base so it fits snugly against the edges. (Image B)
- Lift the floor and insert it in the pocket sewn on the under side of the liner's base (Image C)
- On both sides of the cargo area base stick the one self-adhesive loop fastener tab in line with the hook welded on the reverse side of the cargo liner as highlighted in Image D

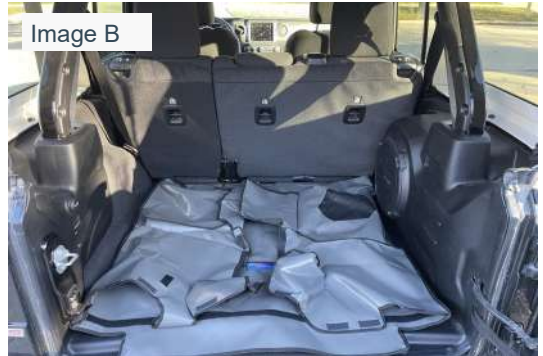

STEP 3. INSTALLING THE FRONT

- **PLUS VERSION ONLY** - Fasten the hook & loop fasteners between the side panels and the seat panel. (Image E)
- Attach the two hook fasteners welded on to the reverse side of the cargo liner under the middle head rest. (white arrows, Image F).
- Fasten the hook & loop fastener straps around both headrest posts of the two headrests. (orange arrows, Image F).



REAR PLUS VERSIONS

You **MUST** unfasten the hook & loop fasteners and the headrest straps before you recline the upper part of the rear seats. (Please refer to **REAR PLUS / SPLIT** options on website to see detailed photo.)



STEP 4. INSTALLING THE SIDES

- On both sides of the cargo area stick the self-adhesive loop fasteners in line with the hook fasteners welded on the reverse side (Image G, H, I & J)
 -
 - Yellow Self-adhesive loop fasteners tabs
 - 270 mm 20mm wide self –adhesive loop fastener
 - 400 mm 30mm wide self –adhesive loop fastener
- Fasten the hook fastener sewn and welded onto the top and back edge on both sides of the cargo liner directly onto the previously attached loop fasteners. (Image I & J)

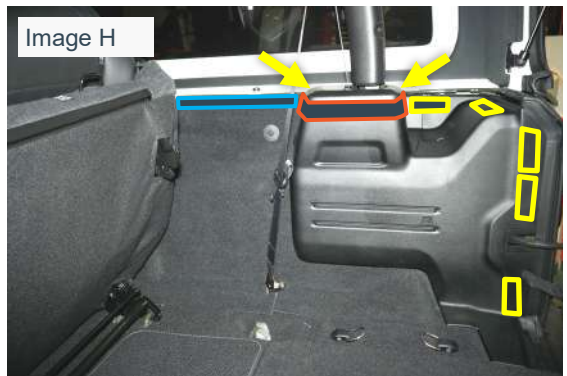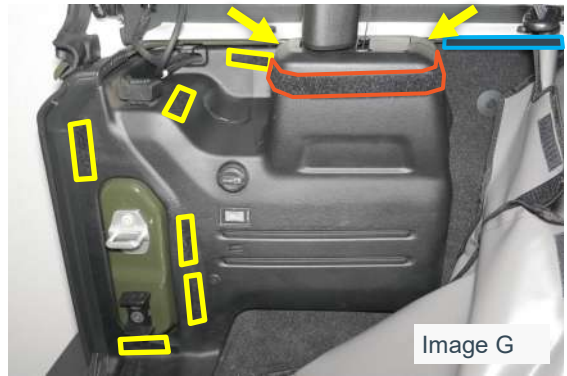

OPTIONAL EXTRAS

Please note: not all of the photographs are specific to your vehicle.

STEP 6A. LIFTGATE COVER

- Line up the liftgate cover with the liftgate and clean the areas where the self-adhesive loop fastener tabs will be stuck. (Image 1)
- Use the self-adhesive loop fastener tabs to attach the cover to the plastic trim.



STEP 6B. BUMPER FLAP



Fit the cargo liner

Attach the Bumper Flap to the loop fastener strip located at the base of the cargo liner. (Image 2)

- The Bumper Flap either folds into the vehicle OR can be detached and stored elsewhere when you close the liftgate.



STEP 6C. CARGO LINER EXTENSION

The Cargo liner extension provides superior protection for the rear seats when purchased with a REAR PLUS option.

- The Cargo liner extension is designed to attach to a Rear Plus/Split version liner.
- It provides additional protection for the back of the front seats and the extended floor area when the rear seats are folded flat.
- It does not offer full protection to the rear doors
- Attach the Cargo liner extension to the base of the main cargo liner (Image 3)
- Detach the sides of the cargo liner to expose the hook fasteners highlighted in blue on images G & H on page 3 and attach the extension to them.
- Fasten the two ties in the corner together (Orange arrows - Image 4)
- Fasten the hook & loop fastener straps around the headrest posts. (Blue arrows - Image 4)
- Repeat on opposite side



Please Note: The Bumper Flap & the Cargo liner Extension cannot be added at a later date.