

# Jeep Wrangler 2 Door (JL) - 2018 - Present

our ref: H0837

## INSTALLATION KIT CONTENTS :

- CARGO LINER SH1
  - 17 x tabs self-adhesive loop fastener
  
- CARGO LINER SH2
  - 2 x 400 mm 20mm wide self-adhesive loop fastener
  - 2 x 300 mm 30mm wide self-adhesive loop fastener
  - 17 x tabs self-adhesive loop fastener
  
- LIFTGATE COVER
  - 16 x tabs self-adhesive loop fastener



Left: SH1 cargo liner prepped for a seat flap and a bumper flap

Right: SH2 cargo liner prepped for a bumper flap



## VERY IMPORTANT PREPARATION



To ensure the self-adhesive hook & loop fastener stick to the plastic trim, you **MUST CLEAN** all grime from the plastic and **REMOVE** all **SILICONE** applied during manufacture and detailing.

To do this please:


1. Use a silicone remover, such as AutoGlym Intensive Tar Remover, and apply generously to the surface you want to adhere to.
2. Using a separate clean, dry cloth, thoroughly dry the surface until the cloth starts to drag. Attach one self-adhesive fastener tab to see if it sticks. (Repeat steps 1 and 2 if necessary.) Extra tabs have been provided.
3. Attach the self-adhesive fasteners and let them fully adhere over the next 24 hours for the best bond.

*\*The self-adhesive fasteners cannot be used once they have been in contact with silicone. Replacement kits are available on our website.*




## STEP 1. PREPARATIONS

- Set the 2nd row seats to the specification of your order. (Image A)
- **SH1**-Put the headrests in their vertical position
- **SH2**-Put the headrests in their highest position

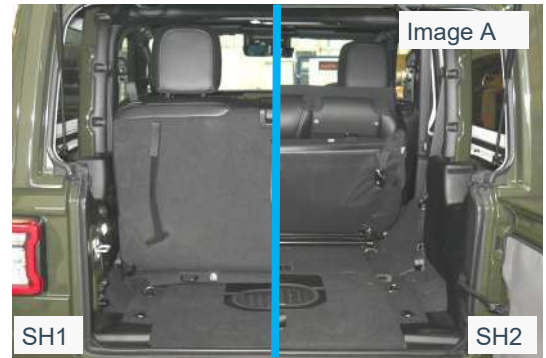


## STEP 2. INSTALLING BASE

- Place the cargo liner into the cargo area with the Hatchbag logo at the seat end. Flatten the base so it fits snugly against the edges.
- Lift the floor and insert it in the pocket sewn on the under side of the liner's base (Image B)
- On both sides of the cargo area base stick the one self-adhesive loop fastener tab in line with the hook welded on the reverse side of the cargo liner as highlighted in Image D
- Using the ties (2 on SH1 or 3 on SH2) at the front of the base tie them to the d-rings (SH1) or to the metal bar (SH2) near the bottom of the seats. Ensure the base sits flush with floor, the ties do not need to be tight. (Image C)

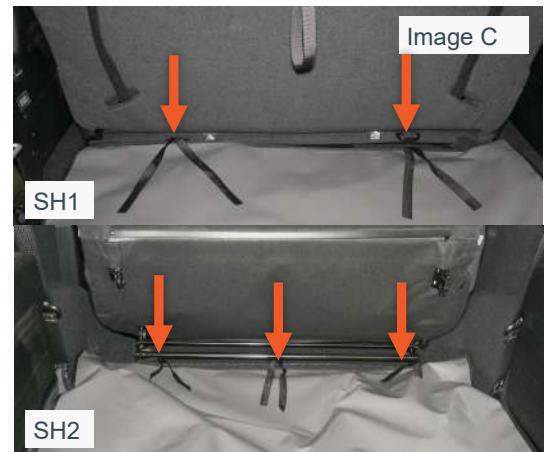

## STEP 3. INSTALLING THE FRONT

- **SH1 PLUS VERSION ONLY** - Fasten the hook & loop fasteners between the side panels and the seat panel. (Image E)
- Fasten the hook & loop fastener straps around both headrest posts of the two headrests. (rear seats on SH1/front seats on SH2) (Image F). Make sure to hold the front part of the base in position to avoid pulling the cargo liner too far up.

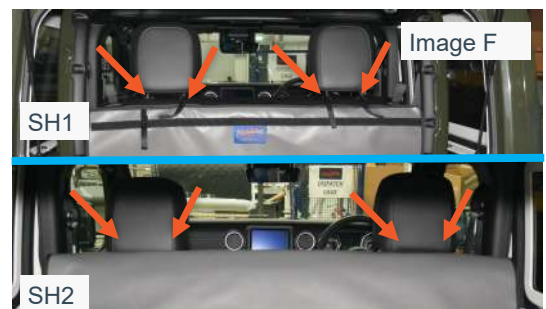


## REAR PLUS VERSIONS



You **MUST** unfasten the hook & loop fasteners and the headrest straps before you recline the upper part of the rear seats. (Please refer to **REAR PLUS / SPLIT** options on website to see detailed photo.)

## STEP 4. INSTALLING THE SIDES



- On both sides of the cargo area stick the self-adhesive loop fasteners in line with the hook fasteners welded on the reverse side (**Image G, H, K & L**)
  - 
  - Yellow Self-adhesive loop fasteners tabs
- **SH2 only**— on both sides of the cargo area stick the following loop fasteners in line with the hook fasteners sewn reverse side of the cargo liner as highlighted on **Image K & L**
  - 300 mm 20mm wide self –adhesive loop fastener
  - 400 mm 30mm wide self –adhesive loop fastener
- Fasten the hook fastener sewn and welded onto the top and back edge on both sides of the cargo liner directly onto the previously attached loop fasteners.

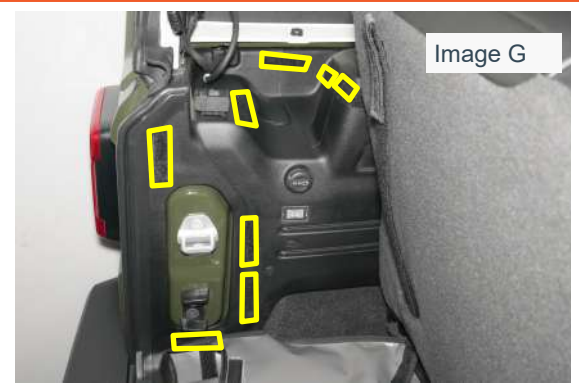

**SH1**

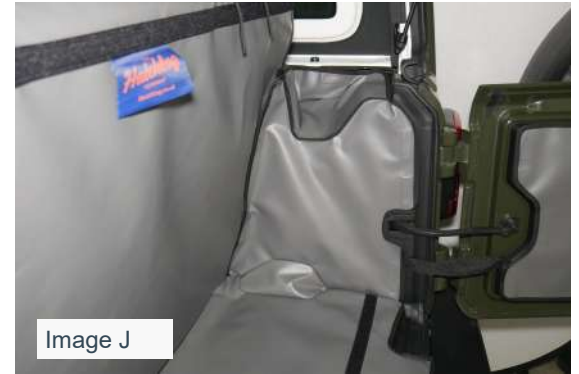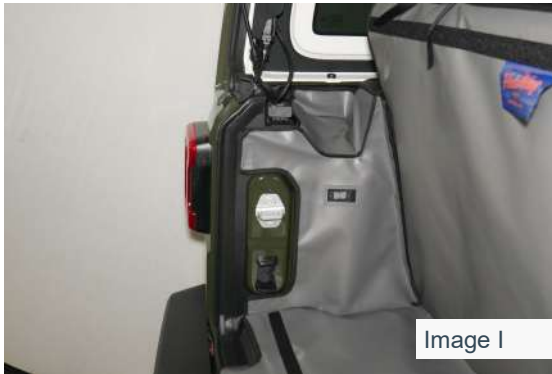

**SH2**

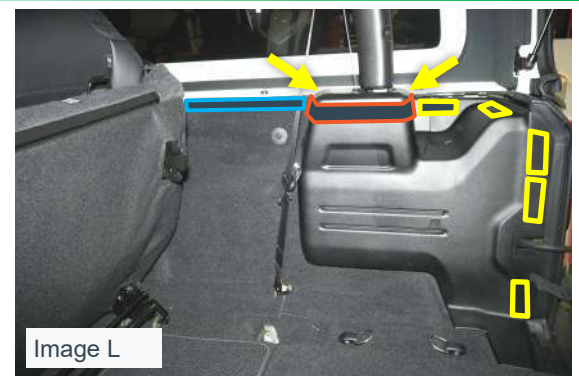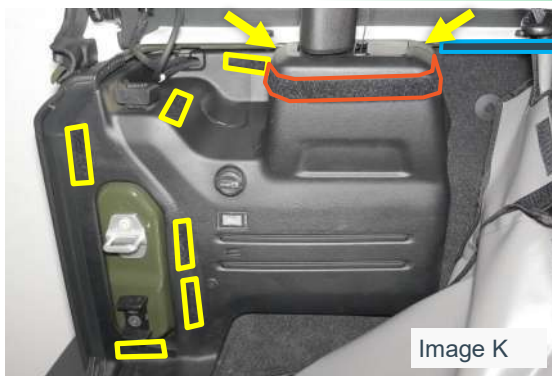

# OPTIONAL EXTRAS

Please note: not all of the photographs are specific to your vehicle.

## STEP 6A. SEAT FLAP

- SH1 Rear Plus cargo liner ONLY - The additional rectangle shaped section offers protection should you fold the seats (Image 2)
- Attach the Seat Flap to the loop fastener strip that has been manufactured into the Cargo liner just below the top of the rear seats. (Image 1)



## STEP 6B. LIFTGATE COVER

- Line up the liftgate cover with the liftgate and clean the areas where the self-adhesive loop fastener tabs will be stuck. (Image 3)
- Use the self-adhesive loop fastener tabs to attach the cover to the plastic trim.



## STEP 6C. BUMPER FLAP

- Fit the cargo liner
- Attach the Bumper Flap to the loop fastener strip located at the base of the cargo liner. (Image 4)
- The Bumper Flap either folds into the vehicle OR can be detached and stored elsewhere when you close the liftgate.

