

Land Rover Range Rover - 2020 - present 5 Seater

Our ref: H0845

INSTALLATION KIT CONTENTS:

- CARGO LINER
 - 2 x 850 mm 30mm wide self-adhesive loop fastener
 - 2 x tabs self-adhesive loop fastener
 - 4 x REF: 121 loop fastener
- LIFTGATE COVER
 - 20 x tabs self-adhesive loop fastener
- DROP-DOWN LIFTGATE COVER
 - 2 x 230mm 30mm wide self-adhesive loop fastener
 - 1 x 1040 30mm wide self-adhesive loop fastener
 - 7 x tabs self-adhesive loop fastener
- CARGO LINER EXTENSION
 - 2 x tabs self-adhesive loop fastener



Rear Plus with Seat Split cargo liner prepped for a headrest cover, cargo liner extension and bumper flap.



Ref:121



VERY IMPORTANT PREPARATION



To ensure the self-adhesive hook & loop fastener stick to the plastic trim, you **MUST CLEAN** all grime from the plastic and **REMOVE** all **SILICONE** applied during manufacture and valeting.

To do this please:

1. Use a silicone remover, such as AutoGlym Intensive Tar Remover, and apply generously to the surface you want to adhere to.
2. Using a separate clean, dry cloth, thoroughly dry the surface until the cloth starts to drag. Attach one self-adhesive fastener tab to see if it sticks. (Repeat steps 1 and 2 if necessary.) Extra tabs have been provided.
3. Attach the self-adhesive fasteners and let them fully adhere over the next 24 hours for the best bond.

**The self-adhesive fasteners cannot be used once they have been in contact with silicone. Replacement kits are available on our website.*



Please note: not all of the photographs are specific to your vehicle.


STEP 1. PREPARATIONS

- Remove the cargo cover. It may be replaced later.
- Set the rear seat backs to the position shown in **Image B** (gap between side panel and seat back)
- Put the headrests in their highest position.
- Place the cargo liner in the cargo area with the Hatchbag logo at the seat end. Flatten the base so it fits snugly against the edges. **(Image B)**



STEP 2. INSTALLING THE BASE

- Lift the hinge flap at the liftgate end and insert it in the pocket sewn on the under side of the liner's base. **(Image C)**
- Push the two foam-filled tabs sewn onto the front end of the base into the slot between the base and the rear seats. Lifting the seats a little may open up the gap. Be sure to keep the base straight. Fold the seats back up trapping the foam tabs. **(Image D)**

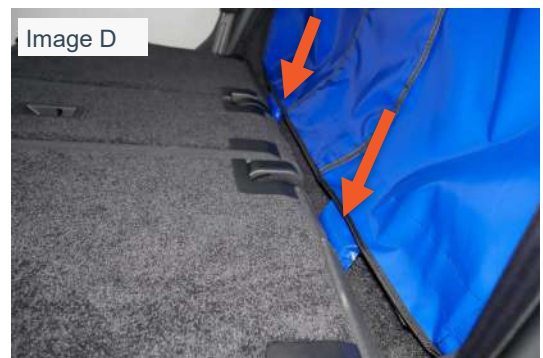

STEP 3. INSTALLING THE FRONT

- **PLUS / SPLIT VERSION ONLY** - Fasten the hook & loop fasteners between the side panels and the seat panel. (Image E)
- Starting with the middle headrest, loop the elastic fastener straps around each set of headrest posts. (Image F). Make sure to hold the front part of the base in position to avoid pulling the cargo liner too far up.

REAR PLUS VERSIONS

You **MUST** unfasten the hook & loop fasteners and the headrest straps before you recline the upper part of the rear seats. (Please refer to **REAR PLUS / SPLIT** options on website to see detailed photo.)



STEP 4. INSTALLING THE SIDES



- Cut 1 x 850 mm 30mm wide self-adhesive loop fastener to shape and attach to the bottom edge of the plastic side panels just above the carpeted area. (highlighted in orange, Image G)
- Attach 1x loop fastener tab to the plastic element on the bottom end of the cargo area side (blue, Image G)
- Insert 2x ref:121 fastener tabs at the liftgate end of the cargo area (green, Image G). To do this, peel back the rubber seal and slot the plastic end of the fastener tabs into the void behind the carpeted panel of the cargo area (Image H & I)
- Slide these fastener tabs up or down so that they align with the hook fastener on the reverse side of the cargo liner.
- Attach the hook fasteners sewn and welded on the reverse side of the the cargo liner to the loop fasteners fixed in place previously.
- Repeat on the other side.



OPTIONAL EXTRAS

Please note: not all of the photographs are specific to your vehicle.


STEP 5A. HEADREST COVER

- The Headrest cover is designed to protect the top of your rear seat giving additional protection from drooling dogs etc. (Image 1)
- Lower the headrests.
- Attach the Headrest cover to the loop fastener strip on the Cargo liner just below the top of the rear seats. (Image 2)

Rear Plus / Split Cargo Liners ONLY


The additional rectangle shaped section/s offer protection should you fold the seats (Image 3)

STEP 5B. LIFTGATE COVER & DROP-DOWN LIFTGATE COVER

-  Line up both liftgate covers and clean the areas where the self-adhesive loop fastener tabs need to be placed. The Drop-down liftgate (Image 4) cover further requires:
 - 2 x 280 mm 30mm wide self-adhesive loop fastener
 - 1 x 1040 mm 30mm wide self-adhesive loop fastener
- Use the self-adhesive loop fastener tabs to attach the covers to the plastic / metal trim (Image 4&5)

STEP 5C. BUMPER FLAP

- Attach the Bumper Flap to the loop fastener strip located at the base of the cargo liner. (Image 6)
- The Bumper Flap either folds into the vehicle OR can be detached and stored elsewhere when you close the liftgate.

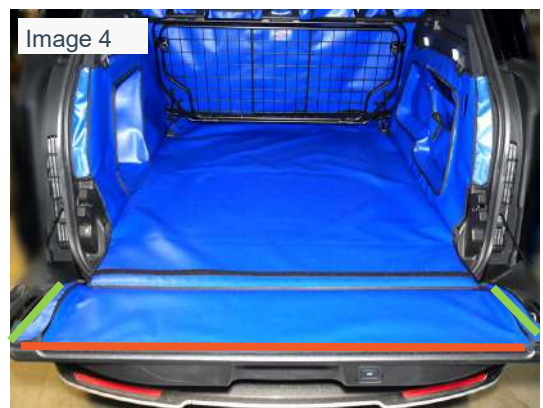

OPTIONAL EXTRAS PAGE 2

Please note: not all of the photographs are specific to your vehicle.

STEP 5D. CARGO LINER EXTENSION

The Cargo liner extension provides superior protection for the rear seats when purchased with a REAR PLUS option.

- The Cargo liner extension is designed to attach to a Rear Plus/Split version liner.
- It provides additional protection for the back of the front seats and the extended floor area when the rear seats are folded flat.
- It does not offer full protection to the rear doors
- Attach the Cargo liner extension to the main boot liner (Image 7)
- Fasten the two ties in the corner together by the front seats (Orange arrows - Image 8)
- Fasten the hook & loop fastener straps around the headrest posts. (Blue arrows - Image 8)



- Place 1x self-adhesive loop fastener tab where the rear seat back would lock into the upright position, (Green arrow - Image 9) attach the corresponding hook fastener welded on to the extension. (Image 10)
- Repeat on opposite side.

Please Note: the Seat Flap, the Bumper Flap & the Cargo liner Extension cannot be added at a later date.

