

Mercedes Benz GLB (inc. EQB) - 2020 - present

Our ref: H0864

INSTALLATION KIT CONTENTS:

CARGO LINER

- **2 x 450 mm** 30mm wide self-adhesive loop fastener
- **2 x 400 mm** 30mm wide self-adhesive loop fastener
- **2 x 180 mm** 30mm wide self-adhesive loop fastener
- **2 x tabs** self-adhesive loop fastener

CARGO LINER EXTENSION

- **2 x tabs** self-adhesive loop fastener

LIFTGATE COVER

- **20 x tabs** self-adhesive loop fastener



Rear Plus with Seat Split cargo liner prepped for a cargo liner extension and bumper flap.



VERY IMPORTANT PREPARATION



To ensure the self-adhesive hook & loop fastener stick to the plastic trim, you **MUST CLEAN** all grime from the plastic and **REMOVE** all **SILICONE** applied during manufacture and valeting.

To do this please:

1. Use a silicone remover, such as AutoGlym Intensive Tar Remover, and apply generously to the surface you want to adhere to.
2. Using a separate clean, dry cloth, thoroughly dry the surface until the cloth starts to drag. Attach one self-adhesive fastener tab to see if it sticks. (Repeat steps 1 and 2 if necessary.) Extra tabs have been provided.
3. Attach the self-adhesive fasteners and let them fully adhere over the next 24 hours for the best bond.

**The self-adhesive fasteners cannot be used once they have been in contact with silicone. Replacement kits are available on our website.*



STEP 1. PREPARATIONS

- Remove the load cover. It may be replaced later.
- Set the seats to a fully reclined position **Image A**
- Put the headrests in their highest position. **(Image B)**



STEP 2. INSTALLING THE BASE

- Place the cargo liner into the cargo area with the Hatchbag logo at the seat end. Flatten the base so it fits snugly against the edges. The hook fasteners on the underside attach directly to the carpet. **(Image C)**



STEP 3. INSTALLING THE FRONT

- **PLUS / SPLIT VERSION ONLY** - Fasten the hook & loop fasteners between the side panels and the seat panel. **(Image D)**
- Starting with the middle headrest, fasten the hook & loop fastener straps around both headrest posts. **(Image E)**. Make sure to hold the front part of the base in position to avoid pulling the cargo liner too far up. Repeat the procedure with the left and right headrests.



REAR PLUS VERSIONS

You **MUST** unfasten the hook & loop fasteners and the headrest straps before you recline the upper part of the rear seats. *(Please refer to REAR PLUS / SPLIT options on website to see detailed photo.)*



STEP 4. INSTALLING THE SIDES

- Secure the 3rd row seat belts in their corresponding stowage clip
- On both sides of the cargo area stick the following loop fasteners in line with the hook fasteners sewn & welded on the reverse side of the cargo liner as highlighted on **Image F & G**. Cut the 450mm loop fastener to allow access to the seat belt.
- **Green** 450 mm loop fastener
- **Orange** 180 mm loop fastener
- **Yellow** loop fastener tabs
- **On the left hand side**, push the liner into the recess and fasten the hook fastener sewn onto the reverse side of the liner to the previously attached loop fasteners.
- **On the right hand side**, push the liner into the recess, feeding the net through the cutout provided. Fasten the hook fastener sewn onto the revers side of the liner to the previously attached loop fasteners.
- Fasten the hook fastener sewn onto the back edge on both sides of the cargo liner directly onto the carpet. (**Image H & I**)

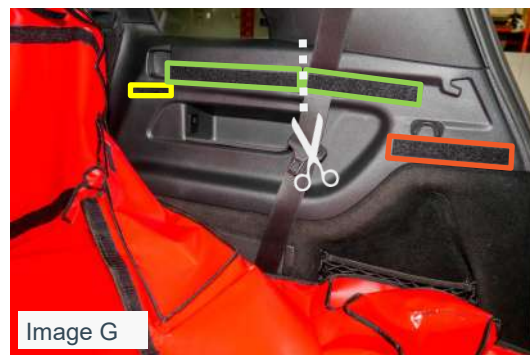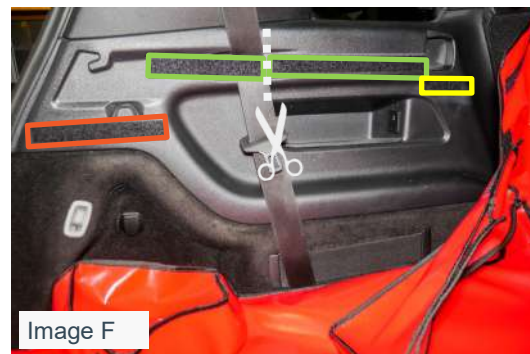

STEP 5. INSTALLING THE BACK

- Stick the **2x 400 mm** loop fasteners to the panel located on either side of the lock at the liftgate end of the cargo area area. Attach the cargo liner to it using the hook fastener on the liner. (**Image J**)



OPTIONAL EXTRAS

Please note: not all of the photographs are specific to your vehicle.

STEP 6A. LIFTGATE COVER



- Line up the liftgate cover with the liftgate and clean the areas where the self-adhesive loop fastener tabs will be stuck. (Image 1)
- Use the self-adhesive loop fastener tabs to attach the cover to the plastic trim.



STEP 6B. BUMPER FLAP

- Fit the cargo liner
- Attach the Bumper Flap to the loop fastener strip located at the base of the cargo liner. (Image 2)
- The Bumper Flap either folds into the vehicle OR can be detached and stored elsewhere when you close the liftgate.



OPTIONAL EXTRAS PAGE 2

Please note: not all of the photographs are specific to your vehicle.

STEP 6C. CARGO LINER EXTENSION

The Cargo liner extension provides superior protection for the rear seats when purchased with a REAR PLUS option.

- The Cargo liner extension is designed to attach to a Rear Plus/Split version liner.
- It provides additional protection for the back of the front seats and the extended floor area when the rear seats are folded flat.
- It does not offer full protection to the rear doors
- Attach the Cargo liner extension to the main cargo liner (Image 3)
- Fasten the two ties in the corner together (Orange arrows - Image 4)
- Fasten the hook & loop fastener straps around the headrest posts. (Blue arrows - Image 4)
- On both sides, attach 1x self-adhesive loop fastener tab (Green arrow - Image 5) and fasten the corresponding hook fastener welded on to the revers side of the extension to it.
- Repeat on opposite side

Please Note: the Seat Flap, the Bumper Flap & the Cargo liner Extension cannot be added at a later date.

STEP 6D. FREQUENT USE KIT

- If you frequently remove/install your cargo liner from/to your vehicle, please note that the carpet will “fluff” up – we offer an alternative Frequent Use Installation Kit. These tabs are placed between the cargo liner and the cargo area carpet. (Image 6 & 7)

The Frequent Use Kit is an accessory available to purchase from our on-line store.

