

US H0918

## MINI Countryman

2024 - present



## Installation Kit Contents

- ☐ Cargo liner
- ☒ 2 x 410 / 30
- ☐ Liftgate Cover
- ☒ 20 x tabs

"quantity x length / width" in mm



\*Please be aware that your cargo liner may be different depending on your options/extras selection



## Before you install the cargo liner

To ensure the self-adhesive fasteners securely adhere, it's **absolutely essential** to thoroughly **eliminate** any **silicone** residues left from manufacturing and detailing processes.

To achieve this you will need a silicone remover. We recommend **Autoglym® Instensive Tar Remover**

## Preparations

- Ensure your cargo area floor and seats are set to match your order.
- Remove the cargo cover. It may be replaced later.
- Slide the seats as far back to the liftgate, if applicable.

1

## Installation key



Where you find this symbol the cargo liner's hook fastener will attach directly to the carpet <sup>(1)</sup>

When this is not suitable, we provide self-adhesive loop fasteners to stick onto plastic/metal trim:



Where you find this symbol, follow these steps:

- 1) Apply *Autoglym® Intenisve Tar remover* generously to a cloth and scrub the highlighted surface areas.
- 2) Dry surface thoroughly with a separate cloth until it dries.
- 3) Test the surface by attaching one fastener tab - it should stick well, if not repeat previous steps<sup>(2)</sup>



Silicone is used during car manufacturing/detailing, it will interfere with the adhesion.

## Tips:

- <sup>(1)</sup> If you frequently remove your cargo liner from your vehicle consider our ***Frequent Use Installation Kit*** to prevent carpet fluffing, available for purchase from our "Accessories" page.
- <sup>(2)</sup> If temperatures are low, run your car for a little bit so that the cargo area reaches room temperature or install your liner once you have been out for a drive.
- For optimal adhesion of the fasteners, do not remove the cargo liner for approx. 48 hours.

## Notes:

- The adhesive fasteners ***cannot be used once they have been in contact with silicone.*** Replacement Installation Kits can be purchased from our accessories page.
- Adherence to the instructions will affect the performance of the Installation Kit. Please note *The Hatchbag Company* will not accept requests for free replacements if the adhesives come loose after use.



Refer to colour code in the first page **Installation Kit Contents**

2




a

a

a

a

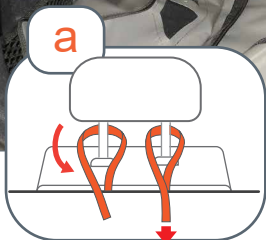

-Ensure the base is aligned to fit the cargo area edges.

-Fasten the headrest straps without pulling the base off the floor.



If you want to fold the rear seats later, you **MUST** unfasten the headrest straps first!


3



Tips:

- Snip the self adhesives to ease around the curves

4

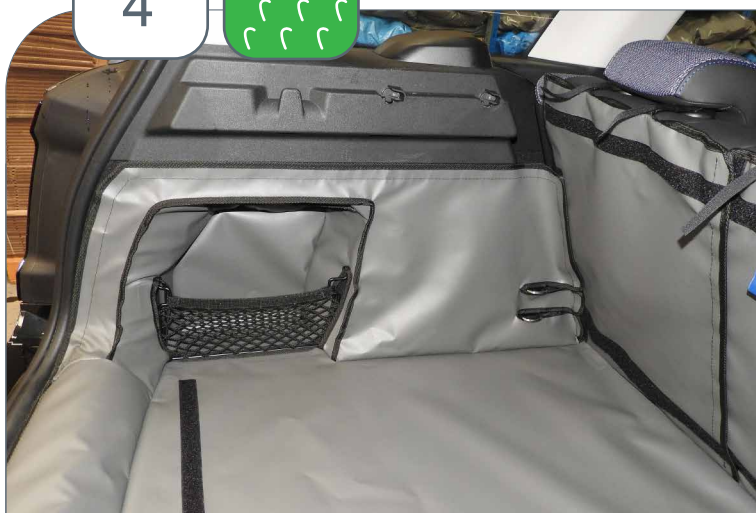

\*Please be aware that your cargo liner may be different depending on your options/extras selection

Tips:

- Commence installing from the liftgate end.
- For Rear Plus versions, fasten the side to the front panel from bottom to top

## Optional extras

Note: not all the photos are specific to your vehicle

### Bumper Flap

-Attach the Bumper Flap to the loop fastener strip located on the base of the cargo liner.



### Liftgate Cover



-Line up the Liftgate Cover with the liftgate and clean the areas where the self-adhesive loop fastener tabs will be stuck.

-Begin with the central top and bottom fastener.



### Cargo Liner Extension



1. Attach the cargo liner extension to the main cargo liner.
2. Fasten the hook & loop fastener straps around the headrest posts.
3. Fasten the two ties in the corner together.
4. Attach behind the side panel of the cargo liner.

