SMART FOR TWO 2008-2016
(451 - Coupe + Cabriolet)

Standard cargo liner + Bumper Flap

PACKING REQUIREMENTS

- [ ] 1.2 m of 30mm wide self-adhesive loop fastener.

VERY IMPORTANT PREPARATION

To ensure a good bond, when using the self-adhesive loop fastener to attach the cargo liner to the plastic / metal trim (**Not** the carpet); it is most important to remove silicone film from the vehicle trim. Silicone is applied during manufacture and can also be found in many detailing products. It is **highly likely there will be a build-up of silicone**. Before applying any loop fastener pads, the surface **MUST be thoroughly** cleaned using a silicone remover. (The loop fastener cannot be used once it has been in contact with silicone). We recommend Intensive Tar Remover made by AutoGlym. Wipe off thoroughly **any residue with a separate clean dry cloth.**

Unfortunately, we are unable to supply this product, as it cannot be transported via our postal carrier.

NOTE: the adhesive takes 24hrs to reach full adhesion – do not disturb during.

PREPARATION

Luggage Compartment Cover

- Prior to installation you will need to remove the "Luggage Compartment Cover"
- It cannot be replaced once the Cargo liner is fitted.

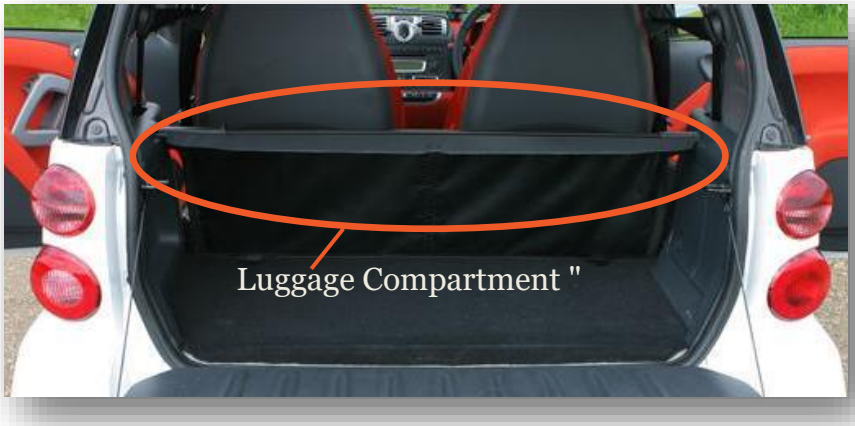

INSTALLATION

(Please note: these photos are not specific to your vehicle)

BASE

- Carefully position the base panel snugly into place. Start at the liftgate end.
- The hook fastener on the back side of the panel attach directly to the carpet.

FRONT

- Pass each of the two elastic loops over the roof hooks.

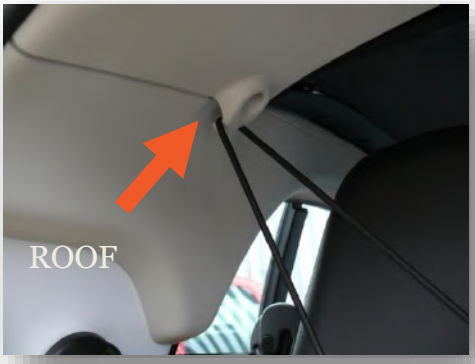

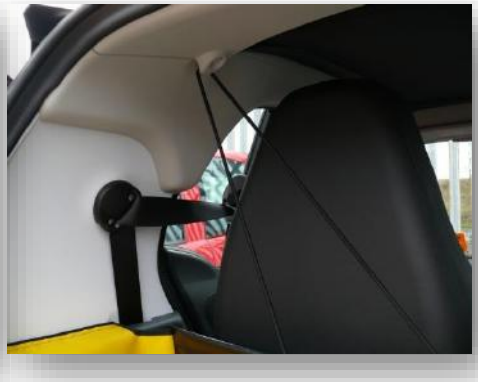

SIDES

- Use the self-adhesive loop fastener to attach the side to the plastic trim.
- We supply a minimum of 1.2m of “uncut” loop fastener that should be matched with the hook fastener on the liner at the load area sides.

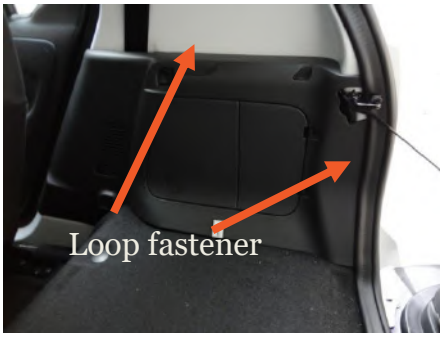

BUMPER FLAP

- Install Cargo liner
- Attach the Bumper Flap to the loop fastener strip located at the base of the Cargo liner.
- The Bumper Flap either folds into the vehicle OR can be detached and stored elsewhere when you close the liftgate.