Volvo V60 Sports Wagon 2015 – 2018

Our Ref: H0533

☐ PACKING REQUIREMENTS
CARGO LINER
6 x ref: 107 ("J" profile plastic + loop fastener)
2 x ref: 124 (hook + loop fastener @150mm long)
2 x ref: 131 Cut @ 60mm wide
2 m length of 30mm wide self-adhesive loop fastener

REF: 107

REF: 124

REF: 131

PLEASE NOTE: accessory "NET POCKETS".

- The Cargo liner does NOT accommodate these two net pockets in the cargo area.

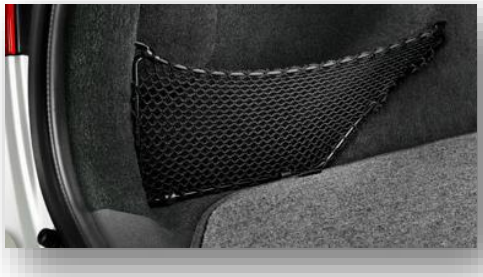

VERY IMPORTANT PREPARATION

To ensure a good bond, when using the self-adhesive hook & loop fastener to attach the cargo liner to the plastic / metal trim (**Not** the carpet); it is most important to remove silicone film from the vehicle trim. Silicone is applied during manufacture and can also be found in many detailing products. It is **highly likely there will be a build-up of silicone**. Before applying any hook & loop fastener pads, the surface **MUST be thoroughly** cleaned using a silicone remover. (The hook & loop fastener cannot be used once it has been in contact with silicone). We recommend Intensive Tar Remover made by AutoGlym. Wipe off thoroughly **any residue with a separate clean dry cloth.**

NOTE: the adhesive takes 24hrs to reach full adhesion – do not disturb during.

PREPARATION

- Remove the cargo cover. It may be replaced later.
- Recline rear seats and open both rear passenger doors.
- Slide off the Cargo Safety Net
- Unfold the Hatchbag and place in the vehicle so that the base fits snugly in position. The panel with the Hatchbag label sits against the back of the rear seat.

INSTALLATION

- Place the liner into the car and install the base snuggly into place.

BASE

Photo A+ B

Locate the two hook fastener strips on the back side of the liner at the liftgate end.

- Photo A:

Lift up the false floor. Attach the two ref: 124 hook / loop fastener tabs to the floor's carpet. The hook fastener section will attach directly to the carpet.

- Photo B:

The tabs will protrude out of the floor panel when its replaced allowing the liner to be fastened to them.

Photo C *(Please note this photo is non-specific to your car)*

- Push the two foam-filled tabs down into the void between the rear seat and the floor of the cargo area.

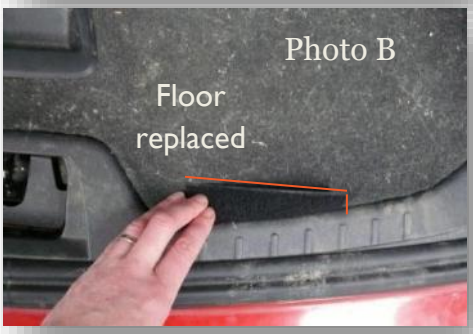

FRONT

Photo D+E

- Raise the central headrest to expose the headrest posts at the rear.

Photo F

- Pass each of the corresponding hook & loop fastener straps around each headrest post, and firmly fasten on the hook fasteners below.

REAR PLUS VERSIONS

- YOU MUST UNFASTEN THE HEADREST STRAPS BEFORE YOU RECLINE THE UPPER PARTS OF THE REAR SEATS

(Please refer to REAR PLUS options on website to see detailed photo)

SIDES

Photo D + E

- Place the side panels' snuggly into place.
- Chalk the height of the liner sides onto the plastic trim: Use this as a guideline to complete the next step.
- Use the cut length self-adhesive loop fastener to attach the side panels to the plastic trim above the carpet.

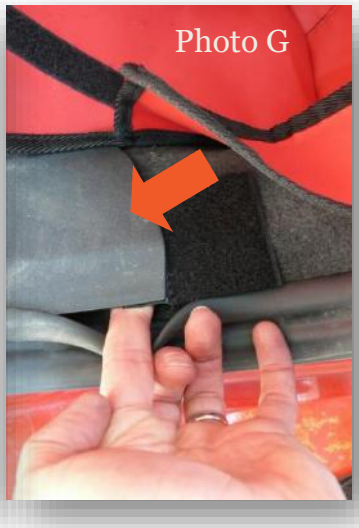

Photo F + G

- Attach the self-adhesive section of the ref: tab 131 to the under face of the outer most corners of the liftgate plate. The exposed loop fastener attaches to the hook fastener.

Photo H

- Pull back the rubber seal and slide the curved part of the clip (ref. 107) behind the carpeted panel. The loop fastener section will remain exposed.
- Re-align with the hook fastener welds on the liner and fasten.

REF: 107

Optional extras

Please note: the following photos are not specific to your vehicle.

The following items cannot be added at a late date

BUMPER FLAP

- Install Cargo liner
- Attach the Bumper Flap to the loop fastener strip located at the base of the Cargo liner.
- The Bumper Flap either folds into the vehicle OR can be detached and stored elsewhere when you close the liftgate.
- Please note that the edges of the fabric are not bound so that any mud, dirt or water can run off.

CARGO LINER EXTENSION

The Cargo Liner Extension provides superior protection to the rear seats when purchased with a REAR PLUS option.

- The Cargo Liner extension is designed to attach to a Rear Plus version liner.
- It provides additional protection to the back of the front seats and the extended floor area when the rear seats are folded flat.
- It does not offer full protection to the rear doors.