Range Rover Sport

2014-2022

Our ref: H0574

Packing requirements

☐ CARGO LINER
6 ref. 121 (plastic/loop fastener tab)
1300mm cut length of 30mm self-adhesive loop fastener
12 x self-adhesive loop fastener tabs

☐ LIFTGATE COVER
8 x self-adhesive loop fastener tabs
1100mm cut length of 30mm self-adhesive loop fastener

REF: 121

VERY IMPORTANT PREPARATION

To ensure a good bond, when using the self-adhesive loop fastener to attach the cargo liner to the plastic / metal trim (Not the carpet); it is most important to remove silicone film from the vehicle trim. Silicone is applied during manufacture and can also be found in many detailing products. It is highly likely there will be a build-up of silicone. Before applying any hook & loop fastener pads, the surface MUST be thoroughly cleaned using a silicone remover. (The hook & loop fastener cannot be used once it has been in contact with silicone). We recommend Intensive Tar Remover made by AutoGlym. Wipe off thoroughly any residue with a separate clean dry cloth.

PREPARATION

- Remove the cargo cover shelf, it can be replaced later. If you do not have a Range Rover Dog barrier: Unlock the rear seats and fold flat.
- You will need a pair of scissors and a spoon

Please note: some photos are not specific to your vehicle.

INSTALLATION – NO DOG BARRIER VERSION

Land Rover Dog Barrier Version – skip to page 3

BASE

- Place the liner into the car and install the base snuggly into place.
- Use the self-adhesive loop fastener tabs to attach the liftgate end to the chrome trim. Ensure the base it is sitting straight and not skewed before you push the two foam-filled tabs down into the void between the rear seat and the floor of the cargo area.
- Lock the upper parts of the rear seats to trap these tabs.

FRONT

- The four hook & loop fastener straps fasten to the outer headrests.
- Pass around each post and fasten back onto themselves.
- Wrap the large elastic strap around the central fixed headrest. Fasten close to the front panel.

NOTE: REAR PLUS / SPLIT VERSIONS

- You must unfasten all headrest straps before you recline the upper parts of the rear seats (Please refer to REAR PLUS options on website to see detailed photo)
- Other version may have different headrest straps/elastic

SIDES

- Carefully position the side panels snugly into place.
- The bound cut-outs correspond with the interior lights/power socket.
- Use the 30mm wide self-adhesive loop fastener to attach the sides to the plastic trim.
- Locate where the two sets of hook fasteners are on the ends of the side panels. The ref: 121 plastic/loop fastener tabs attach to these.

Installing the ref: 121 tabs

- Hold back the rubber seal on the door aperture to expose the edge of the carpeted panel.
- Carefully feed the spoon handle into the narrow void behind the carpeted panel. This will help to open-up this void.
- Push the plastic section of the ref: 121 tabs into this void.
- Reposition to align with the hook fastener welds on the Liner.
- Fasten close the hook & loop fastener.

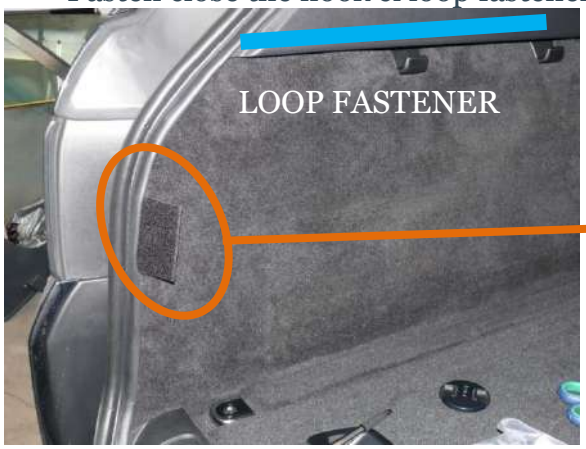

Spoon handle

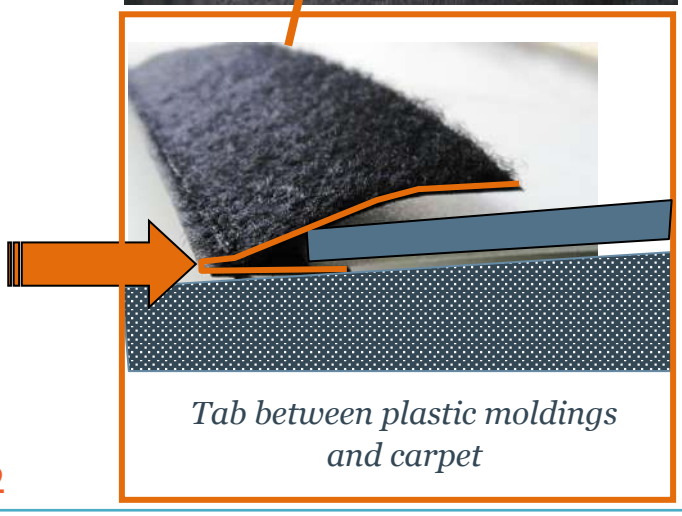

Tab between plastic moldings and carpet

INSTALLATION – LAND ROVER DOG BARRIER VERSION

REFERS TO DOG BARRIERS / LUGGAGE DIVIDERS / ACCESSORIES MANUFACTUED BY LAND ROVER ONLY

WE STRONGLY ADVISE

1. You read the manufacturers installation instructions before you decide if your accessory will work with our Cargo liner.

We are not affiliated with Land Rover, but we have found an informative website

http://topix.landrover.jlrext.com/topix/vehicle/lookupForm

OR speak in depth with your dealership about the installation of the accessory. You will find some of the designs are extensively complex.

2. You purchase a "DOG BARRIER REAR PLUS/SPLIT" version Cargo liner which will allow you to install one of these accessories via the rear passenger seat area.

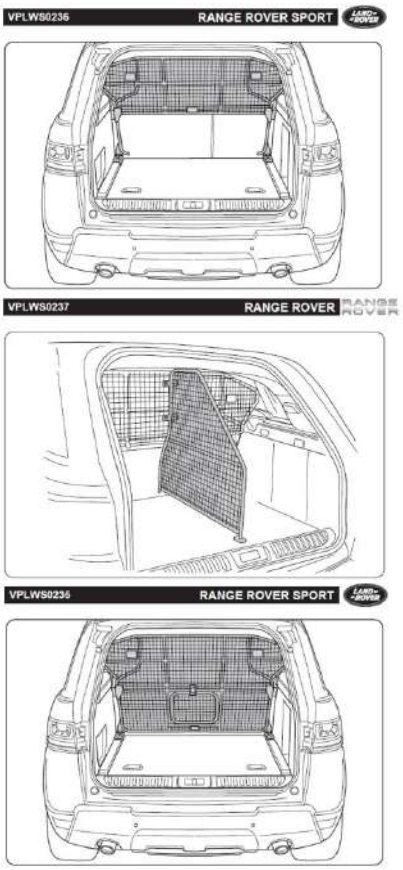

BASE

- Place the liner into the car and install the base snuggly into place. Locate the 2 cut outs to fit around the main section of the floor brackets. You will need to slide the fabric under the two front chrome screws (loosen with Allen key if necessary)
- Use the self-adhesive loop fastener tabs to attach the liftgate end to the chrome trim. Ensure the base it is sitting straight and not skewed.
- Attach the two ties at the front of the base to the two outer small metal loops in the back of the seats.

Slide fabric under screws

Ties fasten to these metal loops

FRONT

- You will need to feed the front panel up behind the dog barrier. An additional person kneeling on the rear seats would be of great help!!!
- The four hook & loop fastener straps attach to the outer headrests. Pass around each post and fasten back onto themselves.
- Wrap the large elastic strap around the central fixed headrest. Fasten close to the front panel.

NOTE: REAR PLUS / SPLIT VERSIONS

- You must unfasten all headrest straps before you recline the upper parts of the rear seats (Please refer to REAR PLUS options on website to see detailed photo)

SIDES

- Carefully position the side panels snugly into place. The bound cut-outs correspond with the interior lights/power socket on the panel on the right.
- Feed the hook fastener section of the side panel behind the Dog barrier frame and fasten close to the front and base panel.
- Use the 30mm wide self-adhesive loop fastener to attach the sides to the plastic trim.
- Locate where the two sets of hook fasteners are on the ends of the side panels. The ref: 121 plastic/loop fastener tabs will attach to these.

Feed front end behind frame

Installing the ref: 121 tabs (see page 2 for photographs)

- Hold back the rubber seal on the door aperture to expose the edge of the carpeted panel.
- Carefully feed the spoon handle into the narrow void behind the carpeted panel. This will help to open-up this void.
- Push the plastic section of the ref: 121 tabs into this void.
- Reposition to align with the hook fasteners on the Liner.
- Fasten close the hook & loop fastener.

Please note some photos are not specific to your vehicle.

Optional extras

BUMPER FLAP

- Install Cargo liner
- Attach the Bumper Flap to the loop fastener strip located at the base of the Cargo liner.
- The Bumper Flap either folds into the vehicle OR can be detached and stored elsewhere when you close the liftgate.

LIFTGATE COVER

- Use the self-adhesive loop fastener to attach the cover to the plastic trim.
- Pass the two hook fastener straps behind and under the door handles. Fasten close to the front of the cover.