THE Hatchbag COMPANY

Installation Instructions

hatchbag.us

MITSUBHI OUTLANDER (Inc. PHEV)

5-SEATER ONLY

2014-2021 Our ref: H0608-SE5+PHEV

Packing requirements

☐ CARGO LINER
1200 mm cut length of 30mm wide self-adhesive loop fastener
650 mm cut length of 20mm wide self-adhesive loop fastener
Minimum of 11 self-adhesive loop fastener tabs

☐ LIFTGATE COVER
Minimum of 17 self-adhesive loop fastener tabs

PREPARATION

Please ensure that the rear seat backs are positioned UPRIGHT to suit the liner

RECLINED

The Cargo liner does NOT accommodate the rear seat uppers reclined into the cargo area

UPRIGHT

The rear seat uppers must be set at the MOST UPRIGHT position

- Remove the cargo cover. It may be replaced later.

VERY IMPORTANT PREPARATION

To ensure a good bond, when using the self-adhesive hook & loop fastener to attach the cover to the plastic trim it is most important to remove silicone film from the vehicle trim. Silicone is applied during manufacture and can also be found in many valeting products. It is **highly likely there will be a build-up of silicone**. Before applying any self-adhesive fastener pads, the surface **MUST be thoroughly** cleaned using a silicone remover. (The fasteners cannot be used once it has been in contact with silicone). We recommend Intensive Tar Remover made by AutoGlym. Wipe off thoroughly **any residue with a separate clean dry cloth.**

NOTE: the adhesive takes 24hrs to reach full adhesion – do not touch during.

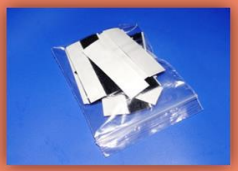

SIDES PREPARATION

- Fold the false floor to expose the under-floor storage
- Attach 30mm wide self-adhesive loop fasteners as indicate by the orange highlights
- Attach 20mm wide self-adhesive loop fasteners as indicated by the blue highlights - Do not cover the holes

LEFT SIDE - SPEAKER VERSIONS ONLY

- Fold the false floor to expose the under-floor storage
- Attach 30mm wide self-adhesive loop fasteners as indicate by the orange highlights
- Attach 20mm wide self-adhesive loop fasteners as indicated by the blue highlights

SIDES

- Unfold the false floor
- Loosely place the Cargo liner in the cargo area with the liftgate end of the base folded over.

- Begin to place the side panels snugly into position – *But just fasten along to the top edges.*

- Keeping the base still folded, position the under section of the base snugly into place: The hook fasteners on the back attach directly to the carpet.

FRONT

Pass the hook & loop fastener straps around each corresponding headrest post and fasten back onto itself.

Please note: photo is not specific to your car.

REAR PLUS VERSIONS

Please note in future: YOU MUST UNFASTEN THE HOOK & LOOP FASTENERS / HEADREST STRAPS WHEN YOU CHOOSE TO RECLINE THE UPPER PARTS OF THE REAR SEATS

SIDES continued….

- Unfold the base: the hook fasteners on the back side of the liner attach directly to the carpet.

Please note: photo shows a Cargo liner with additional fastener on the base and the front panel in preparation for a Bumper flap and Cargo Liner Extension

- BASE: carefully lift up the false floor and base panel with it.
- Use the self-adhesive loop fastener pads to attach the liftgate end of the sides.
- Position the pocket area snugly into place and attach to the fastener strips.
- Unfold the floor

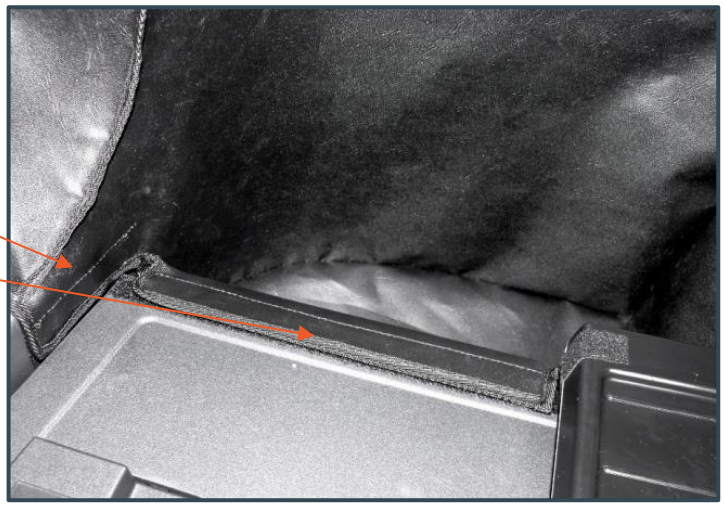

Please note: these photos are not specific to your car.

BUMPER FLAP

- Install Cargo Liner
- Attach the Bumper Flap to the loop fastener strip located at the base of the Cargo liner.
- The Bumper Flap either folds into the vehicle OR can be detached and stored elsewhere when you close the liftgate.

LIFTGATE COVER

- Use the self-adhesive loop fastener tabs to attach the cover to the plastic trim.