VOLVO XC90 - 2015-present

3RD ROW USABLE

Our ref: H0618-RSC2

PACKAGING REQUIREMENTS.

☐ CARGO LINER

- 10x tabs self-adhesive loop fastener
- 2x ref. 121 tabs (plastic & loop fastener)
- 4x ref 124 at 160mm length
- 2x 405mm 20mm self adhesive Loop Fastener

☐ LIFTGATE COVER

- 27x tabs self-adhesive loop

REF:121

REF:124

VERY IMPORTANT PREPARATION

To ensure a good bond, when using the self-adhesive hook & loop fastener to attach the cover to the plastic trim it is most important to remove silicone film from the vehicle trim. Silicone is applied during manufacture and can also be found in many valeting products. It is **highly likely there will be a build-up of silicone**. Before applying any Hook & loop fastener pads, the surface **MUST be thoroughly** cleaned using a silicone remover. (The Hook & loop fastener cannot be used once it has been in contact with silicone). We recommend Intensive Tar Remover made by AutoGlym. Wipe off thoroughly **any residue with a separate clean dry cloth.**

NOTE: the adhesive takes 24hrs to reach full adhesion – do not touch during.

STEP 1. PREPARATIONS

- Remove the cargo cover. It may be replaced later.
- Please place the 3rd-row seats in an upright position.

Please note: not all of the photographs are specific to your vehicle

STEP 2. INSTALLING THE BASE

- Line up 2x ref:124 to the chrome strip on either side of the cargo area (total 4). (Image B)
- Lift up the false floor and attach the ref:124 to the inside plastic surface next to the chrome strip using 2 self adhesive loop fastener tabs for each ref:124 (total 8). (Image C+D)
- Attach the hook fastener portion of the ref:124 to loop fastener tabs previously fixed in place. Then lower the false floor with the loop portion protruding out. (Image E)
- Place the cargo liner into the cargo area with the Hatchbag logo at the seat end. Flatten the base so it fits snugly against the edges.
- Tilt the 3rd-row seats forward slightly and push the foam-filled tab on the base of the Cargo liner into the gap between the floor and the seat. (Image F) Return the 3rd-row seats to an upright position trapping the foam-filled tab.
- Pull the base taut from the rear and secure it to the ref:124 sticking out from the false floor. (Image G)
- Attach the ref:121 clips to both sides of the cargo door opening. To do this pull back the rubber edge and push the plastic section of the clip behind the cargo panel (Image H). Slide the clip down to the same level as the hook fastener on the liner. (Image I)

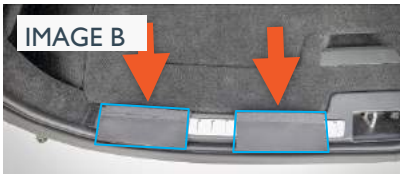
IMAGE B

IMAGE C

IMAGE D

IMAGE E

IMAGE F

IMAGE G

IMAGE H

IMAGE I

STEP 3. INSTALLING THE FRONT

- PLUS / SPLIT VERSION ONLY - fasten the hook & loop fastener between the side panel and the front panel. (Image J)
- For the left and right headrest: Pass the Elastic & hook fastener straps through the middle of the headrest and around to fasten them to the loop hook fastener patch on the front panel of the Cargo liner. (Image K)

REAR PLUS/SPLIT VERSIONS

You MUST unfasten the hook & loop fasteners and the headrest straps before you recline the upper parts of the rear seats. *(Please refer to REAR PLUS options on website to see detailed photo)*

This Cargo liner includes a Rear Plus/Split FLAP that covers the full seat when folded down,

- Attach the flap to the loop fasteners strip across the front panel. (Image L & M)
- If both seats are dropped down together then attach the long edge of the flap onto the loop fasteners strip on the front panel.

REAR SPLIT VERSION ONLY

- If only one seat is dropped down (split only), attach the short side of the flap onto the section of the front panel being dropped down.

IMAGE J

IMAGE K

IMAGE L

IMAGE M

STEP 4 INSTALLING THE SIDES

- Stick the long self adhesive loop fastener strips on the plastic above the top edge of the carpet (Image N) to which the side of the liner is attached.

IMAGE N

OPTIONAL EXTRAS

Please note the following photos are not specific to your vehicle

STEP 5A. LIFTGATE COVER

- Line up the liftgate cover with the liftgate and clean the areas where the self-adhesive loop fastener tabs will be stuck. (Image 4)
- Use the self-adhesive loop fastener tabs to attach the cover to the plastic trim.

STEP 5B. BUMPER FLAP

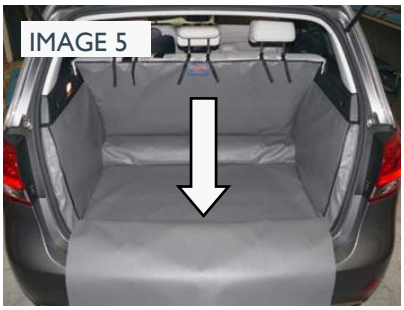

- Install Cargo liner

Attach the Bumper Flap to the loop fastener strip located at the base of the Cargo liner.

- The Bumper Flap is one standard length for all models. Trim the length to suit your requirements. Ensure you do not cut through the stitching.
- The Bumper Flap either folds into the vehicle OR can be detached and stored elsewhere when you close the liftgate.
- Please note that the edges of the fabric are not bound so that any mud, dirt or water can run off.

STEP 5C. CARGO LINER EXTENSION

The Cargo Liner Extension provides superior protection to the rear seats when purchased with a REAR PLUS option.

- The Cargo Liner Extension is designed to attach to a Rear Plus version liner.
- It offers additional protection to the back of the second row seats and the extended floor area when the third row seats are folded flat.

The Bumper Flap and the Cargo Liner Extension cannot be added at a later date.