KIA SORENTO - 2016-present

7 SEATER ONLY (ROW 3 FOLDED)

Our ref: H0629-SE7

PACKAGING REQUIREMENTS.

☐ CARGO LINER

- 2x Ref:135
- 2x 890mm 30mm wide self-adhesive loop fastener
- 2x 280mm 30mm wide self-adhesive loop fastener
- 2x 360mm 30mm wide self-adhesive loop fastener
- 8x tabs self-adhesive loop fastener
- 2x 80mm 20mm wide sew-on loop fastener

☐ LIFTGATE COVER

- 26 x tabs self-adhesive loop fastener

Cargo cover out version - Rear plus cargo liner with seat split & bumper flap preparation

REF.135 FASTENER

VERY IMPORTANT PREPARATION

To ensure a good bond, when using the self-adhesive hook & loop fasteners to attach the cover to the plastic trim it is most important to remove silicone film from the vehicle trim. Silicone is applied during manufacture and can also be found in many detailing products. It is **highly likely there will be a build-up of silicone**. Before applying any self-adhesive fastener pads, the surface **MUST be thoroughly** cleaned using a silicone remover. (The fasteners cannot be used once it has been in contact with silicone). We recommend Intensive Tar Remover made by AutoGlym. Wipe off thoroughly **any residue with a separate clean dry cloth.**

NOTE: the adhesive takes 24hrs to reach full adhesion – do not touch during.

STEP 1. PREPARATIONS

- Remove the cargo cover. It may be replaced later
- Fold the 3rd row seats, they are not usable with the liner fitted.
- Slide the 2nd row seats as far back as they will go.
- Set the 2nd row seat recline so that the seat backs are 4cm away from the load cover slots as seen in Image A.
- Hook the 3rd row seatbelt behind the clip. Push the seatbelt strap so it sits flush against the side panel and stick the ref.135 fastener over it (Image B) with the self-adhesive hook fastener parts attaching to the side panels as shown in Image C.

IMAGE A

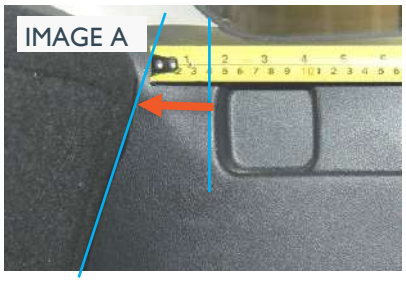

IMAGE B

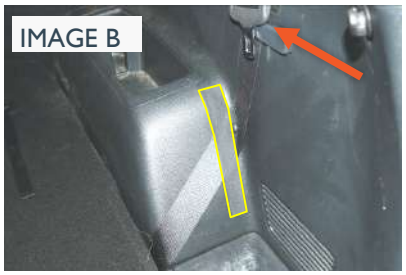

IMAGE C

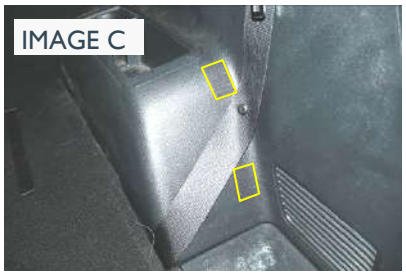

STEP 2. FITTING BASE

- Place the cargo liner into the cargo area with the Hatchbag logo at the seat end. Flatten the base so it fits snugly against the edges. The fasteners on the back side of the liner attach directly to the carpet. (Image D)

IMAGE D

STEP 3. FITTING THE FRONT

- - PLUS / SPLIT VERSION ONLY - Fasten the hook & loop fastener between the side panels and seat panel. (Image E)
- Starting with the middle headrest, loop the hook & loop fastener straps around both headrest posts. (Image F). Make sure to hold the front part of the base in position to avoid pulling the Hatchbag too far up. Repeat the procedure with the left and right headrests.

REAR PLUS VERSIONS

You MUST unfasten the hook & loop fastener and the headrest straps before you recline the upper parts of the rear seats. *(Please refer to REAR PLUS / SPLIT options on website to see detailed photo)*

IMAGE E

IMAGE F

STEP 4. FITTING THE SIDES AND BACK

- Attach the 4 appropriate lengths loop fastener strips and the self-adhesive fastener tabs onto the side panels as shown in the following steps.
- The 360mm long self-adhesive loop fastener strips go on the window sills (Image H) on both sides of the cargo liner.
- The 280mm lengths of self adhesive loop fastener go behind the 3rd row seatbelts on both sides of the cargo area (highlighted in blue - Image I). Attach the 80mm long non-adhesive loop fastener to the portion of the hook fastener on the cargo liner that sits over the seatbelt to stop the hook fastener from scratching it. (highlighted in orange - Image I)
- Attach 4 self-adhesive loop fastener tabs on both sides of the cargo area, aligned with the hook fasteners on the sides of the cargo liner sides. (highlighted in green - Image J)
- Stick the 890mm long self adhesive loop fastener strips along the tailgate opening from the lock in the center up the sides. (Image K) Snip the fastener strip to help ease it around the curve.
- Attach the cargo liner to these fasteners using the hook fastener on the back of the liner.

IMAGE G

IMAGE H

IMAGE I

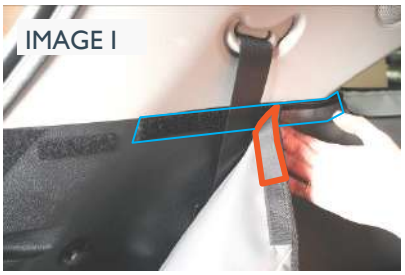

IMAGE J

IMAGE K

STEP 4. FITTING THE SIDES AND BACK CONT…..

- The cargo cover can now be relocated into the two appropriate holes (Image L)

IMAGE L

PLEASE NOTE

Should it be necessary to relocate your cargo cover to the secondary locating position you may cut another set of holes as the fabric does not tear / fray. Please make sure not to cut through the tape as it may come undone.
You can refer to our online guide for cutting openings into the boot liner at ;
http://www.hatchbag.us/blog/cutting-openings-into-boot-liner/
(Image M)

IMAGE M

OPTIONAL EXTRAS

Please note the following photos are not specific to your vehicle

STEP 5A. LIFTGATE COVER

Line up the tailgate cover with the liftgate and clean the areas where the self-adhesive fastener tabs will be stuck. (Image 1)

- Use the self-adhesive loop fastener tabs to attach the cover to the plastic trim.

STEP 5B. BUMPER FLAP

- Install Cargo liner
- Attach the Bumper Flap to the loop fastener strip located at the base of the boot liner. (Image 2)
- The Bumper Flap is one standard length for all models. Trim the length to suit your requirements. Ensure you do not cut through the stitching.
- The Bumper Flap either folds into the vehicle OR can be detached and stored elsewhere when you close the liftgate.

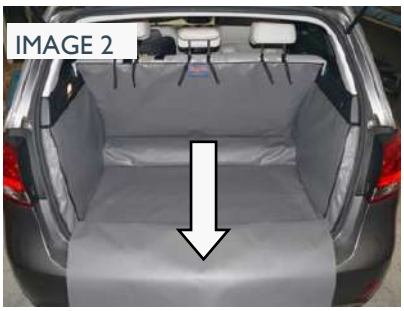

STEP 5C. CARGO LINER EXTENSION

The Cargo Liner Extension offers superior protection to the rear seats when purchased with a REAR PLUS option.

- The Cargo Liner Extension is designed to attach to a Rear Plus version liner.
- It provides additional protection to the back of the front seats and the extended floor area when the rear seats are folded flat.
- It does not offer full protection to the rear doors

The Bumper Flap and the Cargo Liner Extension cannot be added at a later date.