BMW X5

US H0913

2019 - present

Installation Kit Contents

- [ ] Cargo Liner
  - 2 x 180 / 20
  - 2 x 90 / 20
  - 2 x 180 / 50
  - 6 x tabs
- [ ] Liftgate Cover
  - 18 x tabs
- [ ] Cargo Liner Extension
  - 2 x tabs
- [ ] Drop Down Liftgate Cover
  - 1 x 2480 / 30

"quantity x length / width" in mm

*Please be aware that your cargo liner may be different depending on your options/extras selection

Before you install the cargo liner

To ensure the self-adhesive fasteners securely adhere, it's ***absolutely essential*** to thoroughly ***eliminate*** any ***silicone*** residues left from manufacturing and detailing processes.

To achieve this you will need a silicone remover. We recommend ***Autoglym® Instensive Tar Remover***

Preparations

-Ensure your cargo area floor and seats are set to match your order.

-Remove the cargo cover. It may be replaced later.

-Slide the seats as far back to the liftgate, if applicable.

1

Installation key

Where you find this symbol the cargo liner's hook fastener will attach directly to the carpet [1]

When this is not suitable, we provide self-adhesive loop fasteners to stick onto plastic/metal trim:

Where you find this symbol, follow these steps:

1) Apply *Autoglym® Intenisve Tar remover* generously to a cloth and scrub the highlighted surface areas.

2) Dry surface thoroughly with a separate cloth until it drags.

3) Test the surface by attaching one fastener tab - it should stick well, if not repeat previous steps[2]

Silicone is used during car manufacturing/detailing, it will interfere with the adhesion.

Tips:

- [1] If you frequently remove your cargo liner from your vehicle consider our ***Frequent Use Installation Kit*** to prevent carpet fluffing, available for purchase from our "Accessories" page.
- [2] If temperatures are low, run your car for a little bit so that the cargo area reaches room temperature or install your liner once you have been out for a drive.
- For optimal adhesion of the fasteners, do not remove the cargo liner for approx. 48 hours.

Notes:

- The adhesive fasteners ***cannot be used once they have been in contact with silicone.*** Replacement Installation Kits can be purchased from our accesories page.
- Adherence to the instructions will affect the performance of the Installation Kit. Please note *The Hatchbag Company* will not accept requests for free replacements if the adhesives come loose after use.

Refer to colour code in the first page Installation Kit Contents

2

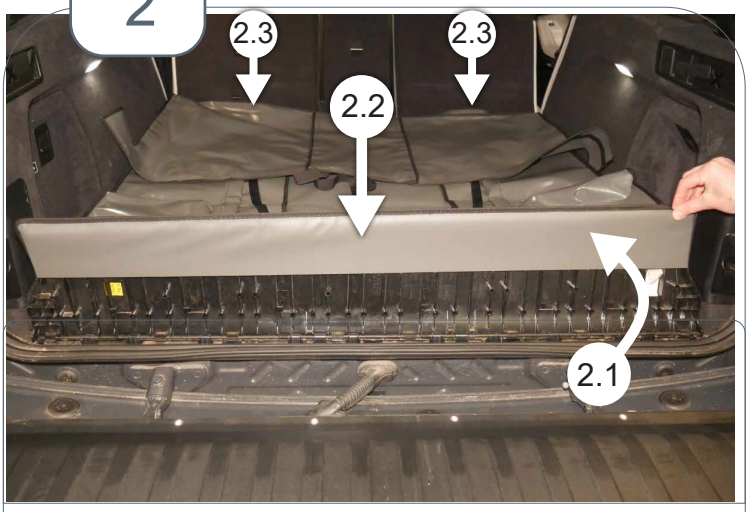

-Fold the rear seats in preparation for next step.

-Insert the tabs into the void between seat & base (2.3)

-Ensure the base is alligned to fit the cargo area edges.

3

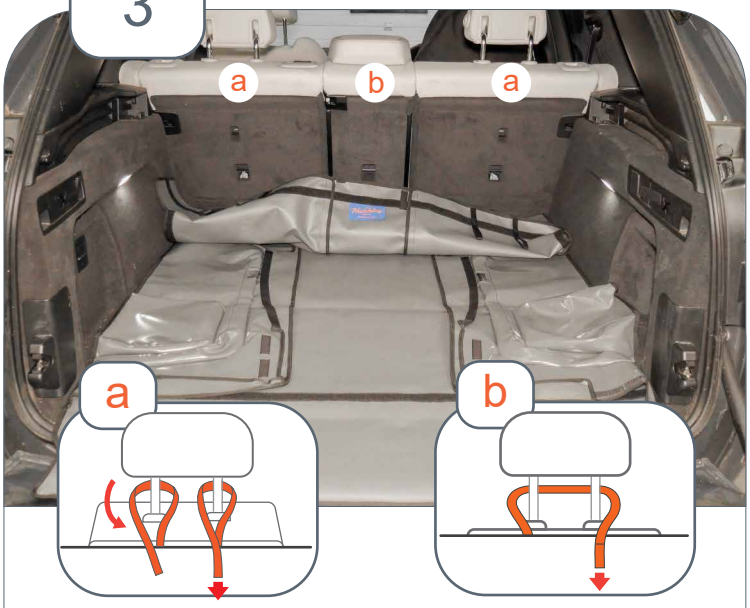

-Fasten the headrest straps without pulling the base off the floor.

If you want to fold the rear seats later, you MUST unfasten the headrest straps first!

4

*Please be aware that your cargo liner may be different depending on your options/extras selection

Tips:
- Commence installing from the liftgate end.
- For Rear Plus versions, fasten the side to the front panel from bottom to top

Optional extras

Note: not all the photos are specific to your vehicle

Bumper Flap

-Attach the Bumper Flap to the loop fastener strip located on the base of the cargo liner.

Liftgate Cover

-Line up the Liftgate Cover with the liftgate and clean the areas where the self-adhesive loop fastener tabs will be stuck.

-Begin with the central top and bottom fastener.

1. Attach the cargo liner extension to the main cargo liner.
2. Fasten the hook & loop fastener straps around the headrest posts.
3. Fasten the two ties in the corner together.
4. Attach the extension to the tabs.

Lower Tailgate Cover

-Line up the Tailgate Cover with the tailgate and clean the areas where the self-adhesive loop fasteners will be stuck.