Volkswagen ID. Buzz LWB -2024 - present

Our ref: H0944

FITTING KIT CONTENTS:

☐ CARGO LINER

- 2 x 800mm 50mm wide self-adhesive loop fastener

-SH1 ONLY

- 2 x 670mm 30mm wide self-adhesive loop fastener
- 2 x 430mm 30mm wide self-adhesive loop fastener
- 1 x tabs self-adhesive loop fastener

-SH2 ONLY

- 2 x 420mm 30mm wide self-adhesive loop fastener

☐ LIFTGATE COVER

- 25 x tabs self-adhesive loop fastener

LEFT: SH1 Rear Plus cargo liner prepped for a bumper flap.

RIGHT: SH2 Rear Plus with Seat Split cargo liner prepped for a bumper flap.

VERY IMPORTANT PREPARATION

To ensure the self-adhesive hook & loop fastener stick to the plastic trim, you MUST CLEAN all grime from the plastic and REMOVE all SILICONE applied during manufacture and valeting.

To do this please:

1. Use a silicone remover, such as AutoGlym Intensive Tar Remover, and apply generously to the surface you want to adhere to.
2. Using a separate clean, dry cloth, thoroughly dry the surface until the cloth starts to drag. Attach one self-adhesive fastener tab to see if it sticks. (Repeat steps 1 and 2 if necessary.) Extra tabs have been provided.
3. Attach the self-adhesive fasteners and let them fully adhere over the next 24 hours for the best bond.

**The self-adhesive fasteners cannot be used once they have been in contact with silicone. Replacement kits are available on our website.*

STEP 1. PREPARATIONS

- Remove the cargo cover. It may be replaced later.
- Slide the seats as far back to the tailgate as possible
- Set the 2nd row seat back angle to the mid rake (Image A)
- Put the headrests in their highest position. (Image A)

Image A

STEP 2. FITTING THE BASE

- Place the cargo liner into the cargo area with the Hatchbag logo at the seat end. Flatten the base so it fits snugly against the edges. The hook fasteners on the underside attach directly to the carpet. (Image B)

Image B

STEP 3. FITTING THE FRONT

- PLUS / SPLIT VERSION ONLY - Fasten the hook & loop fasteners between the side panels and the seat panel. (Image C)
- Starting with the middle headrest, fasten the hook & loop fastener straps around both headrest posts. (Image D). Make sure to hold the front part of the base in position to avoid pulling the boot liner too far up. Repeat the procedure with the left and right headrests.

Image C

Image D

REAR PLUS VERSIONS

You MUST unfasten the hook & loop fasteners and the headrest straps before you recline the upper part of the rear seats. *(Please refer to REAR PLUS / SPLIT options on website to see detailed photo.)*

STEP 4. FITTING THE SIDES

- On both sides of the trunk stick the following loop fasteners in line with the hook fasteners sewn & welded on the reverse side of the cargo liner as highlighted on Image E.
  - Green *800 mm loop fastener*

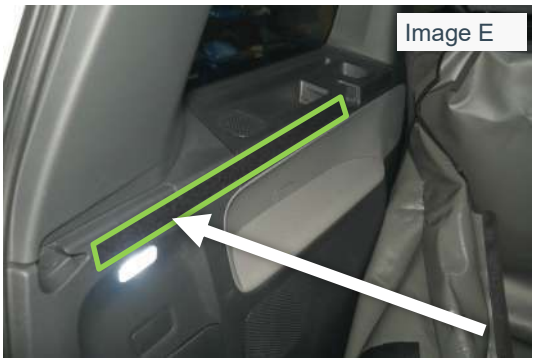

- Fasten the hook fastener sewn onto the top and back edge on both sides of the cargo liner directly onto the previously attached loop fasteners.

STEP 5. FITTING THE BACK

SH1 ONLY

- On both sides of the trunk stick the following loop fasteners in line with the hook fasteners sewn & welded on the reverse side of the cargo liner as highlighted on Image F
  - Pink *670 mm loop fastener*
  - Yellow *470 mm loop fastener*
  - *Orange 1 loop fastener tab*

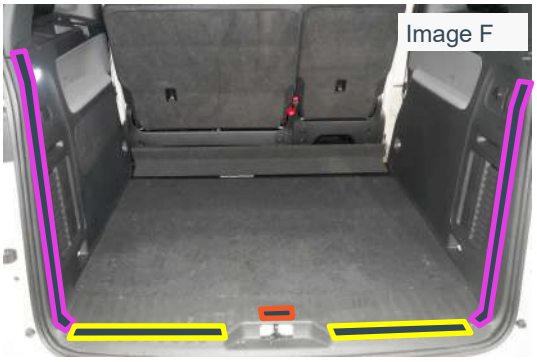

- If necessary snip the self-adhesive fastener strips at the corners to ease around the curves.
- Fasten the hook fastener sewn onto the top and back edge on both sides of the cargo liner directly onto the previously attached loop fasteners.

SH2 ONLY

- On both sides of the trunk stick the 420mm loop fasteners in line with the hook fasteners sewn & welded on the reverse side of the cargo liner as highlighted on Image G
- The lip on the floor panel of the cargo liner attaches directly to the carpet on the under side of the Multiflex board. (Image H)

OPTIONAL EXTRAS

Please note: the following photos are not specific to your vehicle.

STEP 5A. LIFTGATE COVER

- Line up the tailgate cover with the tailgate and clean the areas where the self-adhesive loop fastener tabs will be stuck. (Image 1)
- Use the self-adhesive loop fastener tabs to attach the cover to the plastic trim.

Image 1

STEP 5B.BUMPER FLAP

- Fit the boot liner
- Attach the Bumper Flap to the loop fastener strip located at the base of the boot liner. (Image 2)
- The Bumper Flap either folds into the vehicle OR can be detached and stored elsewhere when you close the tailgate.

Image 2

OPTIONAL EXTRAS PAGE 2

Please note: not all of the photographs are specific to your vehicle.

STEP 6D. CARGO LINER EXTENSION

The cargo liner extension provides superior protection for the rear seats when purchased with a REAR PLUS option.

- The cargo liner extension is designed to attach to a Rear Plus/Split version liner.
- It provides additional protection for the back of the front seats and the extended floor area when the rear seats are folded flat.
- It does not offer full protection to the rear doors
- Attach the cargo liner extension to the main cargo liner (Image 6)
- Fasten the two ties in the corner together (Orange arrows - Image 7)
- Fasten the hook & loop fastener straps around the headrest posts. (Blue arrows - Image 7)
- Stick 1 self-adhesive loop fastener tab to the position shown by the green arrow - Image 8
- Attach the corresponding hook fastener welded on to the reverse side of the extension to the fastener tab previously placed.
- Repeat on opposite side

Image 6

Image 7

Image 8

Please Note: the Bumper Flap & the Boot liner Extension cannot be added at a later date.

STEP 6E. FREQUENT USE KIT

- If you frequently remove/install your boot liner from/to your vehicle, please note that the carpet will “fluff” up – we offer an alternative Frequent Use Fitting Kit. These tabs are placed between the boot liner and the boot carpet.(Image 9 & 10)

The Frequent Use Kit is an accessory available to purchase from our on-line store.

Image 9

Image 10