THE Hatchbag COMPANY

FITTING INSTRUCTIONS

hatchbag.co.uk

RANGE ROVER SPORT

2005 to 2012 (Facelift 2012 on)

Our Ref: H0389

REF: 107

REF: 133

Packing requirements

☐ BOOT LINER
2 x 730mm cut length of 20mm wide loop fastener
2 x REF 133 – length: 730mm
Plastic/loop fastener clips ref: 107 X 8
Minimum of 8 self-adhesive loop fastener pads

☐ REAR DOOR COVER
Minimum of 24 self-adhesive loop fastener tabs

PREPARATION

- Remove the load cover cassette; it may be replaced later.

VERY IMPORTANT PREPARATION

To ensure a good bond, when using the self-adhesive loop fastener to attach the boot liner to the plastic / metal trim (**Not** the carpet); it is most important to remove silicone film from the vehicle trim. Silicone is applied during manufacture and can also be found in many valeting products. It is **highly likely there will be a build-up of silicone**. Before applying any loop fastener pads, the surface **MUST be thoroughly** cleaned using a silicone remover. (The hook & loop fastener cannot be used once it has been in contact with silicone). We recommend "Intensive Tar Remover" made by AutoGlym and available from Halfords. Wipe off thoroughly **any residue with a separate clean dry cloth.**

NOTE**:** the adhesive takes 72hrs to reach full adhesion, do not disturb during.

FITTING

BASE

- Place the boot liner in the boot, and unfold. The panel with the Hatchbag label will sit against the back of the rear seat.

- Locate the under flap sewn into the tailgate end of the base panel. This sits over the leading edge of the lift up floor section. Position snugly into place and using the small self-adhesive hook fastener pads attach to the underside of the floor.
- Position base of the liner snugly into place and attach the three ties to adjacent luggage tie down hooks.

Some photos are non-specific to this vehicle

FRONT

- Hook & loop fastener straps align to headrests.
- Pass around each post and fasten close back onto themselves.

REAR PLUS VERSIONS

- YOU MUST UNFASTEN THE HOOK & LOOP FASTENER + THE HEADREST STRAPS BEFORE YOU FOLD THE REAR SEAT UPPERS Please refer to REAR PLUS options on website to see detailed

SIDES

- PHOTO A+B.
  Attach the two long lengths of 20mm wide self-adhesive loop fastener to the UNDER FACE of the plastic trim. You will need to snip the loop fastener in a couple of places to get it to lie nice and flat.
  PS don't forget to remove any Silicone

Note: the loop fastener will wrap up and over the edge towards the front end.

- PHOTO C.
  Now attach the two REF:133 loop fastener flaps.
- PHOTO D
  Finally attach sides to the flaps.

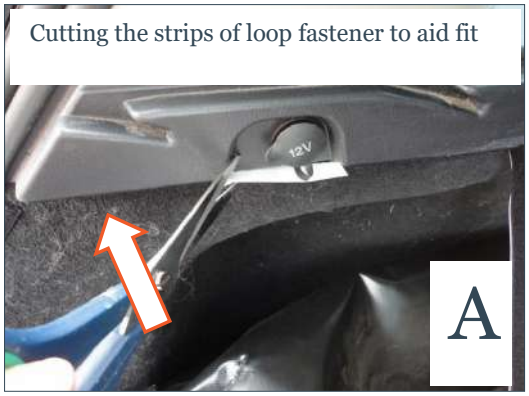

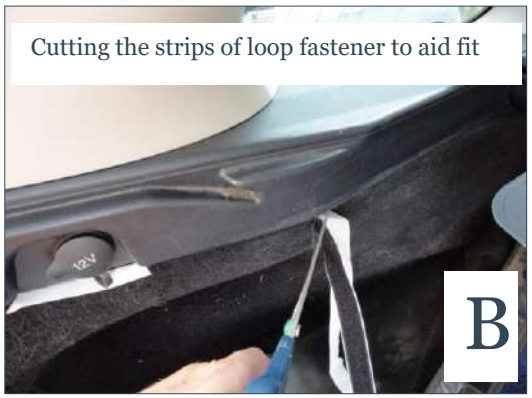

SIDES cont……..

The four hook fastener welds along the vertical edge of the side panel require you to attach the plastic/loop fastener clips (ref 107) to the vehicle as follows.
Pull back the rubber seal to expose the top corner of the carpeted panel. Starting at the top: Slide on the plastic clip and reposition to align with the hook fastener welds on the liner sides.
The liner is to be fasten closed to this fixing.
(Please note this photo is nonspecific to your vehicle)

BUMPER FLAP

- Attach the Bumper Flap to the loop fastener strip that has been manufactured into the base of the boot liner.
- The Bumper Flap either folds into the vehicle OR can be detached and stored elsewhere when you close the tailgate.
- Please note that the edges of the fabric are not bound so that any mud, dirt or water can run off.

Photos are non-specific to this vehicle

OPTIONAL EXTRAS

Photos are non-specific to this vehicle

TAILGATE COVER

Use the self-adhesive loop fastener tabs to attach the cover to the plastic trim.

SEAT FLAP

The Seat flap is designed to protect the top of your rear seat giving additional protection from drooling dogs etc.
The Seat Flap can also be used in conjunction with the Rear Plus Option(s). With the rear seats in the folded position the Seat Flap extends the coverage over any exposed section of the seat backs and the headrests
Attach the Seat Flap to the loop fastener strip that has been manufactured into the boot liner just below the top of the rear seats. The flap is then placed over the rear head rests and down the back of the passenger seats.
If the Seat Flap sits over large headrests and obstructs your rear view: carefully create openings in the flap to accommodate the headrest posts.